




Exterior OA-FLEX T

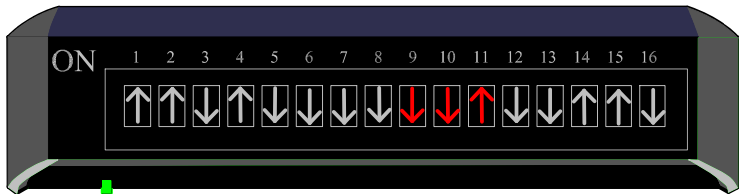

- Notes:
1. Verify proper door operation prior to final connection of sensors.
 2. Clip the JP200 jumper wire on the MC521 Pro, located between the two encoder connectors.
 3. Enable monitoring with pushbuttons: Select Index = 19. Select Value 3
 4. Enable monitoring with Android: In the Main Selection press Configure Door Manual.
Go to Funtion Safety Logic. Select =Monitored Sensors.
 5. Dipswitch 9,10 must be OFF (down) & Dipswitch 11 must be ON (up) for proper monitoring operation.
 6. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

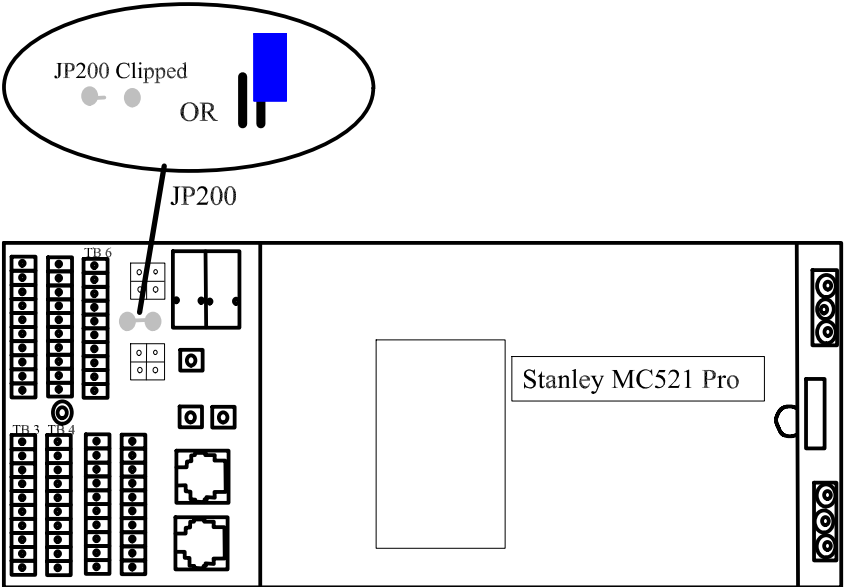

Interior OA-FLEX T

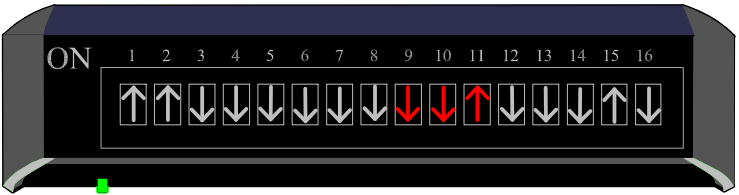

Title: 16300210 Stanley MC521 Pro with OA-FLEX T		Drawing # 16300210
Drawing By: JCK	Date: 5/9/16	Sheet: 1 of 1
OPTEx Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		