



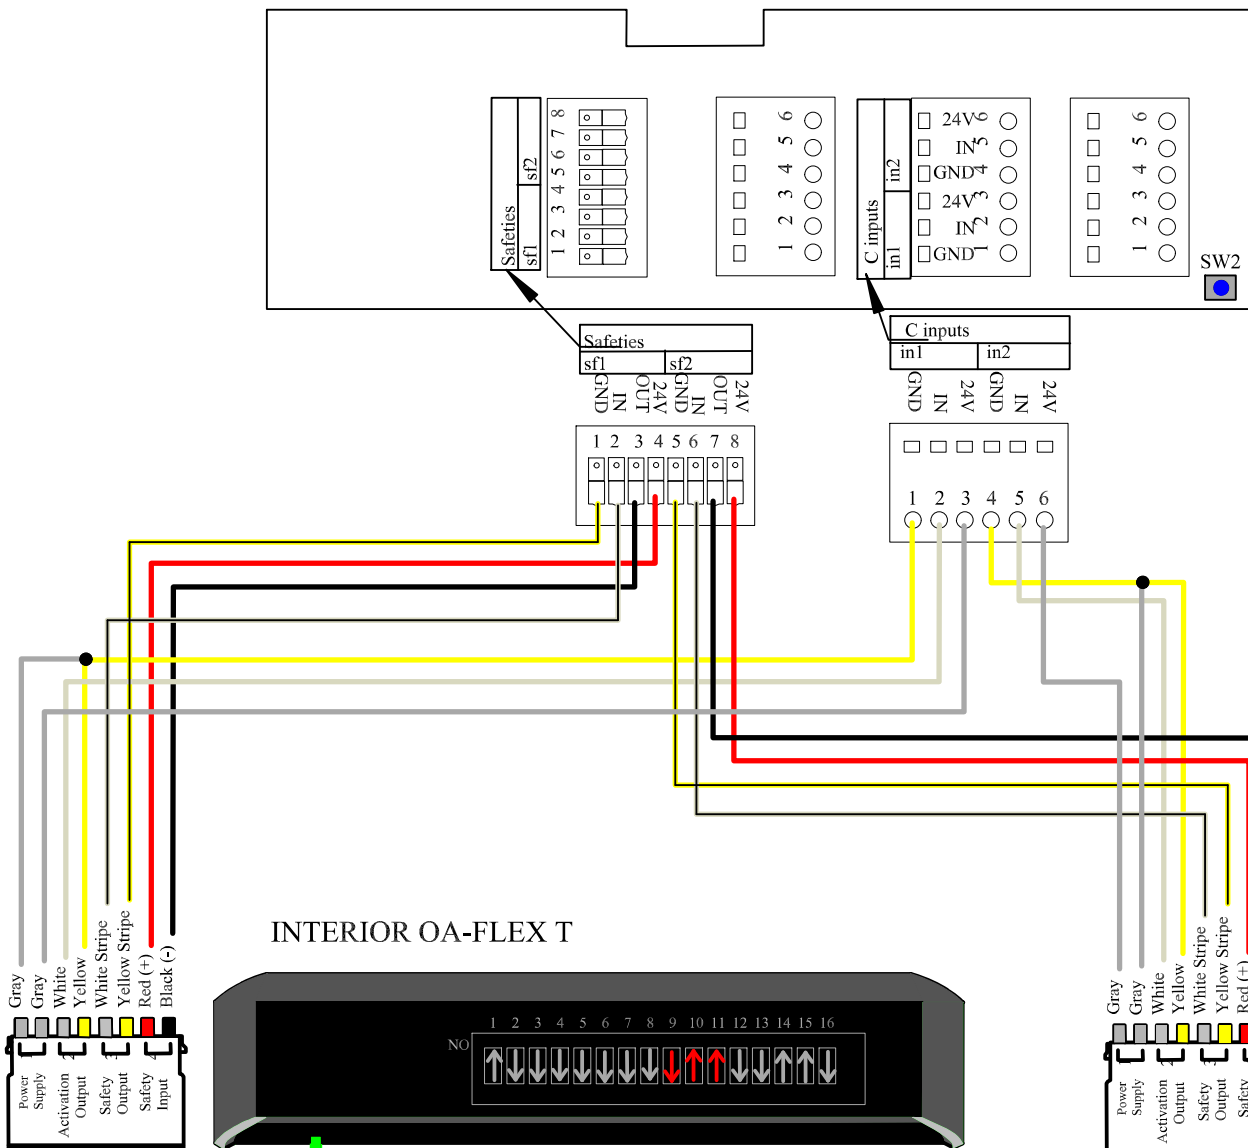

Notes:

1. Verify proper door operation prior to final connection of sensors.
2. Perform an Auto Configuration with code 021 or 022 or the SW2 button
3. For proper monitoring operation set dipswitch 10 & 11 ON (up) and dipswitch 9 OFF (down).
4. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

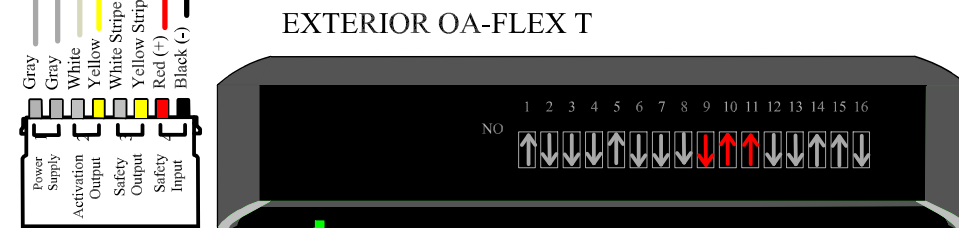

Title: 16300260 Tormax iMotion 2301 & 2401 with OA-FLEX T		Drawing # 16300260
Drawing By: RNG	Date: 5/31/16	Sheet: 1 of 1
Optex Technologies Inc. 18730 South Wilmington Ave. Suite 100 Rancho Dominguez, CA 90220 Office: (800)877-6656, Fax: (310)898-1098		