



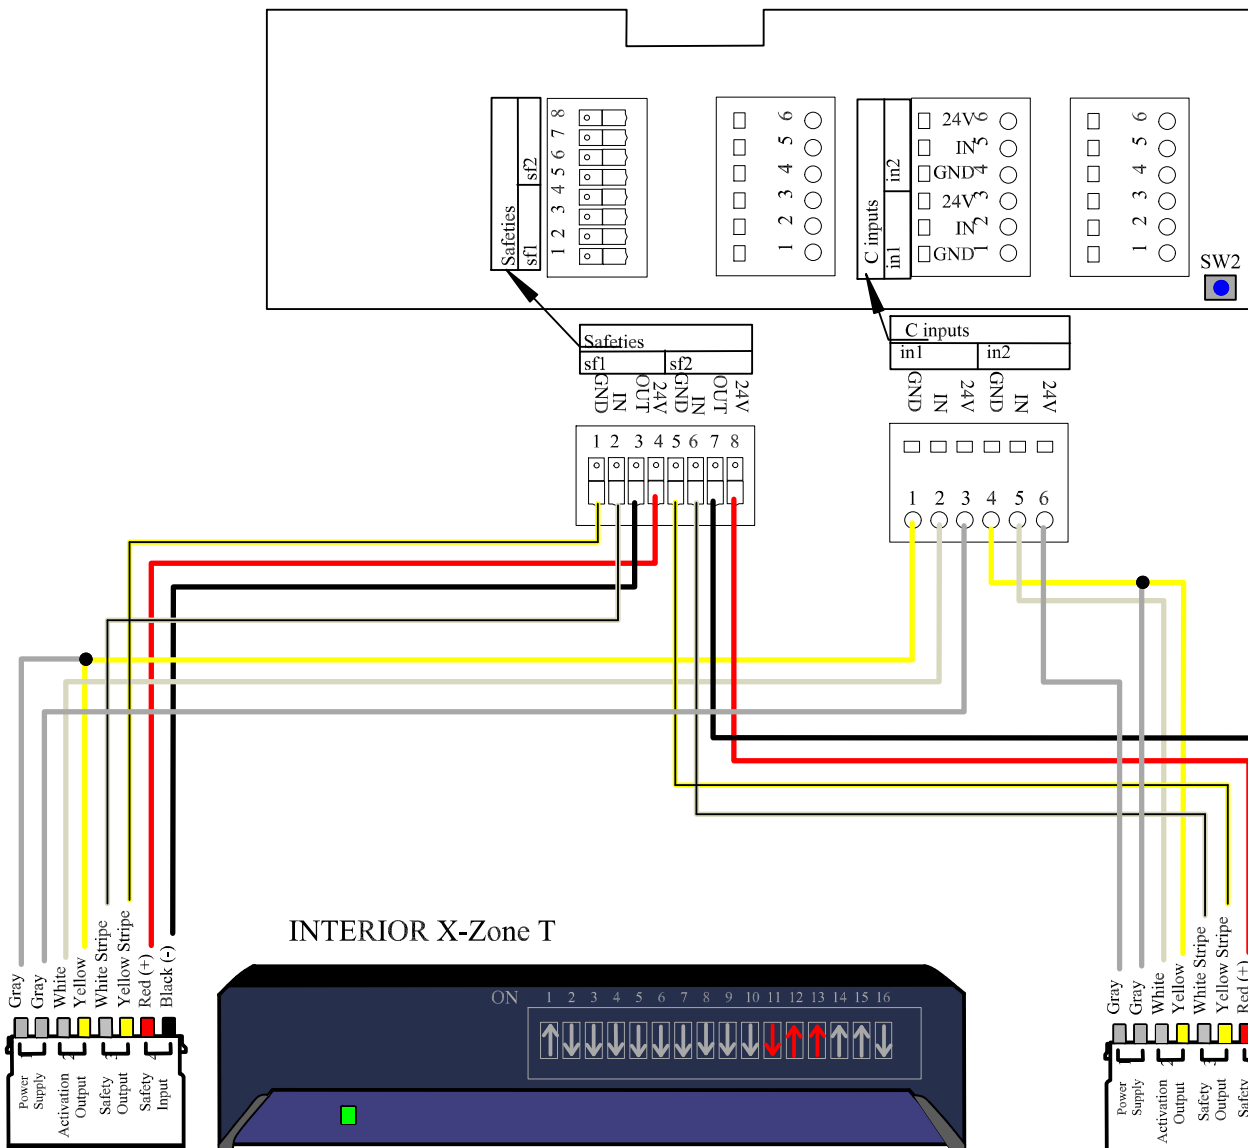

Notes:

1. Verify proper door operation prior to final connection of sensors.
2. Perform an Auto Configuration with code 021 or 022 or the SW2 button
3. For proper monitoring operation set dipswitch 12 & 13 ON (up) and dipswitch 11 OFF (down).
4. Technician must perform a field test to verify substantial compliance with ANSI/BHMA A156.10 Section 8.

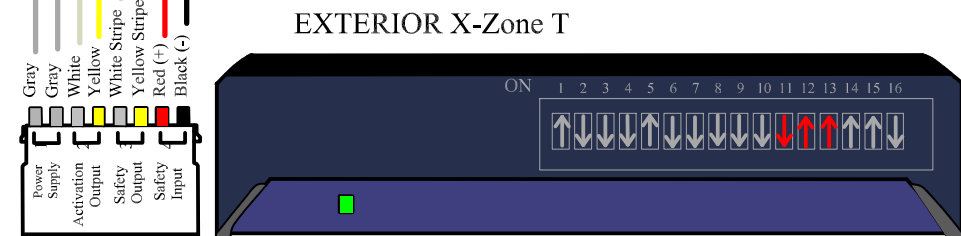

Title: 16300060 Tormax iMotion 2301 & 2401 with X-Zone T		Drawing # 16300060
Drawing By: RNG	Date: 5/31/16	Sheet: 1 of 1
OPTEX Technologies Inc. 18730 S. Wilmington Ave. Unit 100 Rancho Dominguez, CA. 90220 800-877-6656 FAX 310-898-1098		