



W
▲

CARLOTTA 65


To see the
assembly video
scan this QR code:

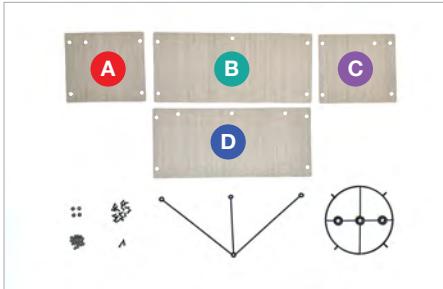


1.

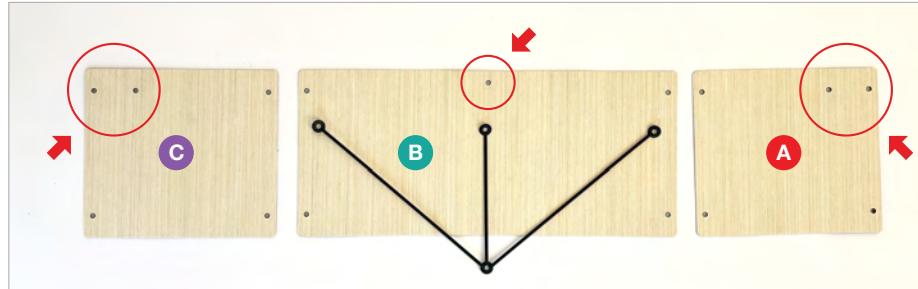


2. Place pieces C, B, and A with the interior side up. Pay attention to the position of the holes.

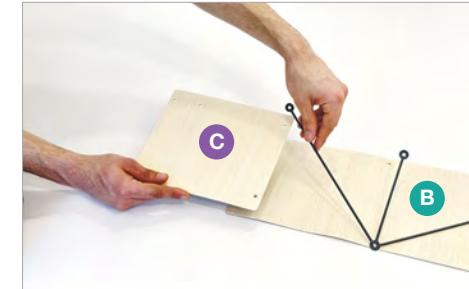


3. Put piece C on top of piece B and place the rods above.

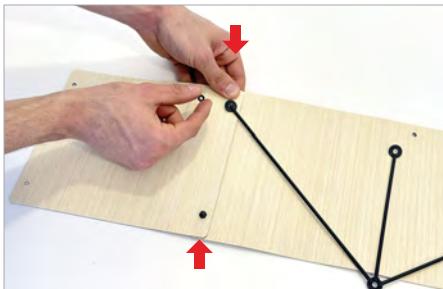


4. Pass the short screw from the bottom up and screw in the small nut. Don't tighten the nut fully in the top hole.

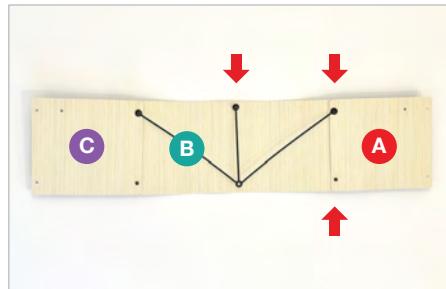


5. Put piece A on top of piece B and repeat the previous steps. Don't tighten the nut fully in the top hole.

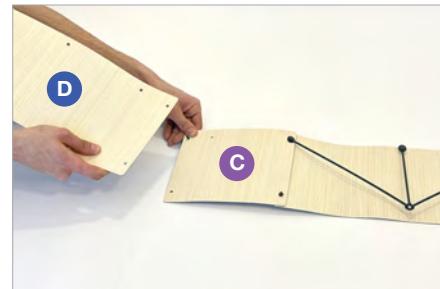

6. Place piece D on top of piece C.

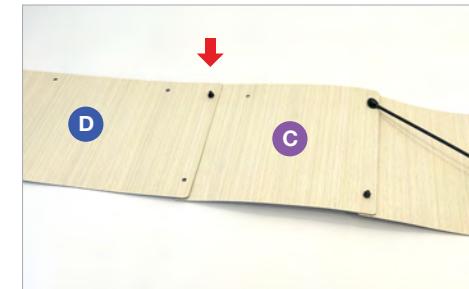


7. Pass the short screw from the bottom up and screw in the small nut. Only the top hole.

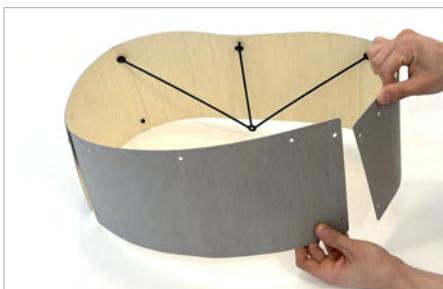

8. Lift the pieces and form a circle.




9. Pass the short screw from the outside in and screw in the small nut. Only the top hole.

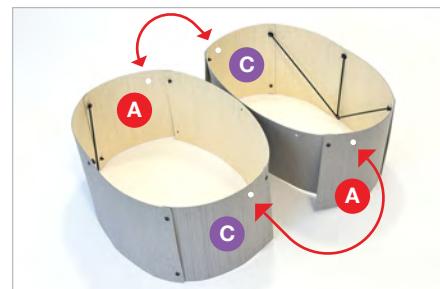

10. Repeat all the steps with the remaining pieces. Place both circles facing each other as in the picture. Join the top holes of pieces A and C with screws and nuts.




11. Pass the short screw and screw in the small nut.

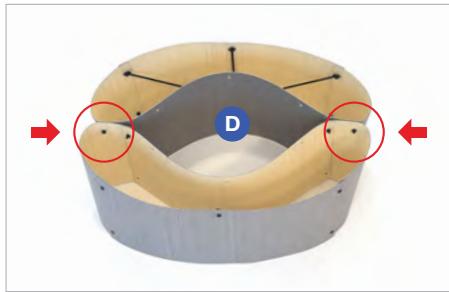

12. Repeat the same on the other side.



13. Pass the short screw through the 4 layers of wood and tighten it with the small nut.

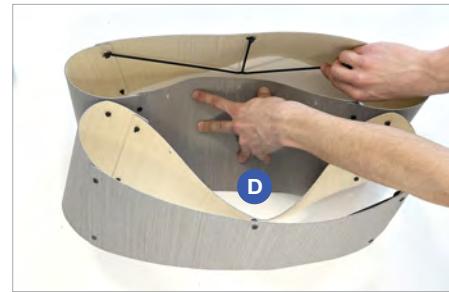

14. Push piece D downwards.




15. Take the rod and place it on top of piece D.



16. Pass the long screw and screw in the small nut.



17. Repeat the same on the other side.




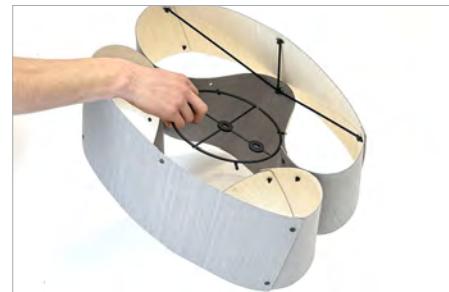


18. Place the ring in the holes and screw in the metal ends using the big nuts.



19.

PARTS

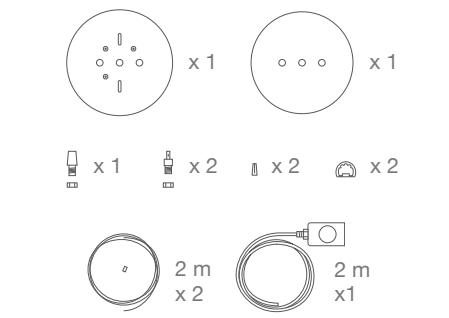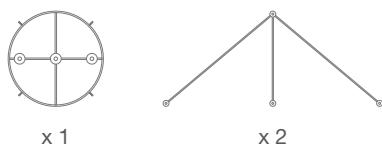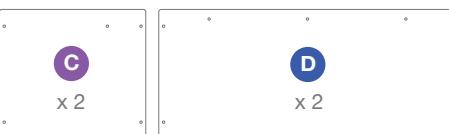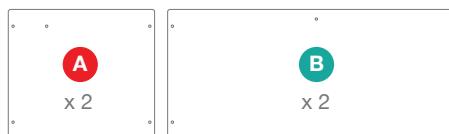

MEASURES

L 65 cm / 25.5 in

W 62 cm / 24.4 in

H 43 cm / 16.9 in

BULB 100 w max.



This product requires professional installation.
Please contact a certificate electrician.