


CLARISSA MODULO


D 170

WEPLIGHT
^ A R G E N T I N A

© 2014 Weplight S.A. All right reserved.

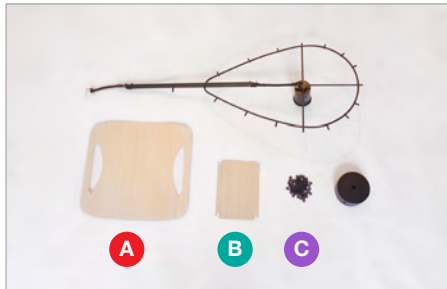

1. Verify all parts.

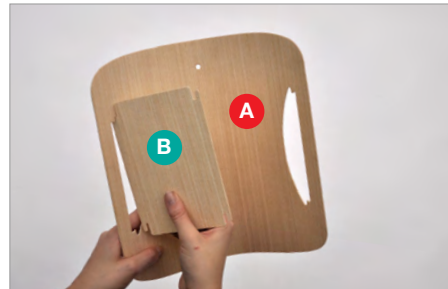


2. Insert B on top back of A. Verify hole on top.



3. Insert B down forward of A.



4. Push top side forward.

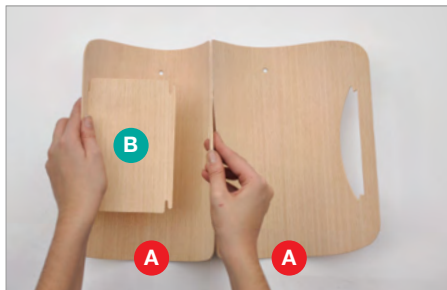

5. Insert B in both A simultaneously.




6. Insert B on top back.



7.



8. Insert B down forward.

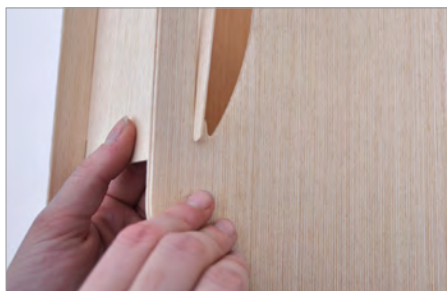

9. Verify that all corners of B are installed forward.



10. Repeat previous steps.
Always assemble next part behind previous part.



11.




12.



13.



14.

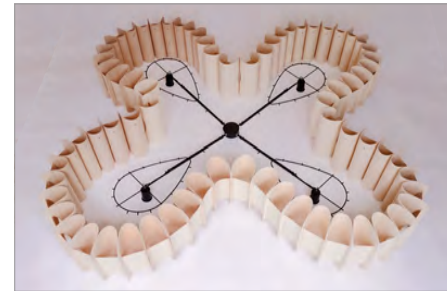

15.




16.



17. Insert rubber rings.


x 4

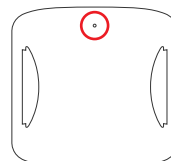


A One top Hole
x 72



B x 72



x 1



x1

 x 1 x 1

x 2



$\times 4$



x 5


$$\begin{pmatrix} 2 \\ x \end{pmatrix}$$


2 m

L 140 cm / 55.1 in

L 140 cm / 55.1 in

H 28 cm / 11 in

BULB 100 w max. (4)



This product requires professional installation.
Please contact a certificate electrician.