



W
▲

VICTORIA 95

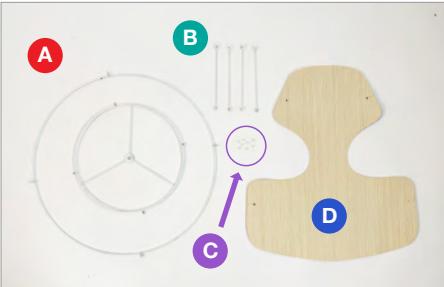


1.

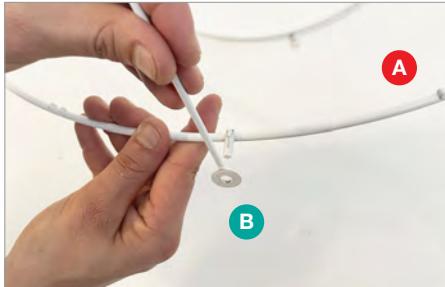

2. Insert the hole of the rod (B) into the lower ring (A).



3. Place a NUT (C).

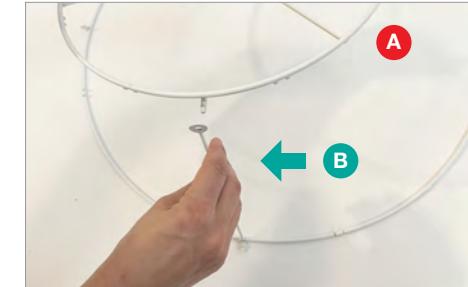


4. Insert the hole of the rod (B) into the upper ring (A).



5. Place a NUT (C).



6. Repeat steps 2 through 5.

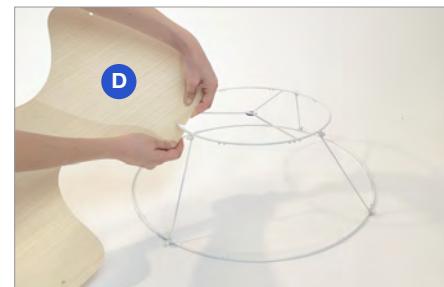

7. Place the top of piece D on the top ring.




8. You can fold the piece in this way.




9. Place the bottom of piece D on the bottom ring.




10.

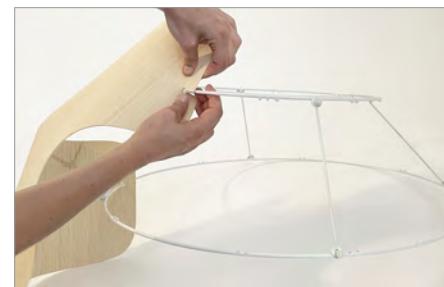


11. Place the top of piece D on the top ring.

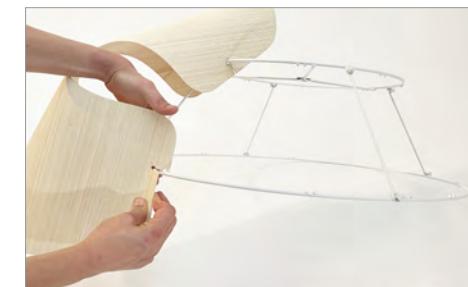

12. Place the bottom of piece D on the bottom ring.

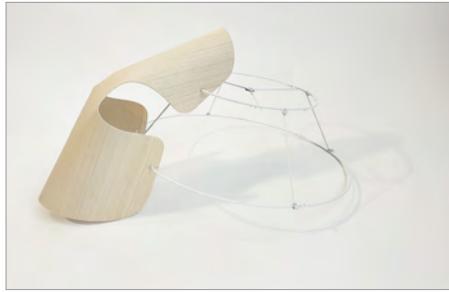

13.

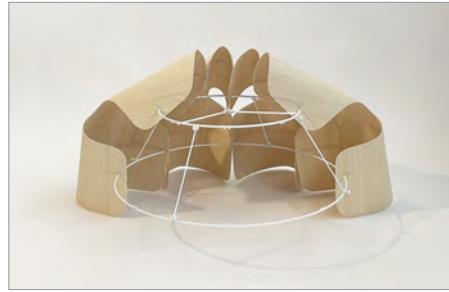


14. Repeat steps 6 through 11.




15.


PARTS

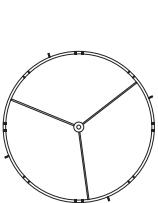

x 1

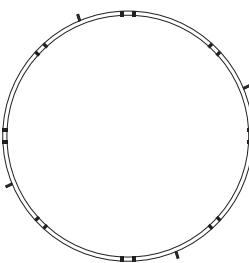

x 1

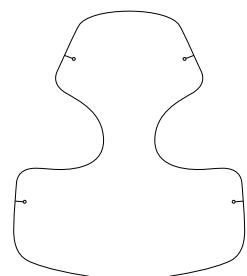


x 8



x 4

Nuts
x 8

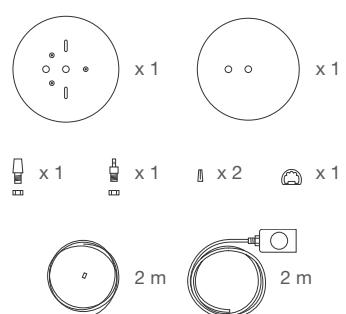

MEASURES

D 95 cm / 37.4 in

H 46 cm / 18.1 in

BULB 100 w max.



This product requires professional installation.
Please contact a certificate electrician.