




INSTALLATION INSTRUCTIONS

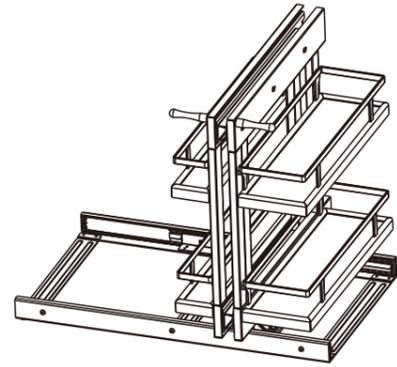

RA-C803-9

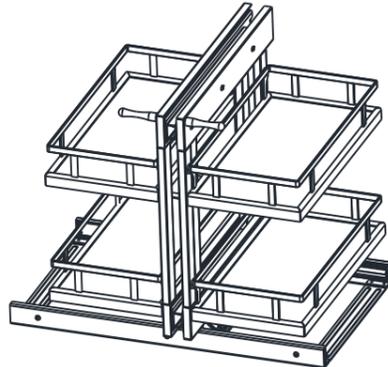


RA-C803-15

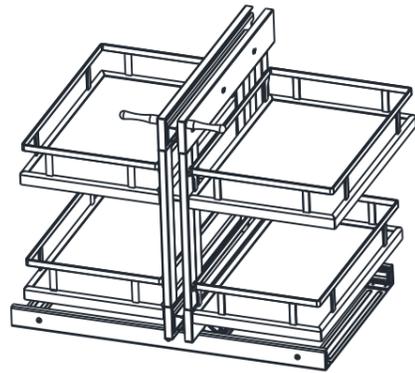

RA-C803-18

TOOLS REQUIRED:

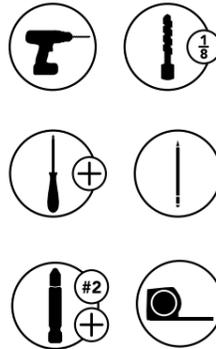

PRECAUTIONS:

A. Check the packing and make sure you have all the parts & fitting listed.

B. When you are ready to start, make sure that the right tools to hand, plenty of space dry area for assembly.


VISIT THE OFFICIAL WEBSITE



www.rutahardware.com

ACCESSORY LIST:

No.	DESCRIPTIONS	Qty
A	Frame	1
B	Frame	1
C	Handle	2
D	Basket	4
E	M5*8 Screw	4
F	M4*8 Screw	2
G	St4* Screw	8


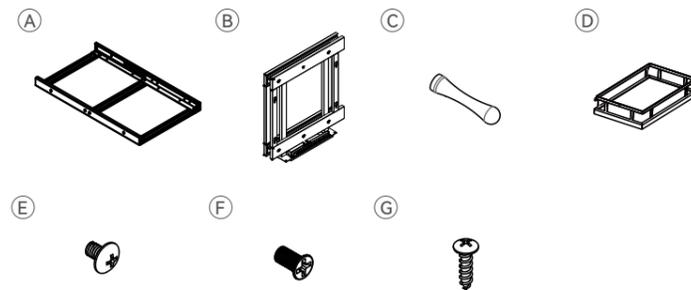


STEP 01

Check the size of the cabinet as shown.





Min. Dimensions			
NO.	W	K	D
RA-C803-9	Min [36"]	Min [9"]	Min [3 9/16"]
RA-C803-15	Min [42"]	Min [15"]	Min [6 7/8"]
RA-C803-18	Min [45"]	Min [18"]	Min [7 1/2"]

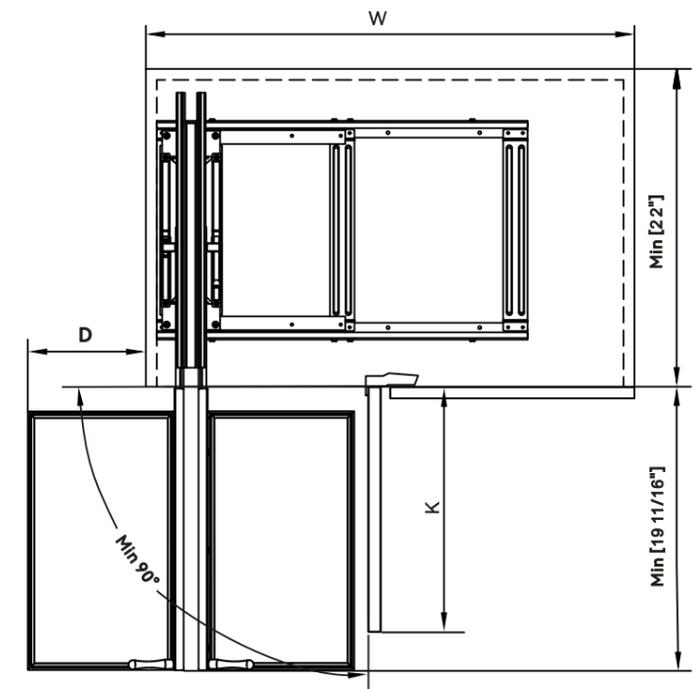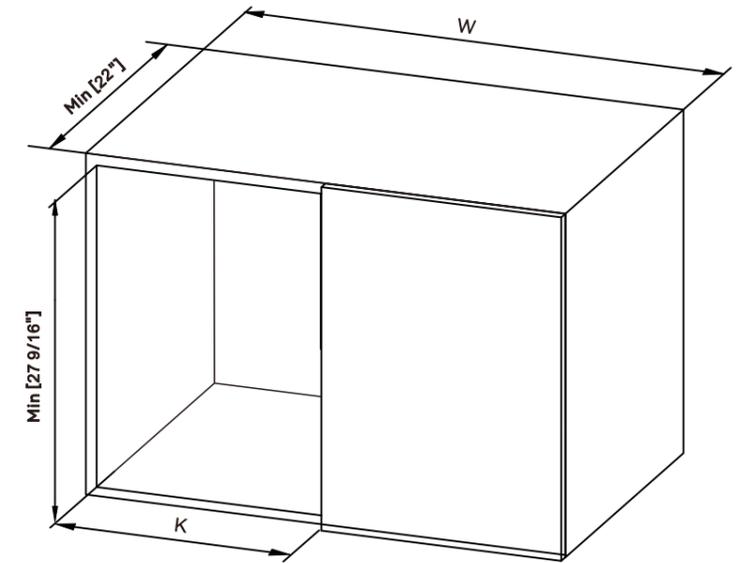




STEP 02

Make a line on the bottom of the cabinet as shown.

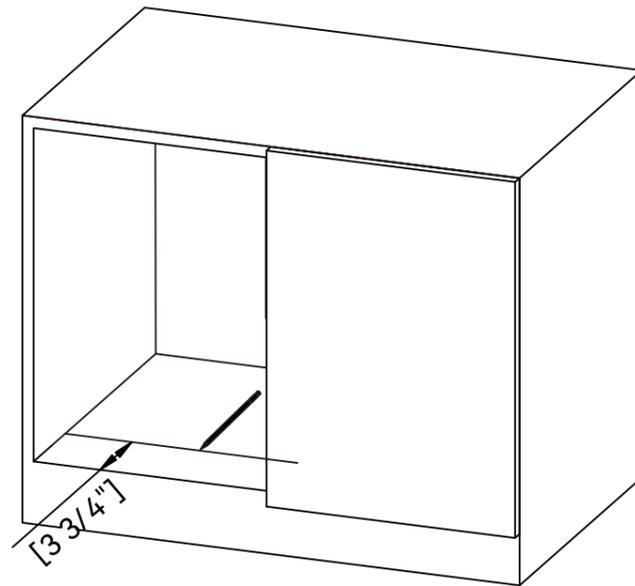



STEP 03

Put the frame (A) into the cabinet.
Align the screw holes with the line drawn.
Fix frame using 8 pcs screws (G) as shown.

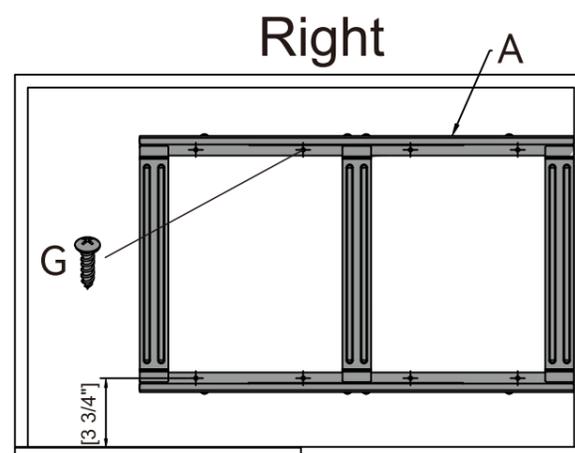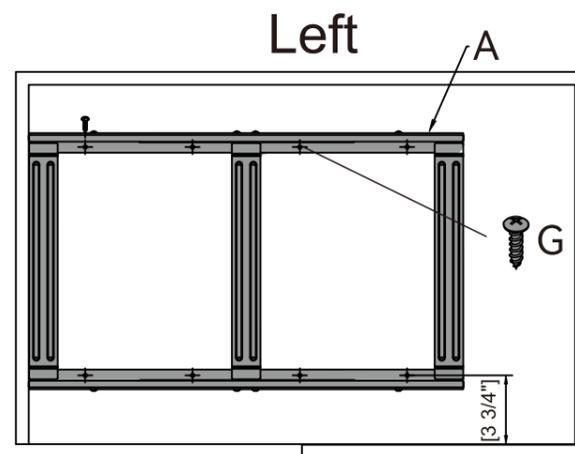



STEP 04

Install the frame (B) to the frame (A) with 4 pcs screws (E) as shown.

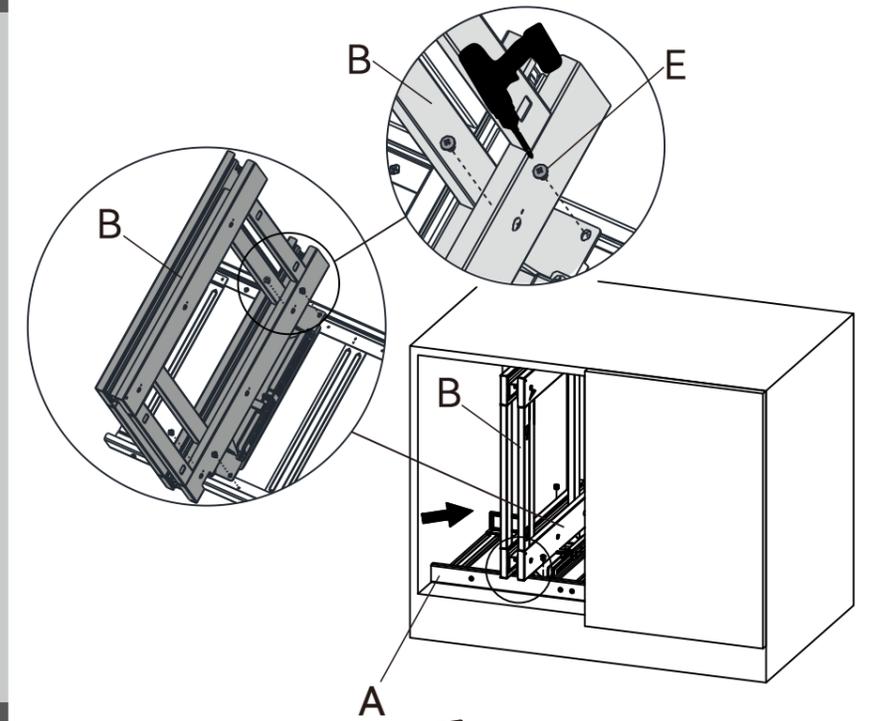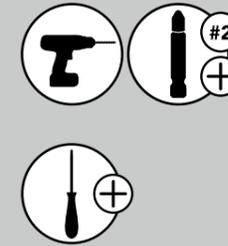

STEP 05

Install the handle (C) using 2 pcs screws (F) as shown.

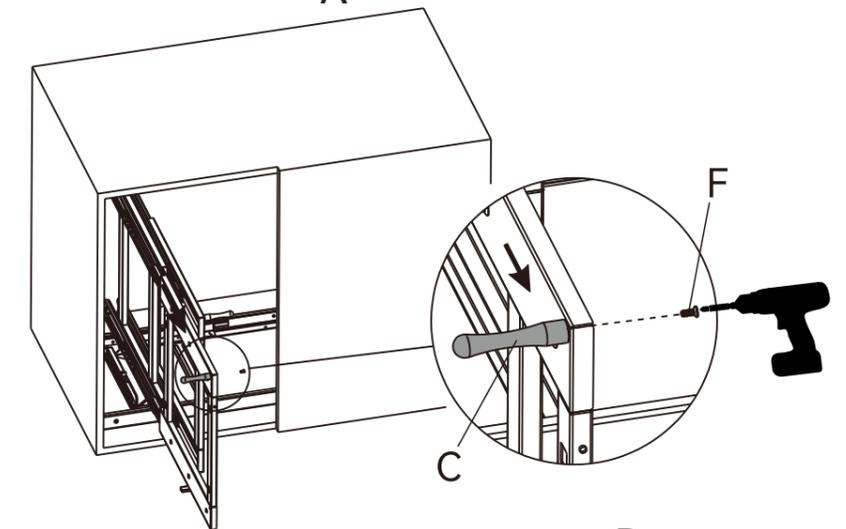

STEP 06

Install the basket (D) to the frame (B) as shown.

