



# INSTALLATION INSTRUCTIONS

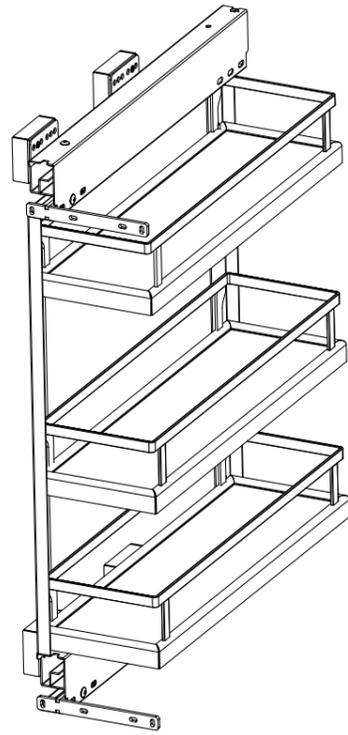

RA-N838-L/R-6-3  
 RA-N838-L/R-9-3

### TOOLS REQUIRED:

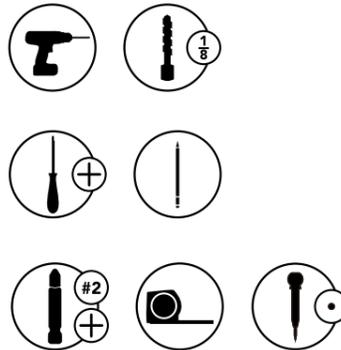

### PRECAUTIONS:

- A.** Check the packing and make sure you have all the parts & fitting listed.
- B.** When you are ready to start, make sure that the right tools to hand, plenty of space dry area for assembly.


VISIT THE OFFICIAL WEBSITE



www.rutahardware.com


### ACCESSORY LIST:

No.	DESCRIPTIONS	Qty
A	Frame	1
B	Basket	3
C	Sliders	2
D	Supporter	4
E	Only for 9" cabinet M4*6 screw	8
F	ST4*35 screw	8
G	Only for 6" cabinet ST4*18 screw	8
H	M4*6 screw	2
I	Connector	2
J	ST4*18 screw	8
K	Template	1

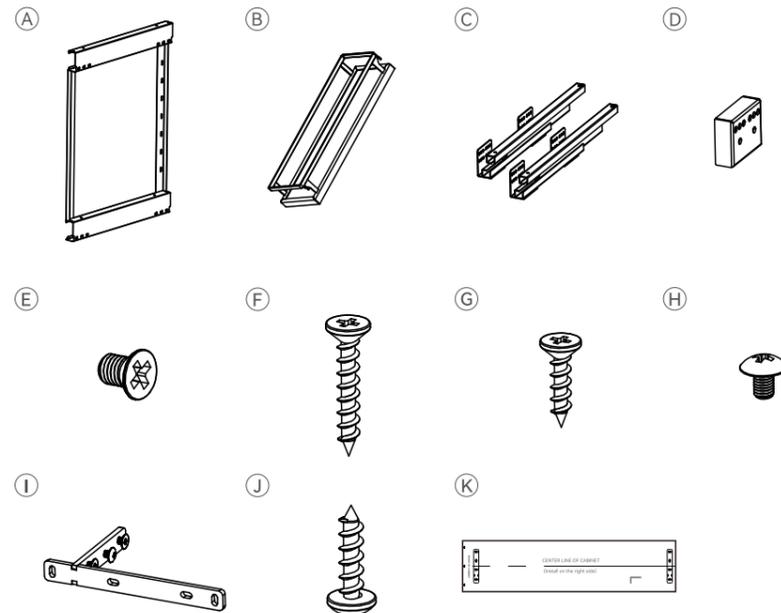

### STEP 01



Check the size of the cabinet as shown.

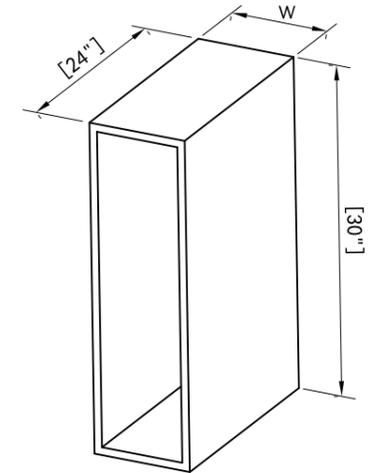

NO.	W
RA-N838-L/R-6	6"
RA-N838-L/R-9	9"



### STEP 02

Determine the dimension as shown.

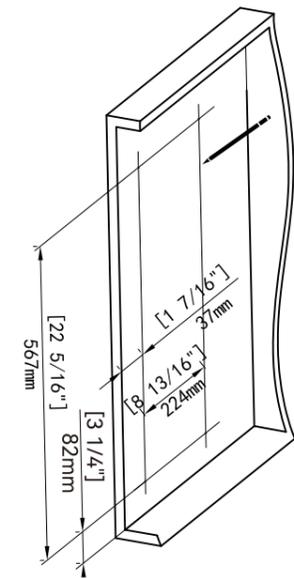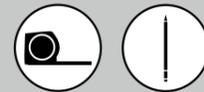


(6" cabinet)

Fix the slider (C) as shown using 8 pcs screws (G) to the 6" cabinet.

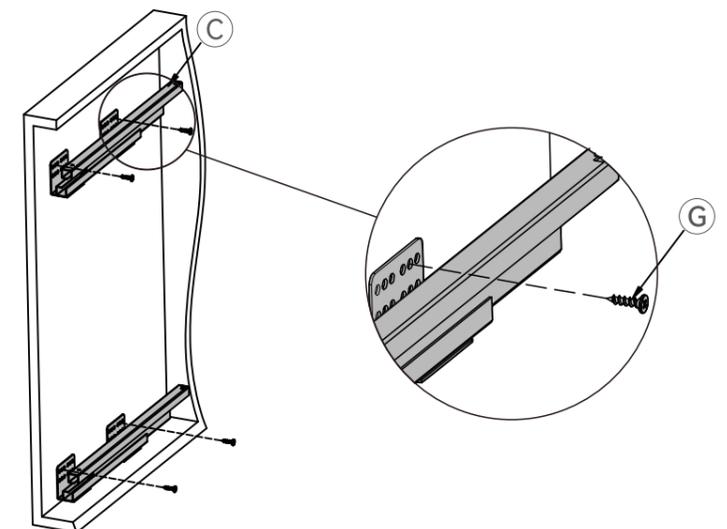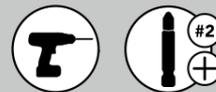



Install slider(C) to the supporter (D) using 8 pcs screws (E) and 8 pcs screws (F).

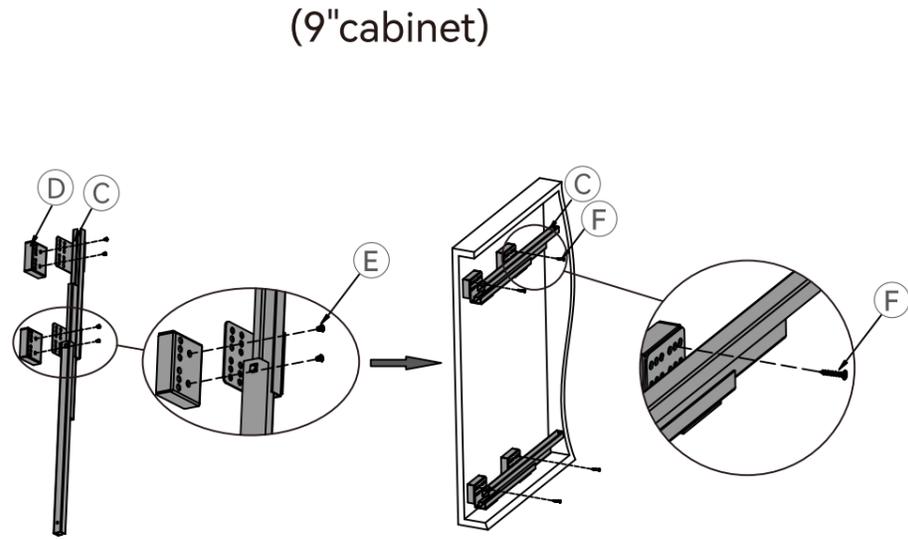

(9" cabinet)



### STEP 03

Install the frame(A) to the sliders (C) using 2PCS screws (H) as shown

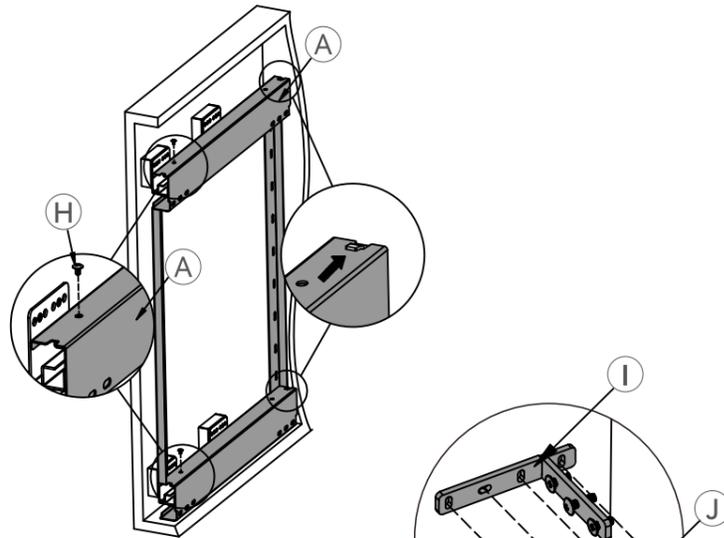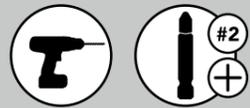

### STEP 04

Using the template (K) determine the connector (I) hole position as shown. Fix the connector (I) to the door using 8pcs screws (J).

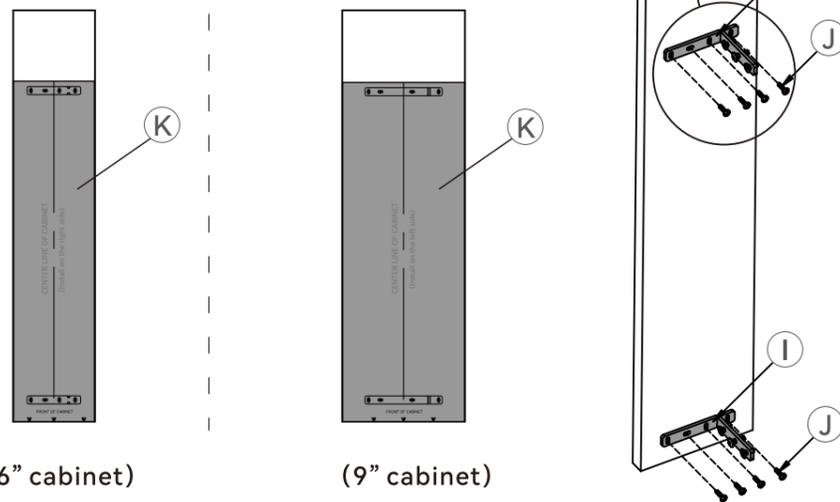
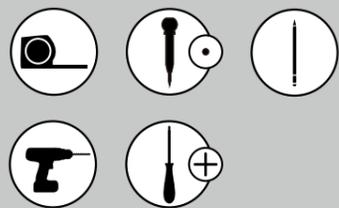


(6" cabinet)

(9" cabinet)

### STEP 05

Attach cabinet door to the frame (A) while to keep door level as shown. You will be able to fully adjust door by loosening and positioning the screws (N & M) as shown.

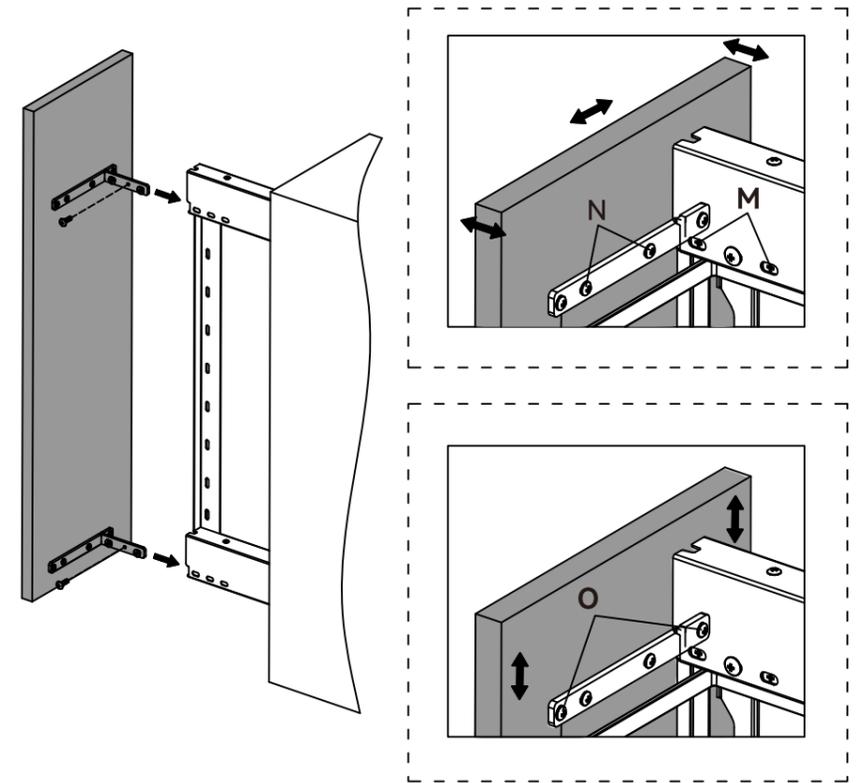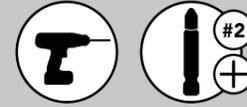

### STEP 06

Install the basket (B) to the frame (A) as shown.

