



INSTALLATION INSTRUCTIONS

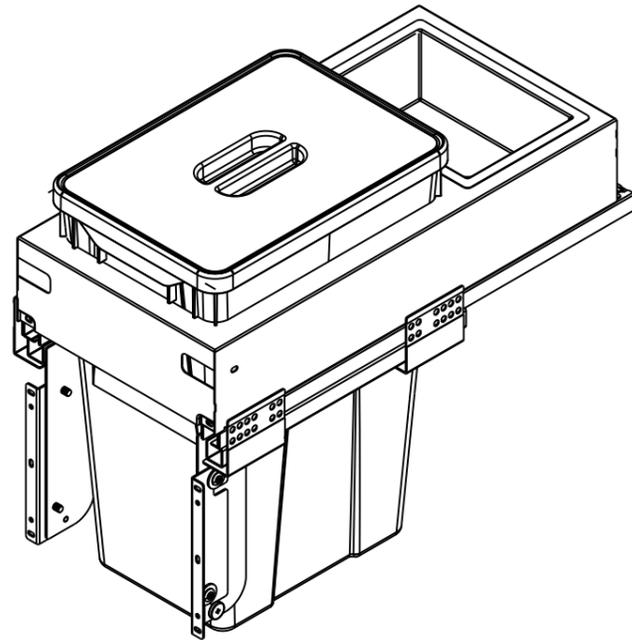


RA-W06-FL-1219S

ACCESSORY LIST:

No.	DESCRIPTIONS	Qty
A	Slide	2
B	Connector	2
C	Frame	1
D	L-shape connector	2
E	Door mounting bracket	2
F	Metal box	1
G	Connector	2
H	M6*10 Screw	4
I	M6*6 Screw	4
J	ST4*16 Screw	12
K	ST4*16 Screw	8
L	M4*6 Screw	6
M	Waste container	1
N	Template for slide	1
O	Template for bracket	1

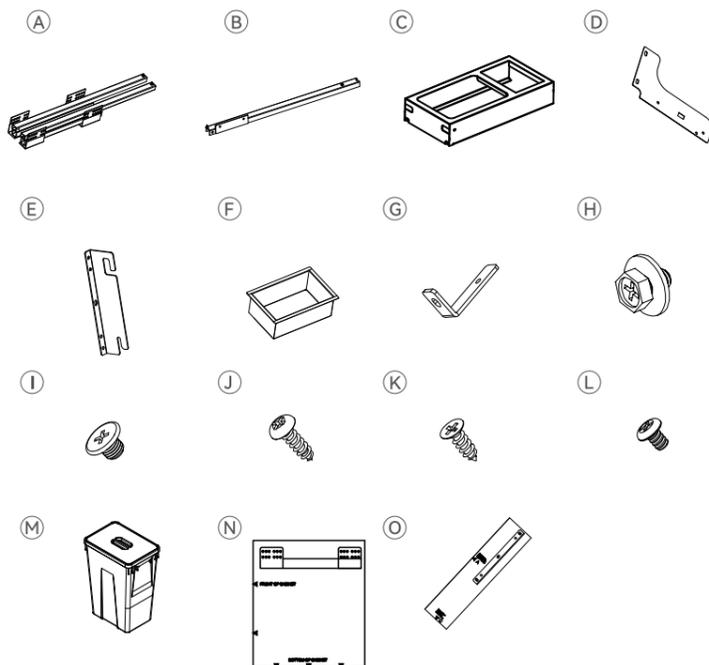

TOOLS REQUIRED:

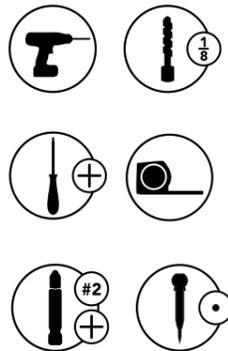

PRECAUTIONS:

A. Check the packing and make sure you have all the parts & fitting listed.

B. When you are ready to start, make sure that the right tools are hand, plenty of space dry area for assembly.


VISIT THE OFFICIAL WEBSITE



www.rutahardware.com



STEP 01

Check the size of the cabinet as shown.

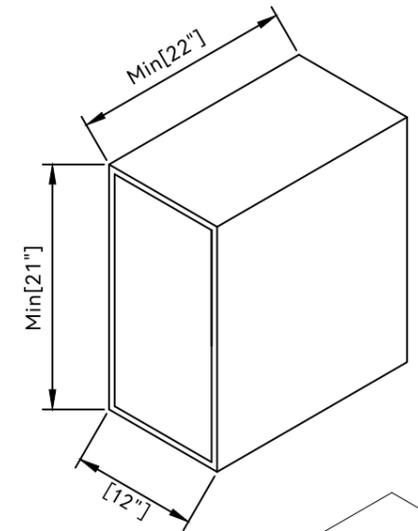



STEP 02

Using the template (N) to determine the hole position to the side of cabinet as shown.

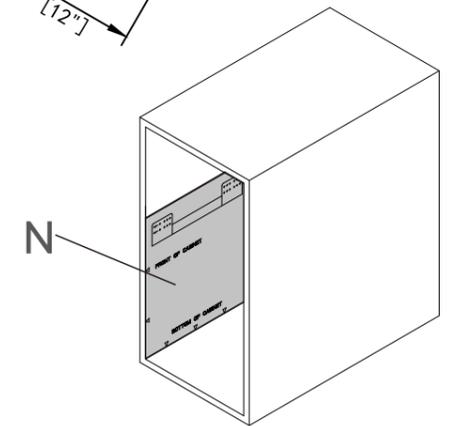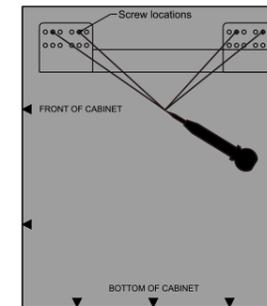


STEP 03

Fix slides (A) to the cabinet side using 8 pcs screws (K) as shown

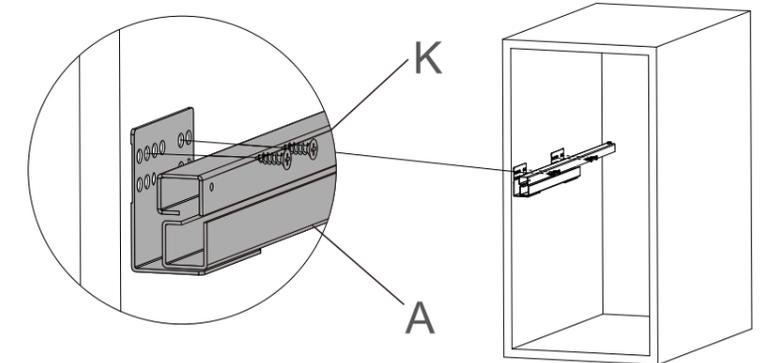


STEP 04

Install the slides (A) with connector (B) using 2pcs screws (L) as shown. Fix the connector (B) with the L-shape connector (D) using 4pcs screws (I) as shown. Install the screws (H) into the L-shape connector (D), do not too tight.

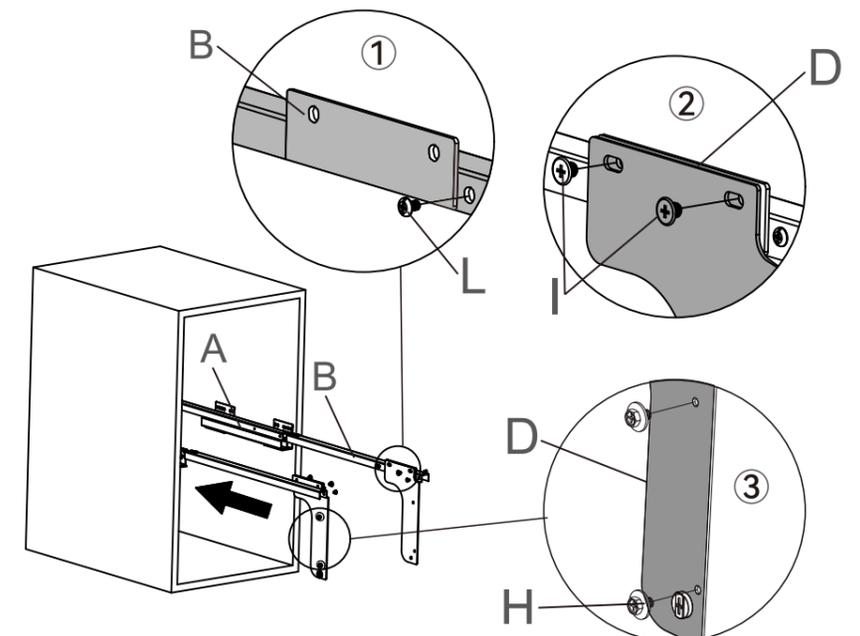



STEP 05

Install the frame (c) to the connector (B) using 2 pcs screws (L). Attach the Connector (G) to the frame using 2 pcs screws (L) as shown.

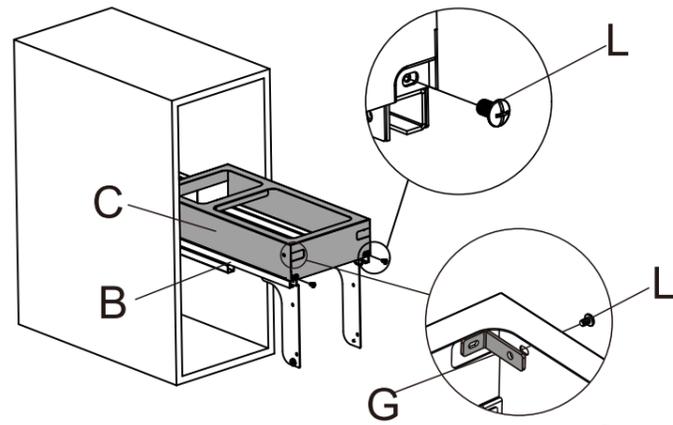


STEP 06

Using the template (O) to determine hole position of door mounting bracket (E).

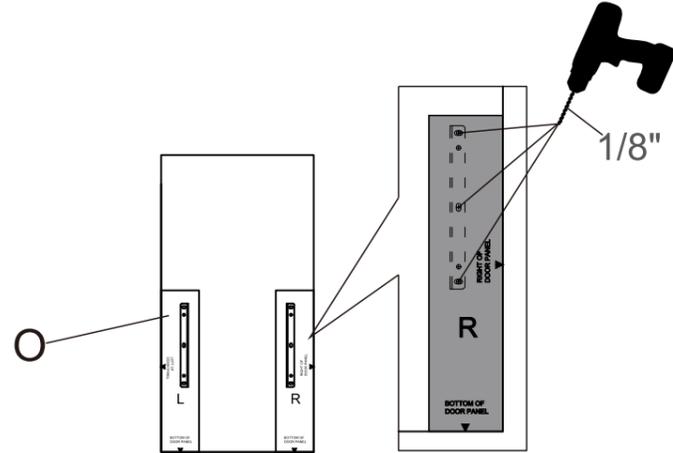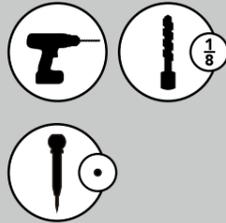


STEP 07

Fix door mounting bracket (E) using 10 pcs screws (J) to the door as shown.

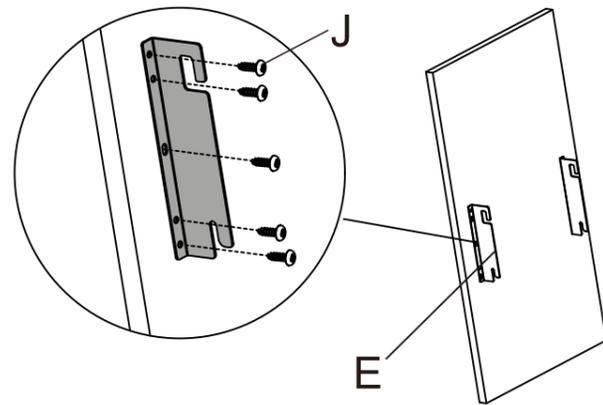



STEP 08

Attach the cabinet door to the waste container frame while trying to keep door level as shown.

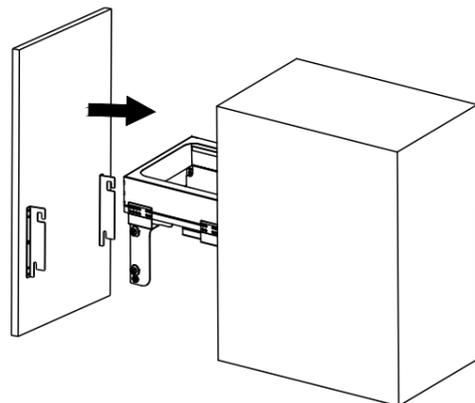



STEP 09

Door level can be adjusted as shown.

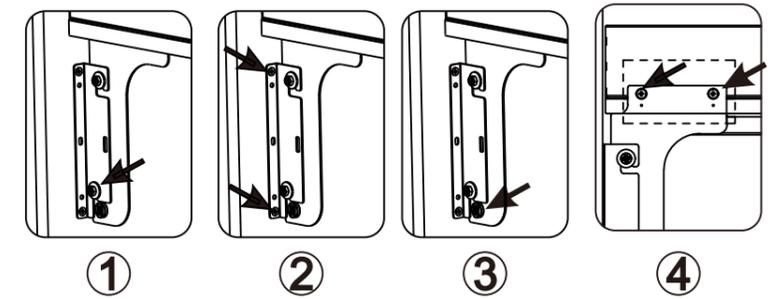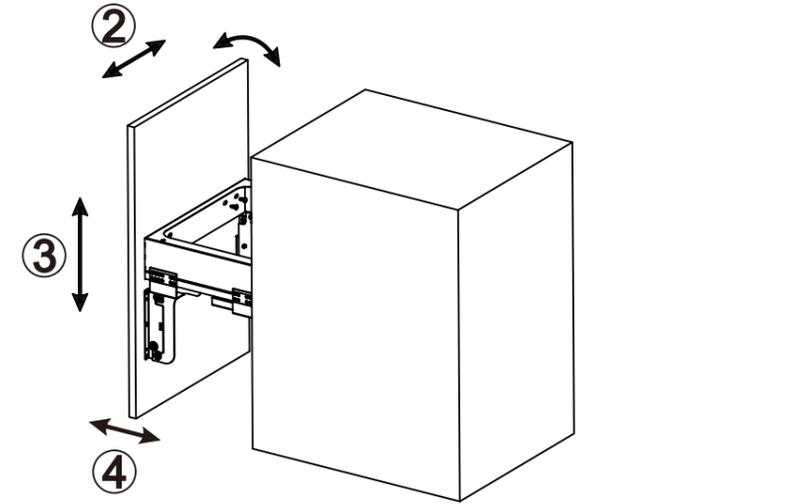

STEP 10

Fix the connector (G) by 2 pcs screws (J), after the door be adjusted.

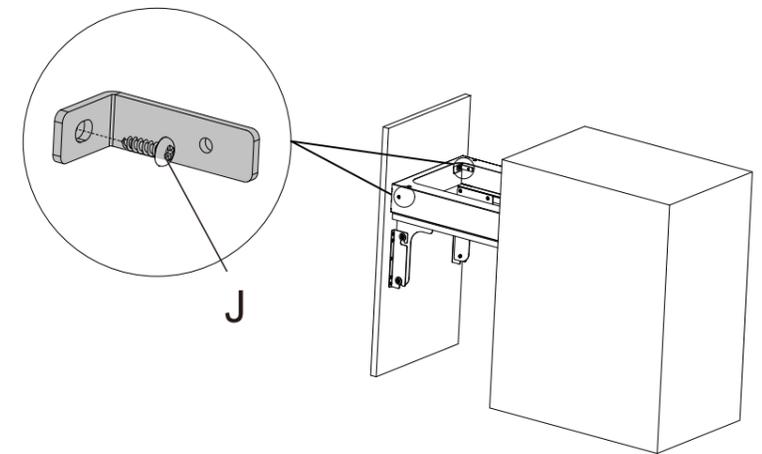

STEP 11

Install the waste container (M) and metal box (F) as shown.

