



INSTALLATION INSTRUCTIONS

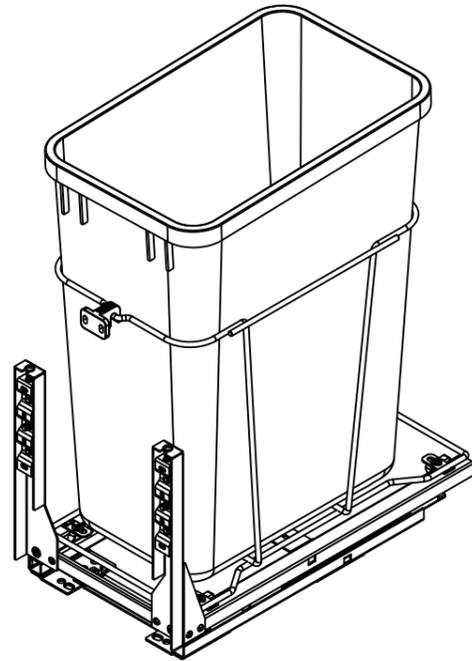

RA-W06-1235S
 RA-W06-1250S

TOOLS REQUIRED:

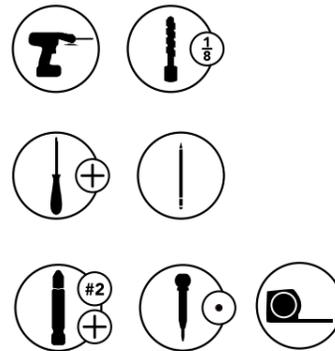

PRECAUTIONS:

- A.** Check the packing and make sure you have all the parts & fitting listed.
- B.** When you are ready to start, make sure that the right tools to hand, plenty of space dry area for assembly.


VISIT THE OFFICIAL WEBSITE



www.rutahardware.com


ACCESSORY LIST:

No.	DESCRIPTIONS	Qty
A	Frame	1
B	Wire frame	1
C	Door mounting bracket	2
D	ST4*16 Screw	18
E	M4*10 Screw	4
F	Plastic hook	1
G	Waste container	1
H	Slide rail template	1
I	Door panel template	1

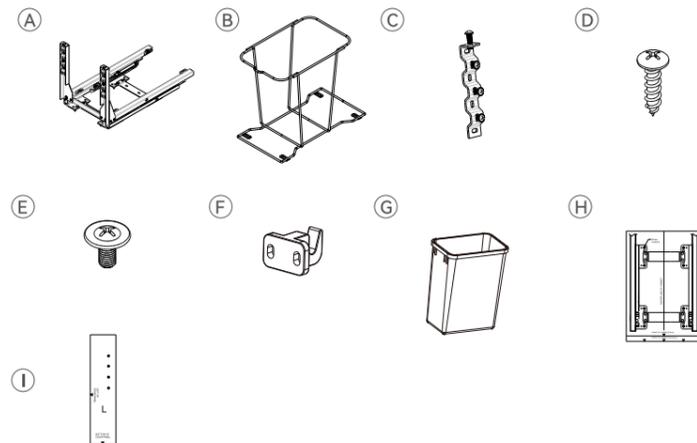



STEP 01

Check the size of the cabinet

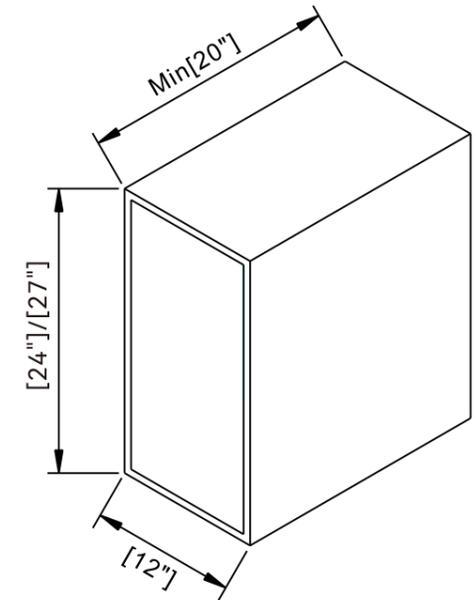



STEP 02

Using the template (H) to determine the hole position as shown.

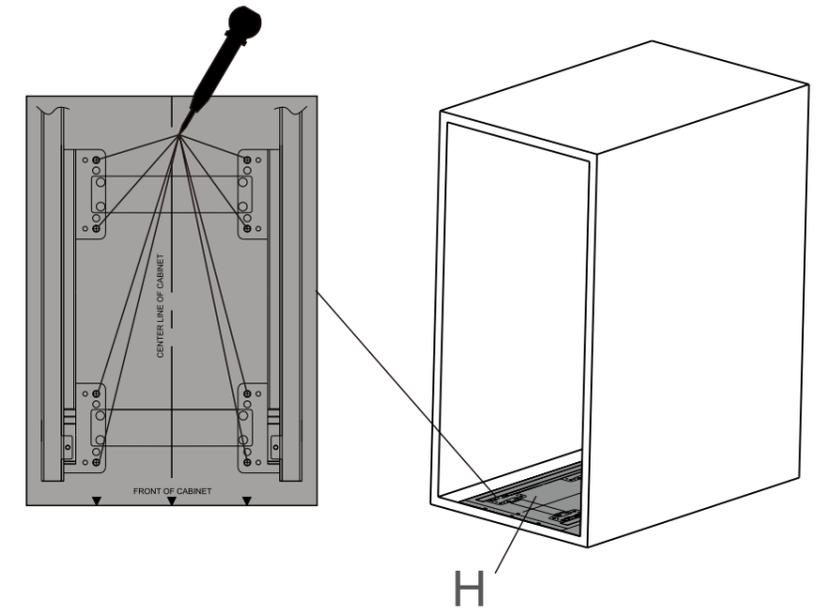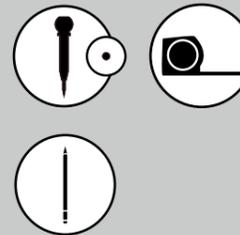



STEP 03

Fix frame (A) to the cabinet floor using 8 pcs screws (D) as shown.

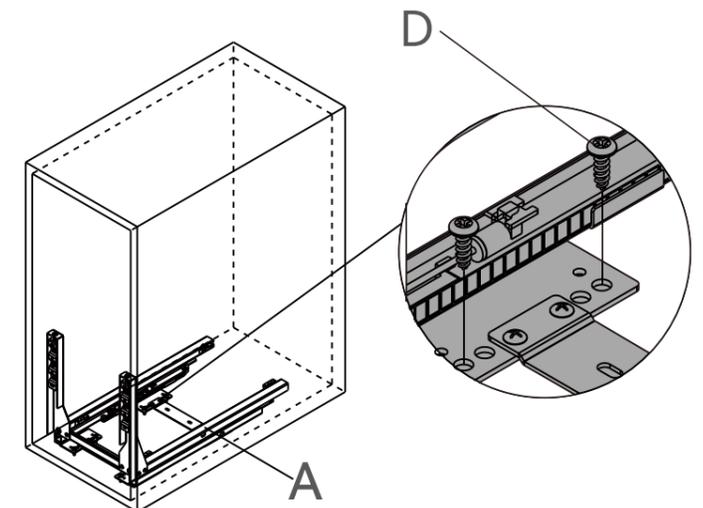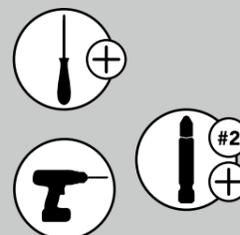



STEP 04

Using the template (I) to determine the hole position of door mounting bracket (C).

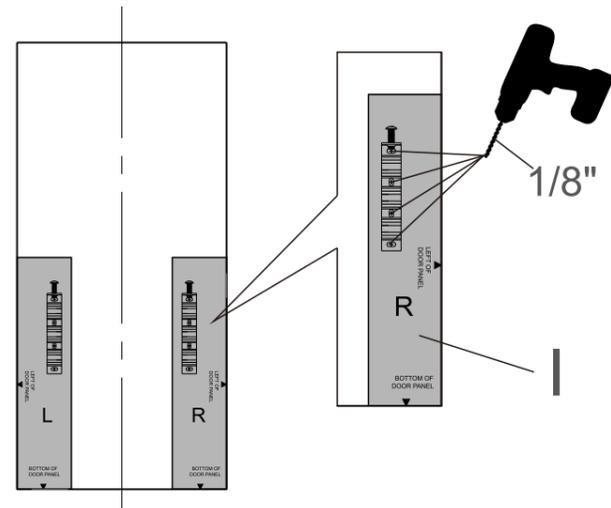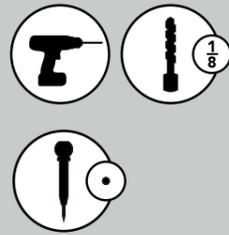


STEP 05

Fix door mounting bracket (C) using 8 pcs screws (D) to door as shown.

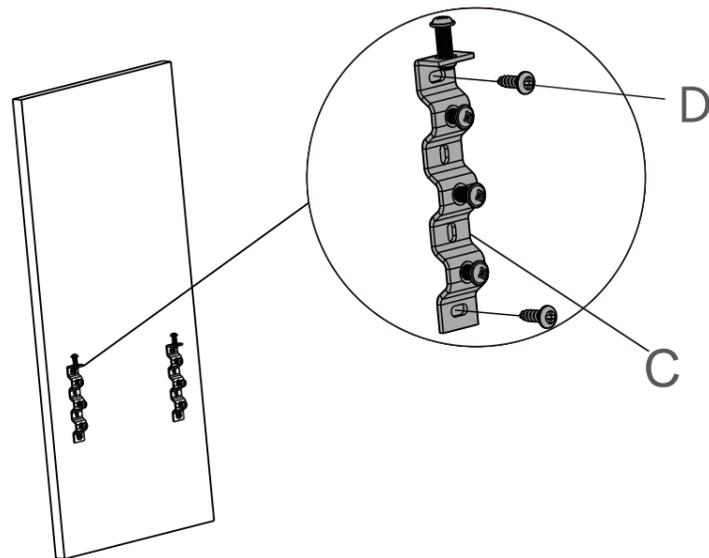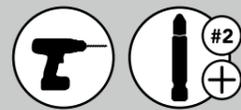



STEP 06

Attach cabinet door to the waste container frame while trying to keep door level as shown.

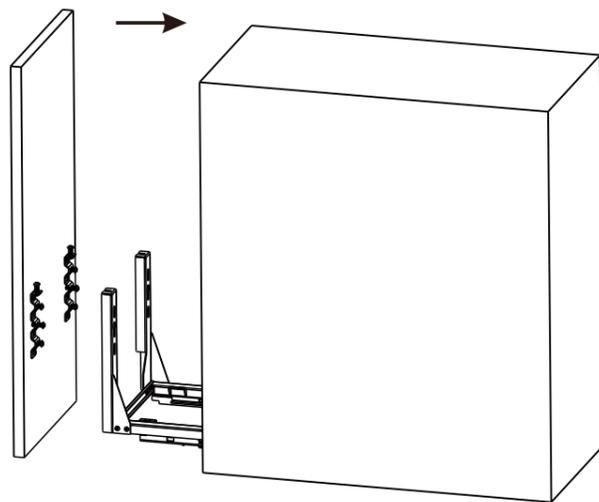



STEP 07

Door level can be adjusted as shown.

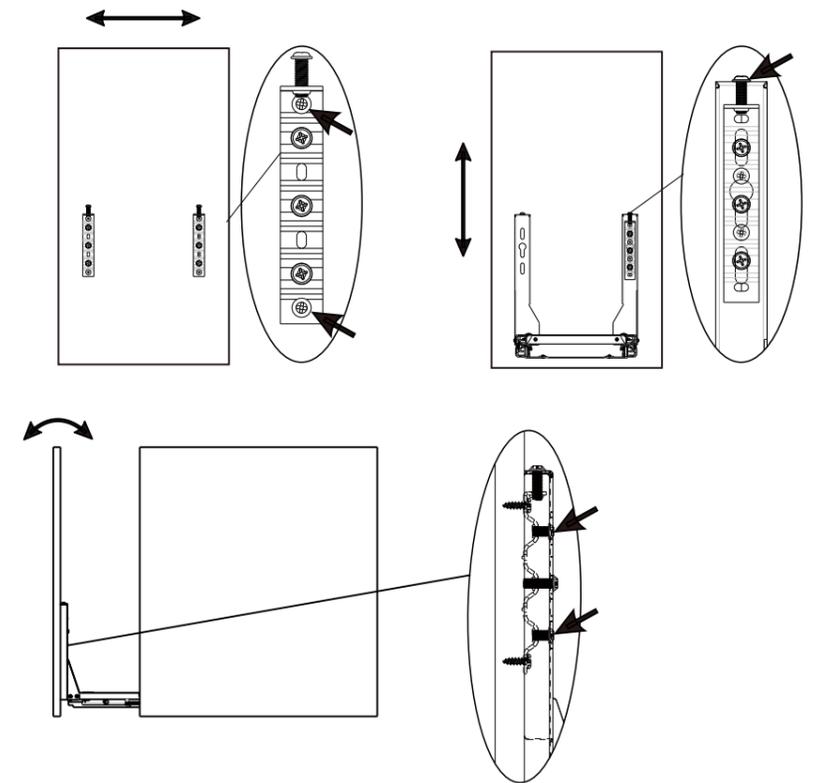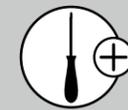

STEP 08

Fix wire frame (B) to the frame (A) using 4 pcs screws (E) as shown.

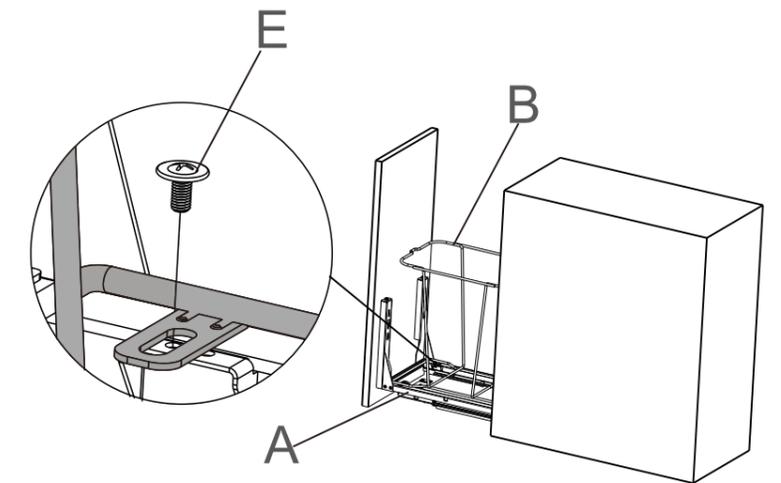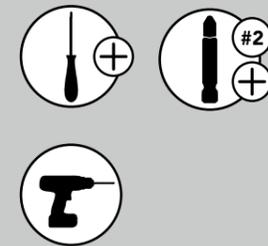

STEP 09

Fix plastic hook (F) to the door using 2 pcs screws (D), then install waste container (G) as shown.

