



BROKIS®



MINI TRIMLESS CONNECTION

CM18052



COMPONENTS INCLUDED WITH UNIT:

1× dural nut
1× tube with plastic set screw and retention tabs

WARNING:

Installation must be carried out by a qualified electrician only.

Switch off power at main circuit panel prior to installation!

The manufacturer assumes no liability for damage occurring in transport or resulting from incorrect installation.




BROKIS S.R.O.
ŠPANIELOVA 1315/25
163 00 PRAHA 6 - ŘEPY
CZECH REPUBLIC

ORG. ID 64940799
VAT ID CZ64940799
C 42174 MĚSTSKÝ SOUD
V PRAZE

TEL +420 567 211 517
TECHNICAL@BROKIS.CZ
INFO@BROKIS.CZ
WWW.BROKIS.CZ



1. CUTTING THE OPENING

The MINI TRIMLESS system is intended for installation in drywall sheets with a thickness of 12.5 mm. Use an 18-19 mm circular drywall hole cutter and cut the opening

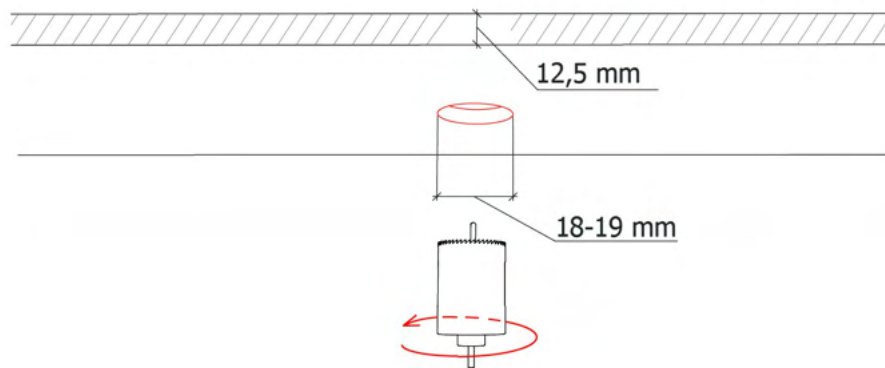


2. INSTALLING THE MINI TRIMLESS SYSTEM 1/3

Pass the power cable first through the dural nut and then through the tube with retention tabs. Connect the light according to the wiring diagram.

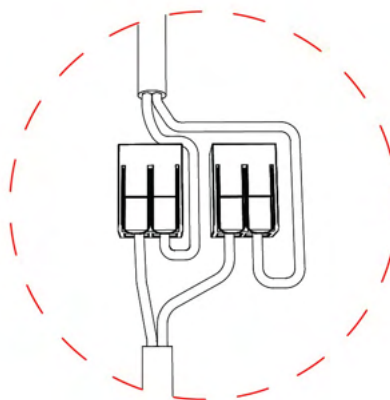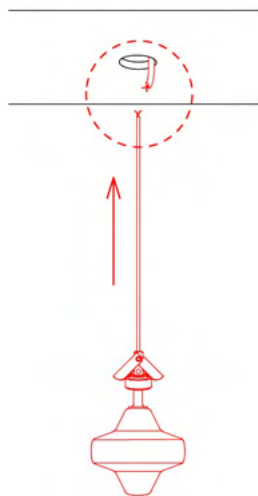


3. INSTALLING THE MINI TRIMLESS SYSTEM 2/3

Adjust the power cable to the required length and secure it in place with the plastic set screw in the tube with retention tabs. Use a flathead screwdriver to tighten. Compress the retention tabs and slide the entire component into the opening in the ceiling.

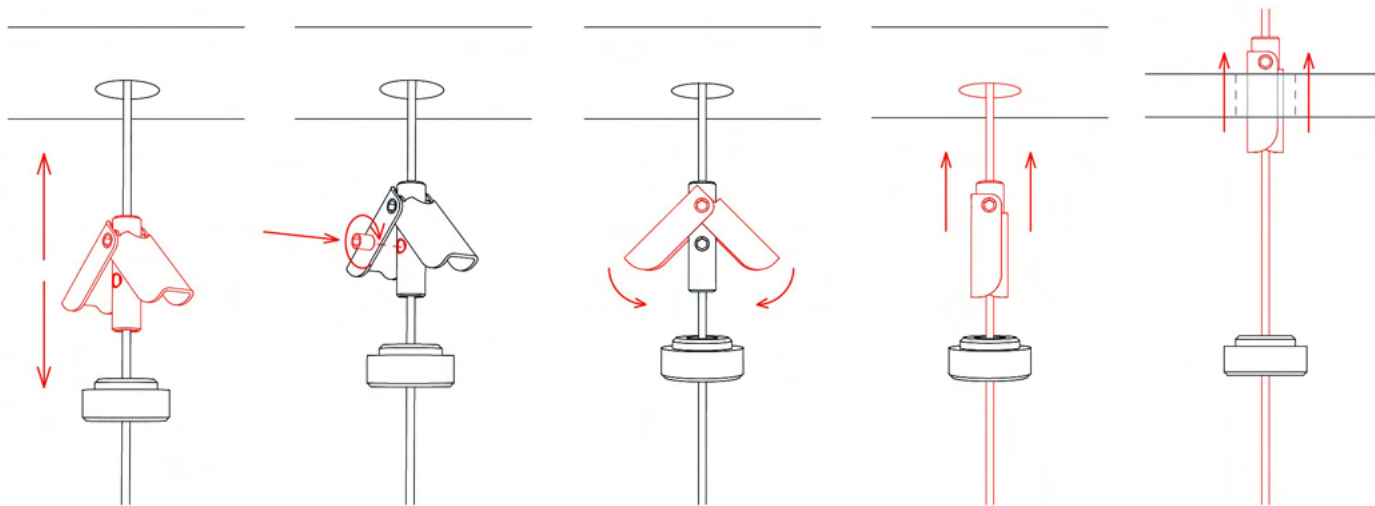

4. INSTALLING THE MINI TRIMLESS SYSTEM 3/3

After inserting the tube with retention tabs into the opening, gently pull on the power cable to extend the tabs. If necessary, use a screwdriver or your fingers to fully extend the tabs. While gently applying downward pressure to the power cable, screw the dural nut onto the tube.

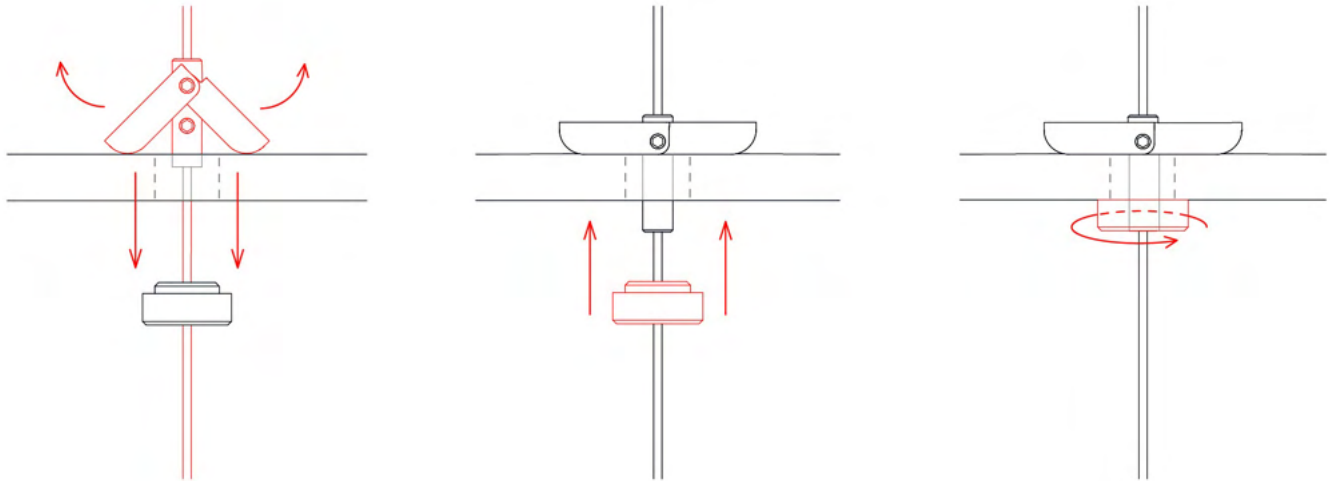

5. PENDENT LIGHT WITH MINI TRIMLESS

Test the light for proper function.

