


# Carabiner / Hardware Tag

A how-to guide for I-beam carabiners, and other metal equipment.

## Where to apply

Place the tag in the I-beam of carabiners, or in any recessed / low-wear area on metal gear.

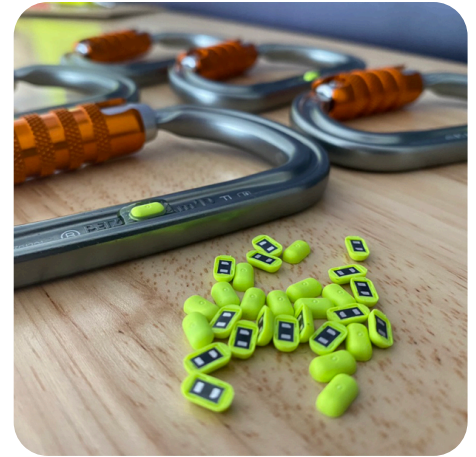


## How to apply

- Pick a surface area in a low wear/impact zone.
- Make sure it can be easily scanned with your phone.
- Clean and dry the surface thoroughly so that it is free of oil, grease, dirt, or other substances that will weaken the adhesive bond.
- Apply epoxy to the surface and press the tag into the glue. We recommend a 2-part epoxy like JB Weld ClearWeld Epoxy.
- Allow epoxy to set for 24 hours.



✓ Recess

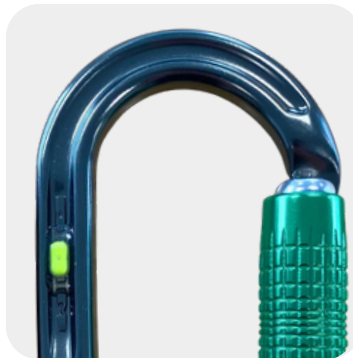

✓ I-beam



✗ Too proud

- Do**
- Place in a recess or a low wear area. For well used gear this might be an area where the paint is not worn.
  - Place where it can be easily scanned with your phone.
  - Place on a metal surface. These tags only read if placed on metal.

- Don't**
- Place in a high-wear area where the tag may get banged or rubbed.
  - Position the tag where it could interfere with equipment's function.
  - Cover important information (e.g. serial numbers).

## This tag works well on equipment like:

Petzl OK, Am'D, Ascention, Rig, I'D, Pro Traxion, DMM Ultra O, Safe-Tec Duck, Skylotec Sirius, Edelrid Hand Cruiser

