




Application of RZ turbo protecz zero






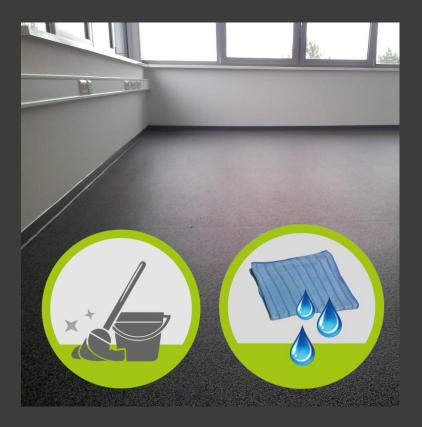

Clean the surface before starting with the application of the RZ turbo protect zero.





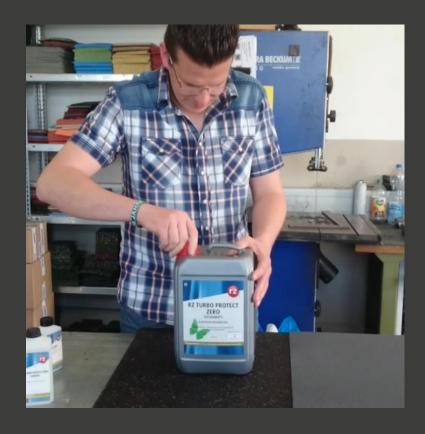



Open both components and pour component B (hardener) completly into the canister.









Close the canister and mix both components together by shaking the canister for 1 minute. For smaler areas, prepare the needed amount of "ready mixed" sealer liquid as necessary.











Spread the mixed sealer evenly onto the area that should be sealed, approx. 100g/m². Start at the edges of the room e.g.: walls and corners or in "difficult" areas.





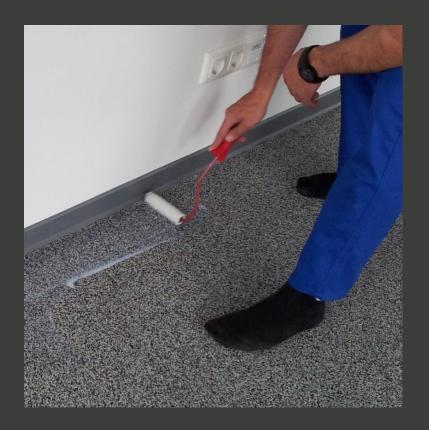

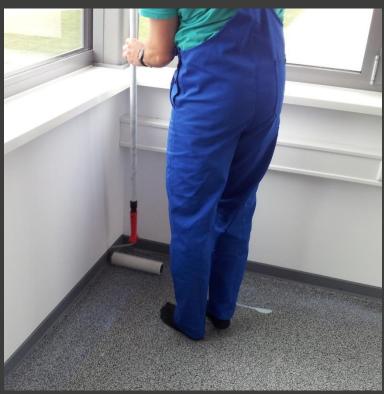


Spread the the sealing liquid at the edges and corners.

Use an adapted paint roller as recommended.





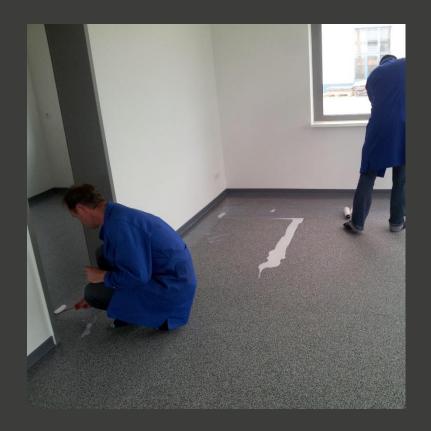



Once the walls and edges or "difficult" areas are finished, start the application of the sealer liquid on the rest of the floor.










Create sections and apply the sealing liquid step by step from section to section.

Avoid stepping in the sealed area untill the varnish is fully cured.







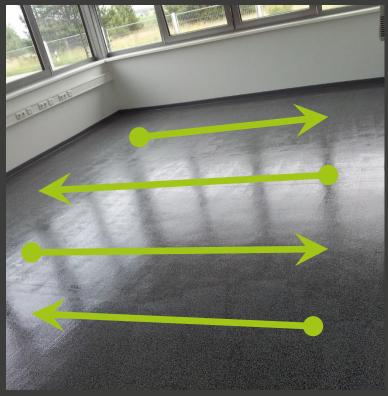

Roll out the sealer liquid in one direction (up and down) and then in a cross-wise direction (left and right) in one working step.








Finish the last sections of the area and let the "sealed" area cure over night.





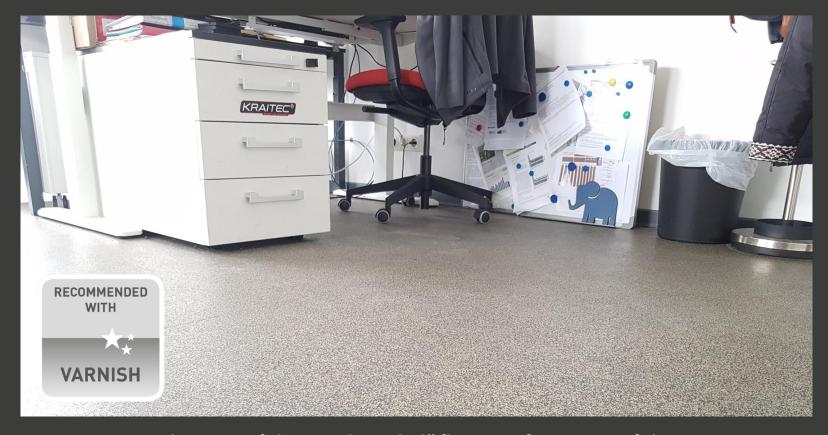

Daily usage of the "ready sealed" flooring after curing of the area.





KRAIBURG Relastec GmbH & Co. KG

Production plant Salzwedel

Fuchsberger Straße 4 D-29410 Salzwedel

Fon +49 (0) 3901 8304 – 0 Fax +49 (0) 3901 423557 Sales

Kehlsteinstraße 2 D-84529 Tittmoning

Fon +49 (0) 8683 701 – 116 Fax +49 (0) 8683 701 – 4 116

www.kraiburg-relastec.com



