


Substructure


The subbase must be even and stable against frost.

Installation

Install Diamond and Half Diamond using an optional steel mounting anchor into a prepared fresh concrete bed situated on a stable bearing substructure. EUROFLEX® Half Diamond may be installed directly in a fresh concrete bed or adhesively mounted on a rubber substrate such as EUROFLEX® slabs. Glue the steel anchor into the ball using polyurethane glue Ottocoll M 500 (red) or Ottocoll P83 (gray).

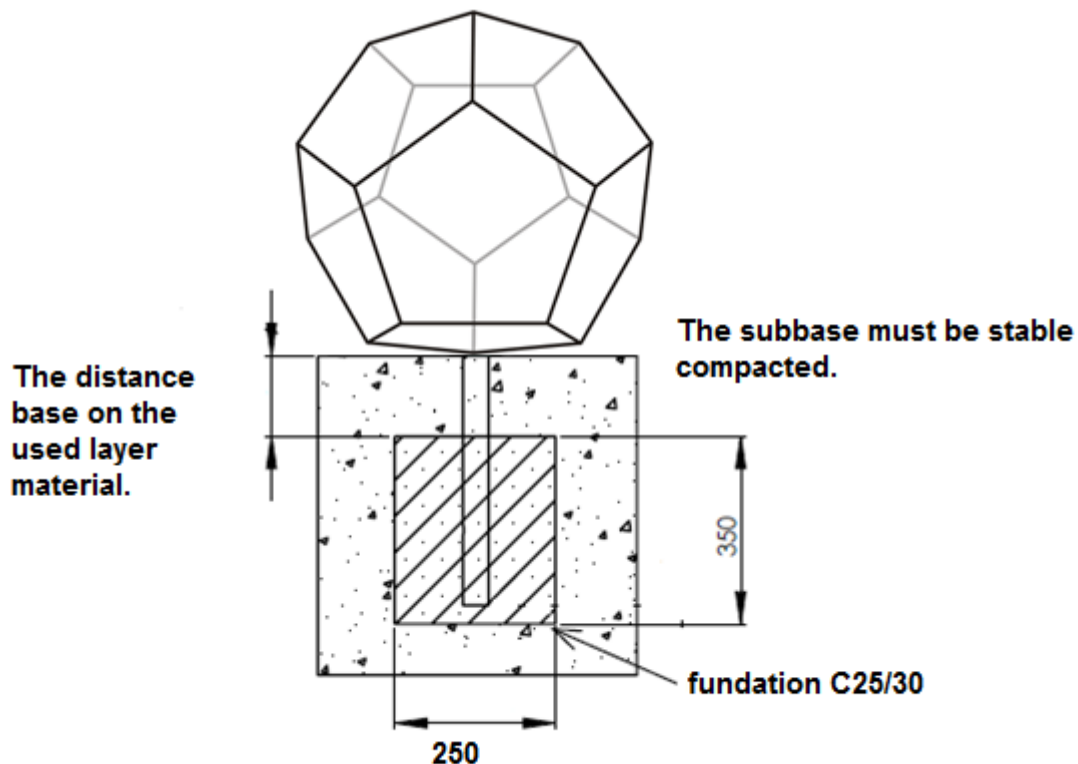

Steel plate:

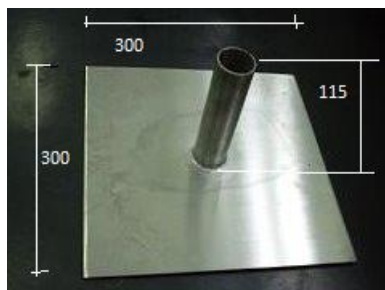

Diameter metal pipe 40mm

The half Diamond could install directly in a fresh concrete bed or glued on the EUROFLEX® slabs.

To avoid colour variations due to differences in sunlight expose, leave the UV protection film on the products as supplied until just prior to installation.



All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 2 of 2