



Installation with base plate

Insert the mounting tubes, which are welded to a metal plate, through the drainage holds provided in the base plate (animal base plate).

Apply a one-component polyurethane adhesive cement to the mounting tubes.


Slip the Elephant/Rhino/Dromedary over the mounting tubes; the adhesive cement will cure overnight.

The base enhances the rigidity of the animals. When affixed in this manner, the unit can only be separated with considerable effort for safety reasons.

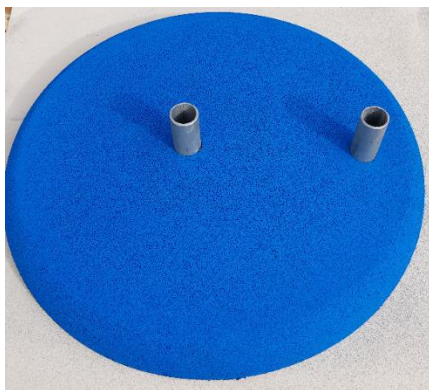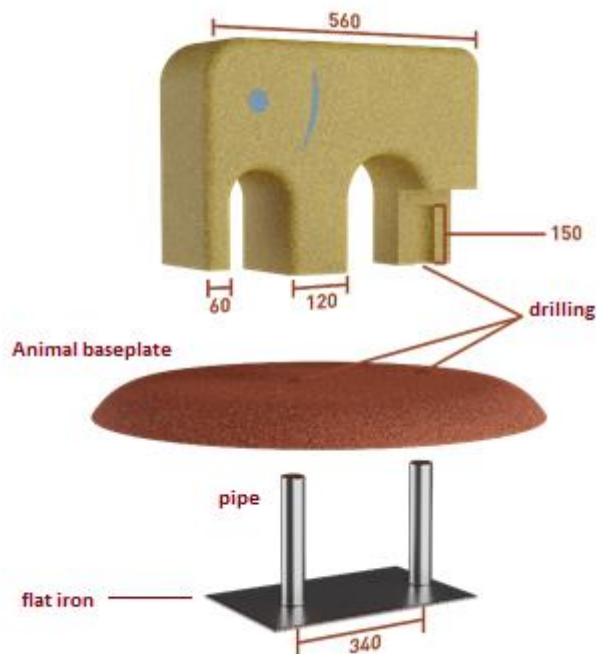


All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 1 of 6

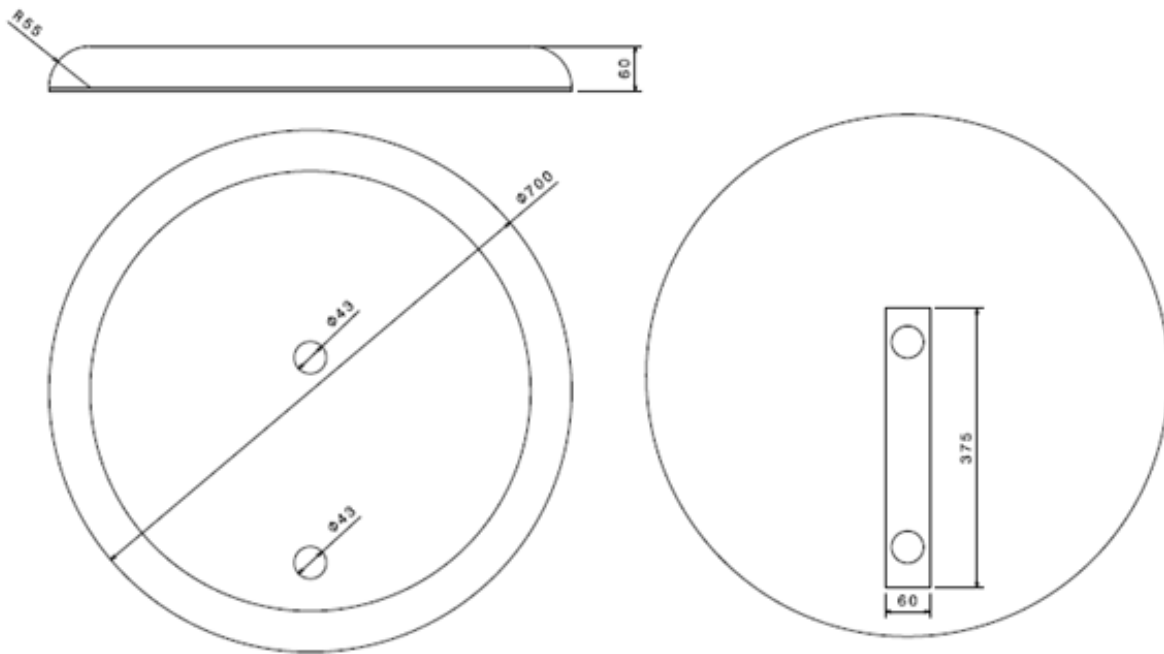Dimension base plate


All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 2 of 6

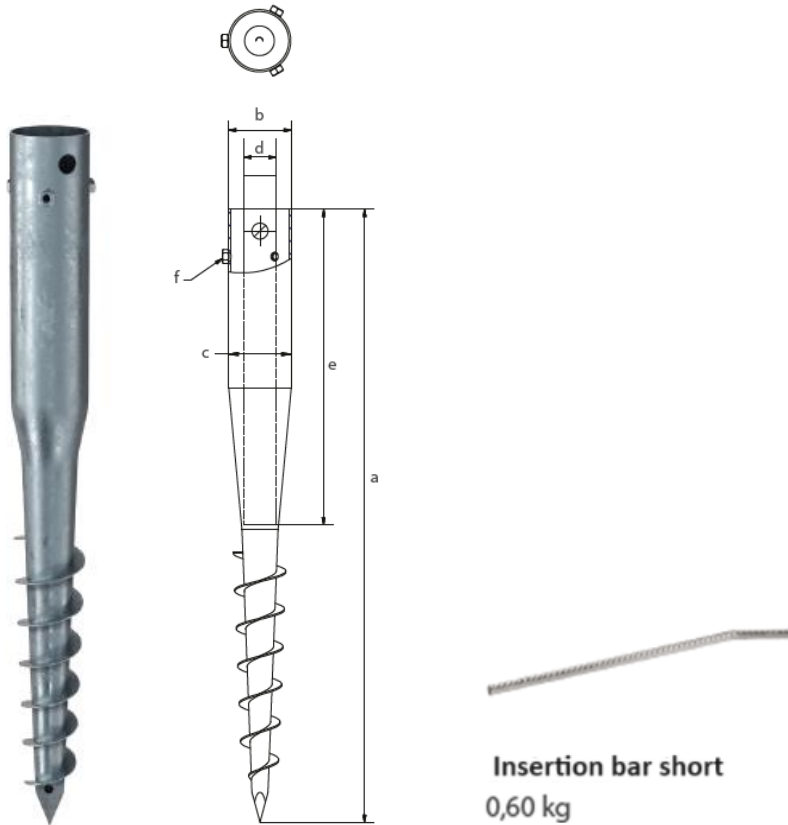Ground socket

- a Length 650mm
- b Outside diameter Socket 68mm
- c Inside diameter 64mm
- d Setting diameter 43mm
- e Adjusting depth until lower cone 315mm
- f Threads 3xM8

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 3 of 6

Installation Base Socket

Secure the grounding socket to the ground using the screw-in rod, ensuring installation is straight and true.



Remove the floor in the area of the screws to allow for later fastening of the pipe, and install the floor anchor evenly.




Insert the metal tube into the floor sleeve until it reaches the lower conical stop, and secure it evenly and straight using the screws.



Fill the surrounding soil evenly and compact it.

Affix the elephant, rhinoceros, or dromedary to the mounting tubes; the adhesive cures overnight.

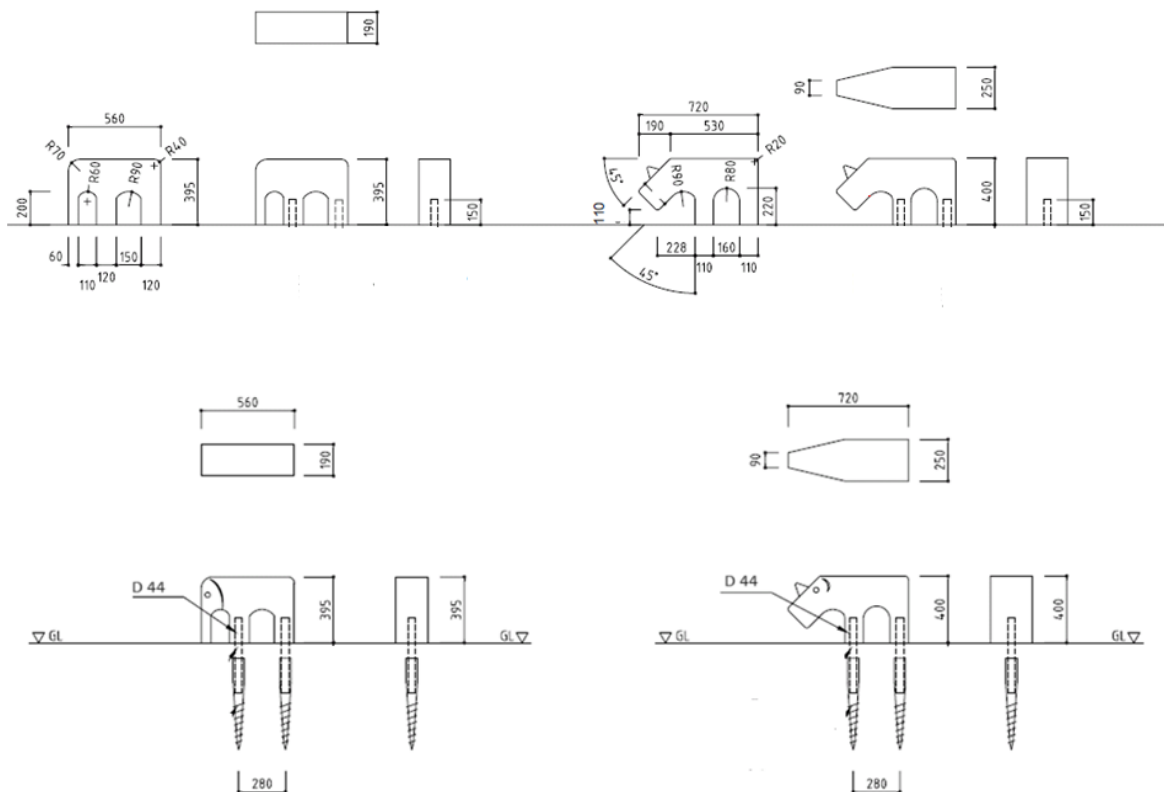

All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 5 of 6

To prevent color variations arising from differential sunlight exposure, retain the UV protection film on the products as supplied until immediately preceding installation.



All information without guarantee, subject to change. The installation instruction is not subject to any change service. Each current and valid from can be recalled at www.kraiburg-relastec.com/euroflex/

page 6 of 6