


Installation Instructions: Acoustical Pipe Lagging

(B-10 LAG, B-10 LAG/QFA-3, B-10 LAG/QFA-9, B-20 LAG, B-20 LAG/QFA-3, B-20 LAG/QFA-9)

1. Determine the circumference of the duct or pipe to be wrapped. Note additional length required to accommodate thickness of material. Add 1-2 inches overlap of product onto itself. (Note: Quilted Fiberglass side faces the Duct or Pipe)


2. Utilizing standard 54" wide rolls, cut length as determined above.

3. After cutting piece from roll install first section on the duct or pipe. Drape the cut piece over the pipe or duct with equal parts of the product hanging over each side. One side is then brought up and adhered to the pipe or duct with a foil lag tape. The other side is then brought up, making sure to overlap the first side, and secured with tape. This method allows for circumferential seams approximately every 50" to 52", and a single seam running along the bottom of the pipe or duct.

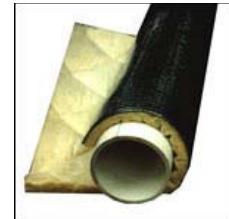

1. Where specified or as required banding should be used to secure lag to pipe or duct.
2. Add additional wraps of tape or banding around circumference as required to snug lagging to pipe or duct.
3. On large rectangular ductwork, a mechanical fastener such as stick pins or weld pins should also be utilized, with additional emphasis on supporting product across the bottom to prevent sagging.



4. Cut and install the next section in the same fashion. Each progressive section should overlap the previous section by 2 inches (+/-). Tape this seam with a 4" wide foil lag tape.

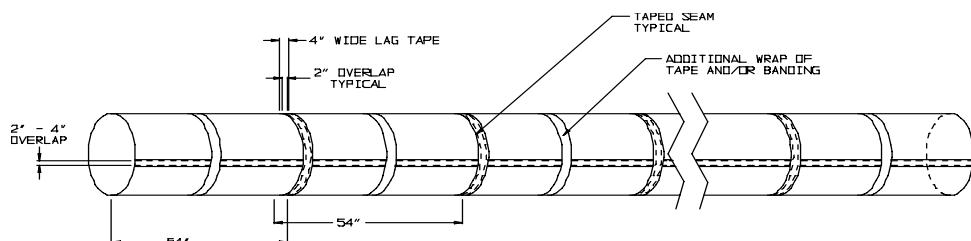

(Bottom of Duct Shown)

5. When covering an elbow the usual method is to "gore" the product (as typical in sheet metal construction). See page 2 for instructions.
6. In all cases the important element is to assure there are no gaps or leaks whatsoever.

Note: Sound Seal's lagging products are suitable for outdoor applications. An aluminum sheathing may be applied over the finished installation for additional protection.

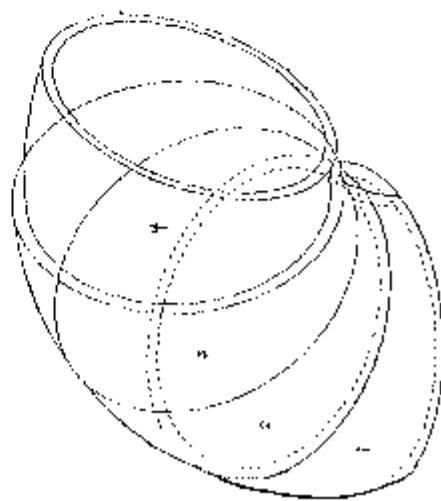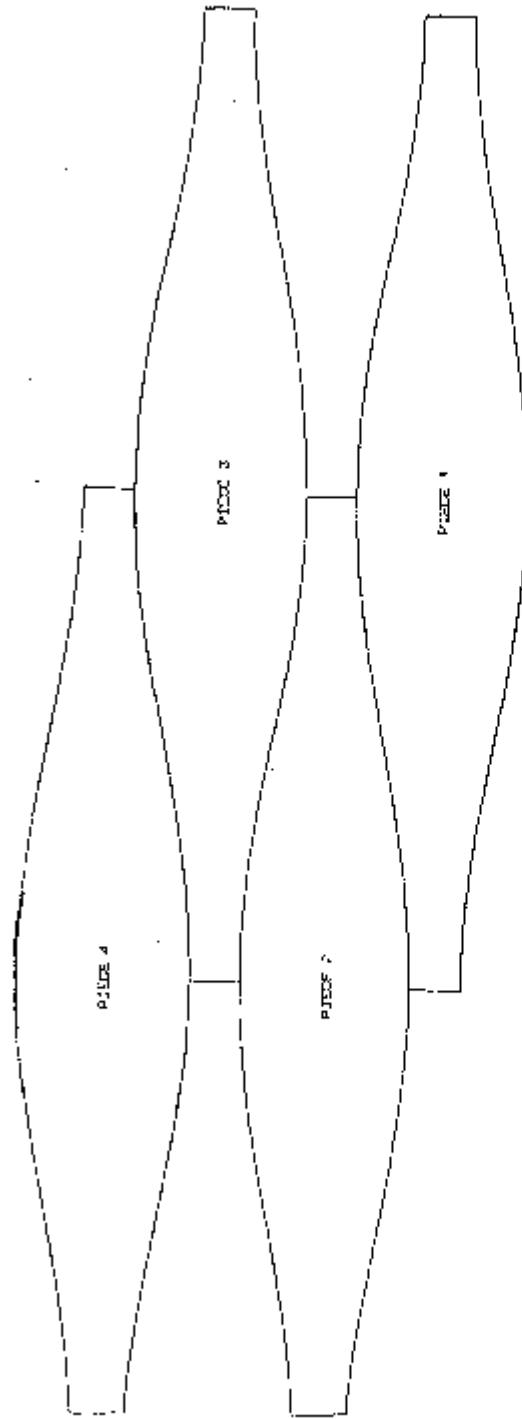

ACOUSTICAL LAGGING B-10 LAG SERIES
INSTALLATION CONCEPT FOR ELBOWS