




1. LAY OUT THE PANEL LOCATION(S) ON THE WALL.
 NOTE: PANEL NEEDS APPROX 1" GAP @ TOP TO ALLOW ENGAGEMENT OF EC-CLIPS.

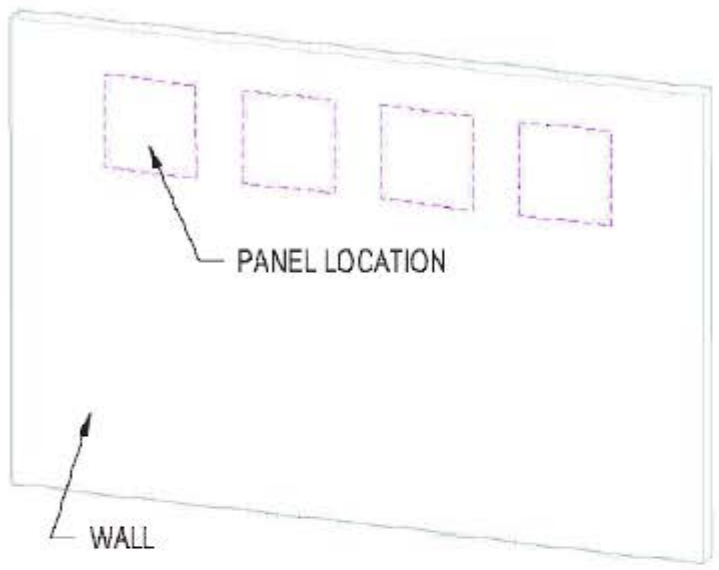


2. DETERMINE EC-2 / EC-4 BRACKET LOCATIONS ON WALL, BRACKETS SHOULD LINE UP WITH EC-1 CLIPS ON SUPPLIED PANELS.

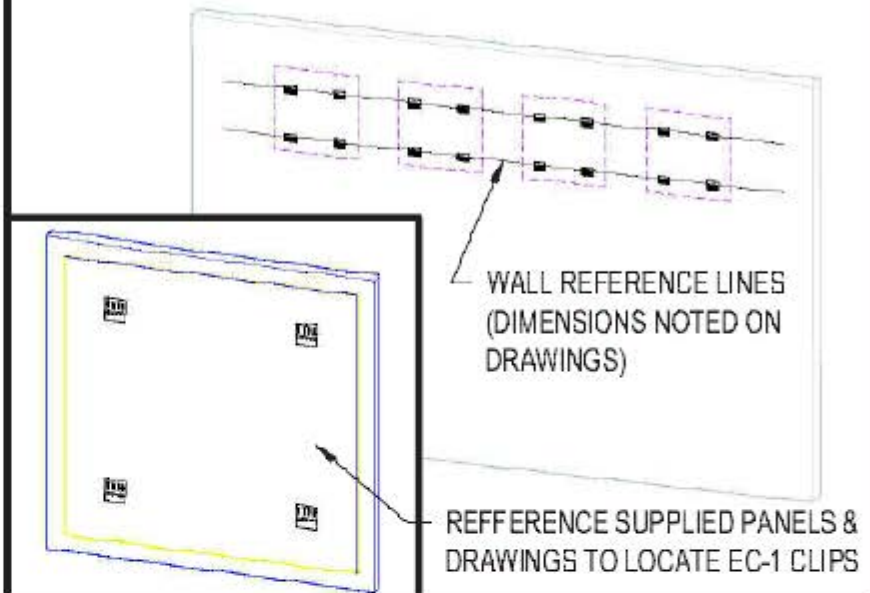

3. SECURE THE EC-2 / EC-4 BRACKETS TO THE WALL WITH SCREWS.

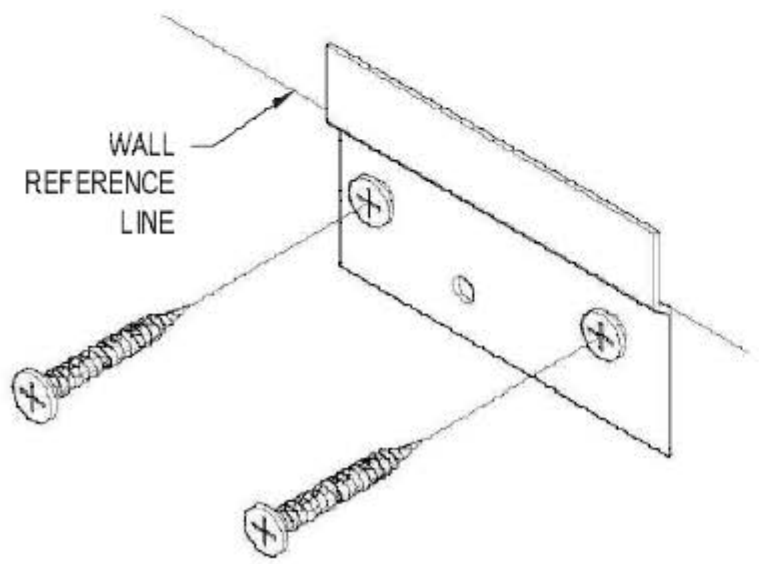

4. SLIDE THE EC-1 CLIPS ATTACHED TO THE PANEL ONTO THE EC-2 / EC-4 BRACKETS ON THE WALL.

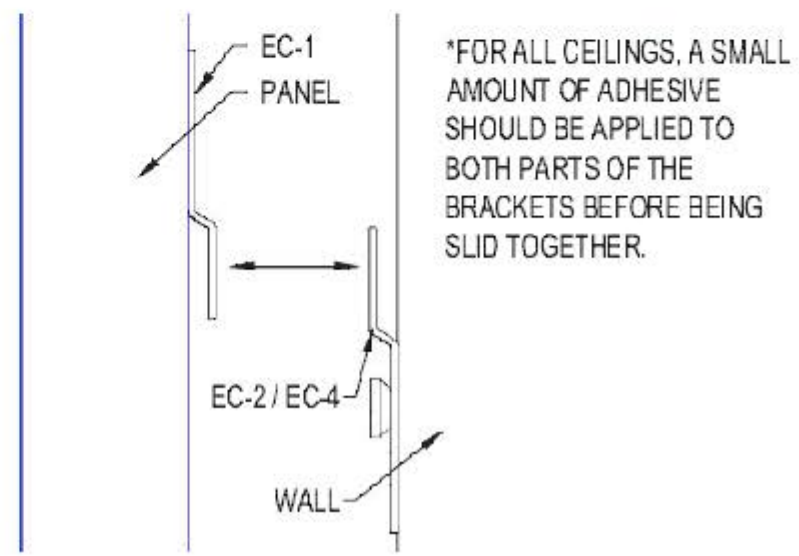


WWW.MEMTECHACOUSTICS.COM
 2175 AVON INDUSTRIAL DR.
 ROCHESTER HILLS, MI 48309
 PH: (248) 289-1123




EC-CLIP
MOUNTING DETAIL


1. LAY OUT THE PANEL LOCATION.

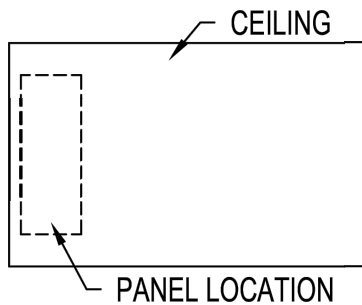


2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

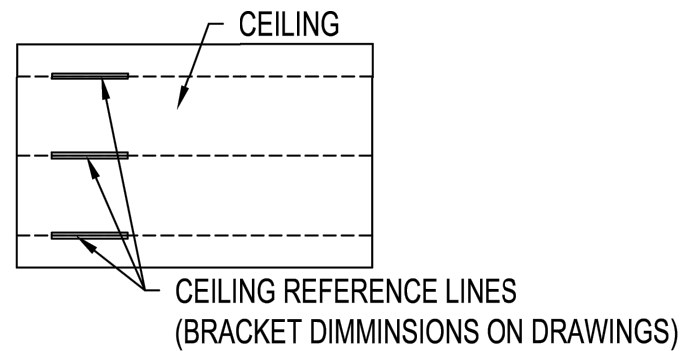

3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS.

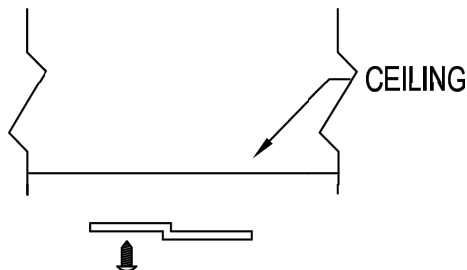

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

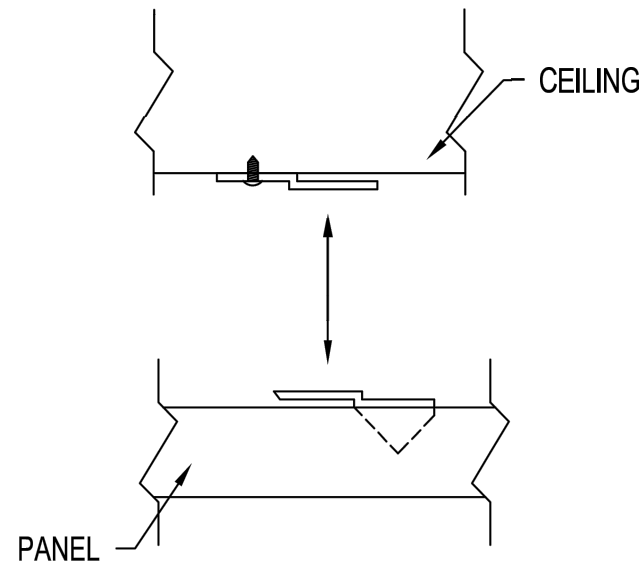

*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER

WWW.MEMTECHACOUSTICS.COM
2175 AVON INDUSTRIAL DR.
ROCHESTER HILLS, MI 48309
PH: (248) 289-1123

**Memtech** Acoustics

EC-CLIP
CEILING MOUNT