




1. LAY OUT THE PANEL LOCATION ON THE WALL

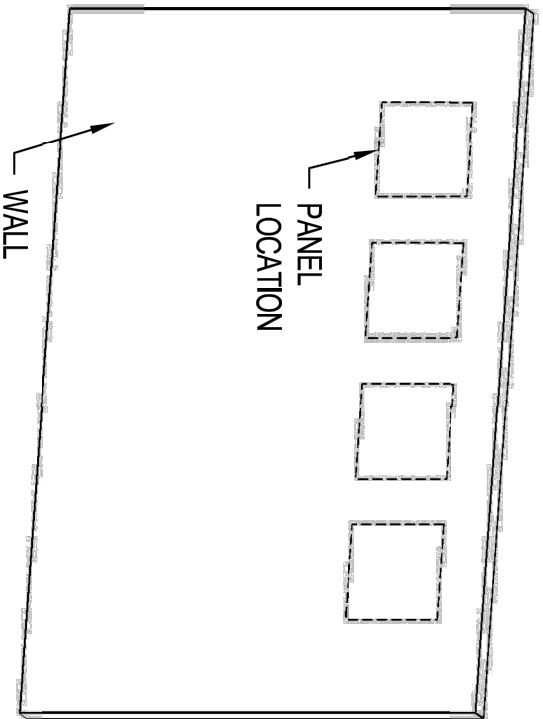


2. SECURE IMPALING CLIPS TO WALL USING APPROPRIATE FASTENERS. CLIPS SHOULD BE LOCATED TO ENSURE THERE IS NO CONTACT BETWEEN CLIPS & FABRIC.

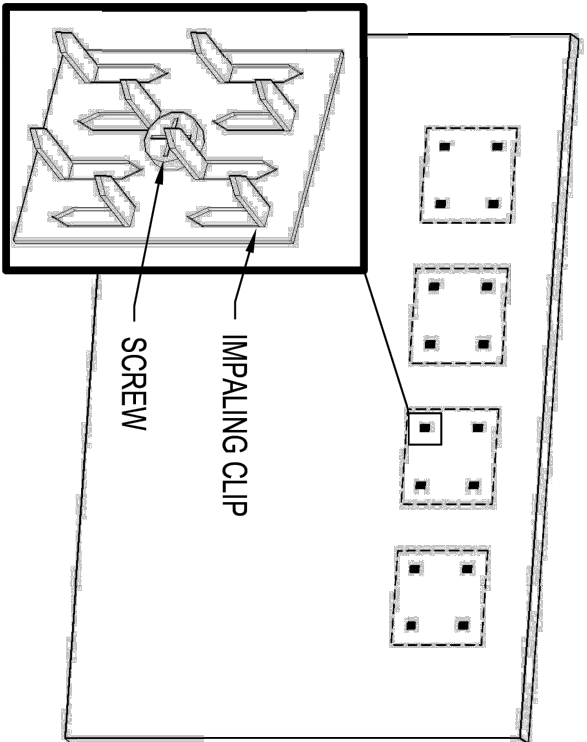

3. APPLY CONSTRUCTION ADHESIVE (BY OTHERS) TO FABRIC PERIMETER ON PANEL BACK. ADHESIVE BEAD SHOULD BE 3/4" x 3/4" x 6" LONG, NO MORE THAN 18" APART.

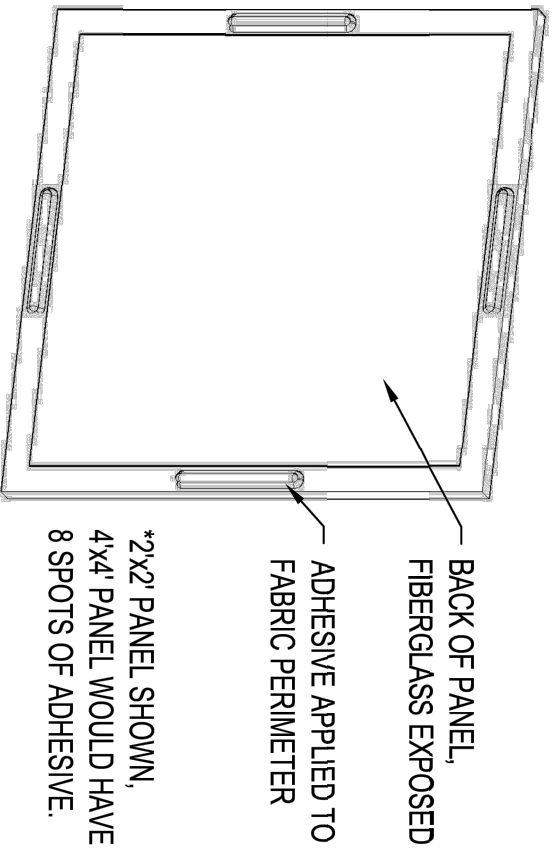

4. ENSURE PANEL IS LOCATED PROPERLY, PRESS PANEL FIRMLY TO WALL. (MAKE SURE THE FIBERGLASS CORE IS BEING IMPALED BY THE CLIPS, NOT THE FABRIC.)

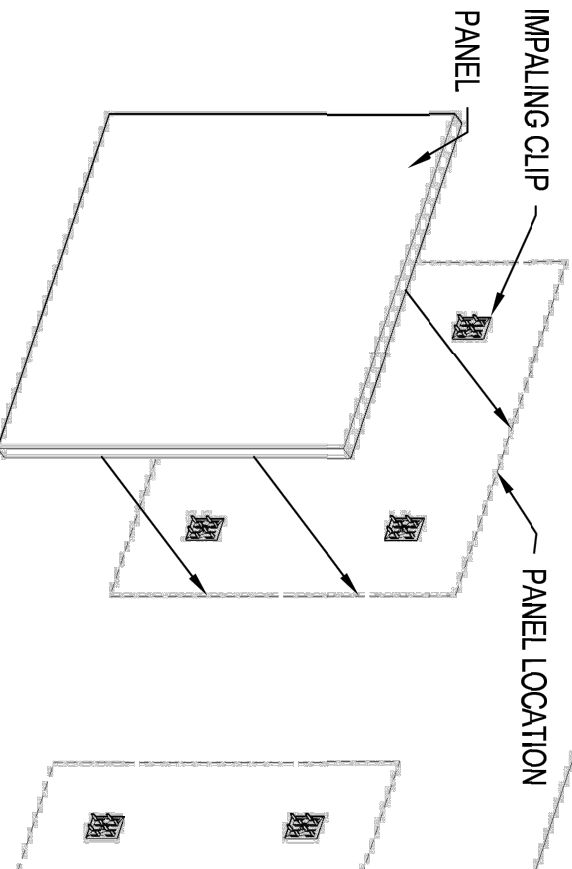

IMPALING CLIP MOUNTING DETAIL



WWW.MEMTECHACOUSTICS.COM
2175 AVON INDUSTRIAL DR.
ROCHESTER HILLS, MI 48309
PH: (248) 289-1123