

Audo

COPENHAGEN



HARBOUR DINING CHAIR, UPHOLSTERED
Designed by *Norm Architects*

HARBOUR DINING CHAIR, UPHOLSTERED

Disassembly Instruction

Note

Use a screddriver of the right size and shape to unscrew the screws.





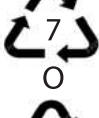

Use a tool to remove glued components.

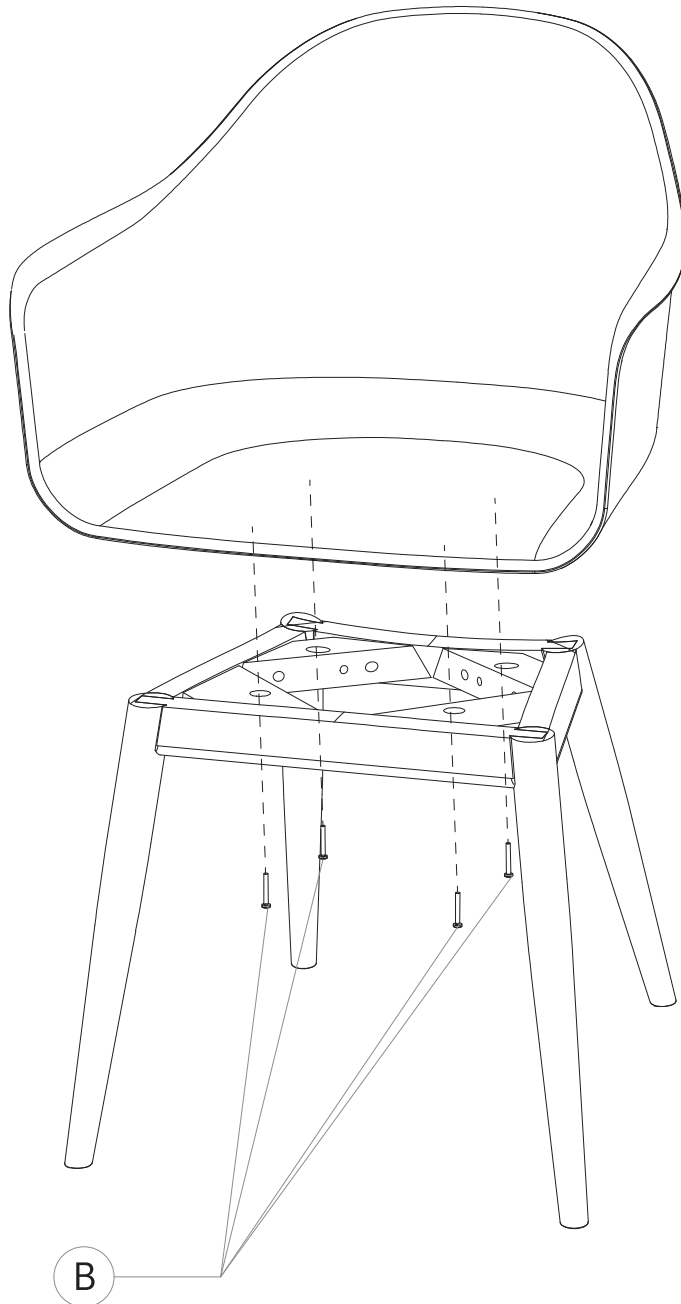
Sort the different materials according to your local regulation.

Removal

Uncrew the four screw to separe the legs from the seating shell.

Material

- (A)  Textile
- (B)  Steel
- (C)  Wood
- (D)  Brass
- (E)  Foam
- (F)  ABS







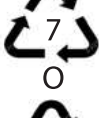

HARBOUR DINING CHAIR, UPHOLSTERED

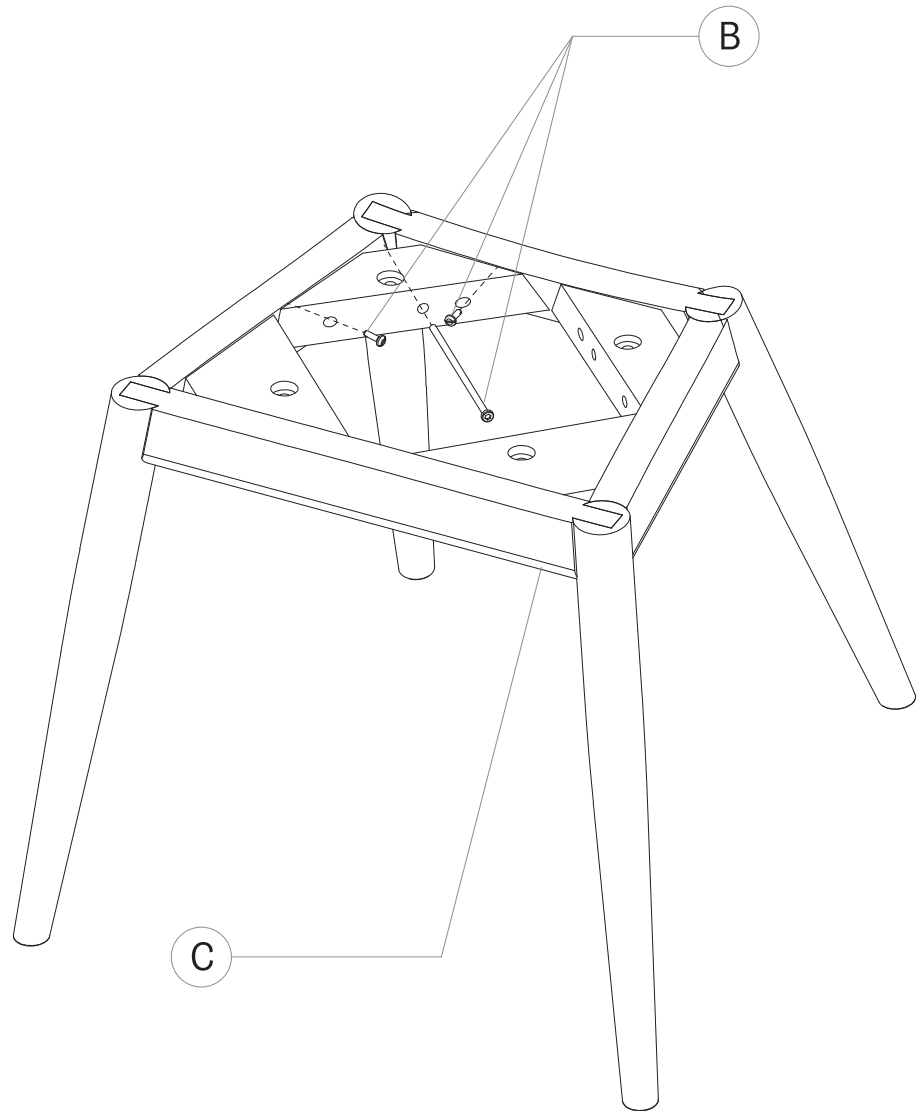
Disassembly Instruction

Removal

Unscrew the 12 screws, four for each corner.

Material

- (A)  62
TEX Textile
- (B)  40
FE Steel
- (C)  50
FOR Wood
- (D)  7
O Metal
- (E)  7
O Foam
- (F)  ABS ABS



hARBOUR DINING CHAIR, UPHOLSTERED

Disassembly Instruction





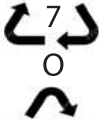

Removal

Divide the different layers of the seat shell. Each one is glued to the other.

The inner shell have 4 brass insert in the bottom.

Separate them before sorting out.

Material

- (A)  Textile
- (B)  Steel
- (C)  Wood
- (D)  Brass
- (E)  Foam
- (F)  ABS

