

BRICKMOLD DOOR PAN


INSTALLATION INSTRUCTIONS



1. Verify that the pan fits snugly between the studs to ensure proper alignment and a tight seal for later in the installation process.
2. Once verifying that the pan meets these conditions, remove the pan and apply high-quality caulk to the underside only.
3. Reset the pan in place and press it firmly into the caulking. Secure the pan with nails at each end only as shown in the **last picture provided**, positioned approximately $\frac{3}{4}$ " above the bottom of the edge. Do not use staples, and do not place any other additional nails in the middle or along the length of the pan. **** DOING THIS WILL COMPLETELY DEFEAT THE PURPOSE OF THE PAN.***

**** Using additional fasteners such as staples or nails in any other area other than the designated ends in the last picture provided will puncture the waterproof surface of the pan and create pathways for water intrusion. This compromises the pan's ability to collect and redirect water, which is its primary purpose.***

4. Once these steps are complete, you are ready to continue with door installation. Refer to the "Brickmold Door Installation Instructions" document regarding further information on this.

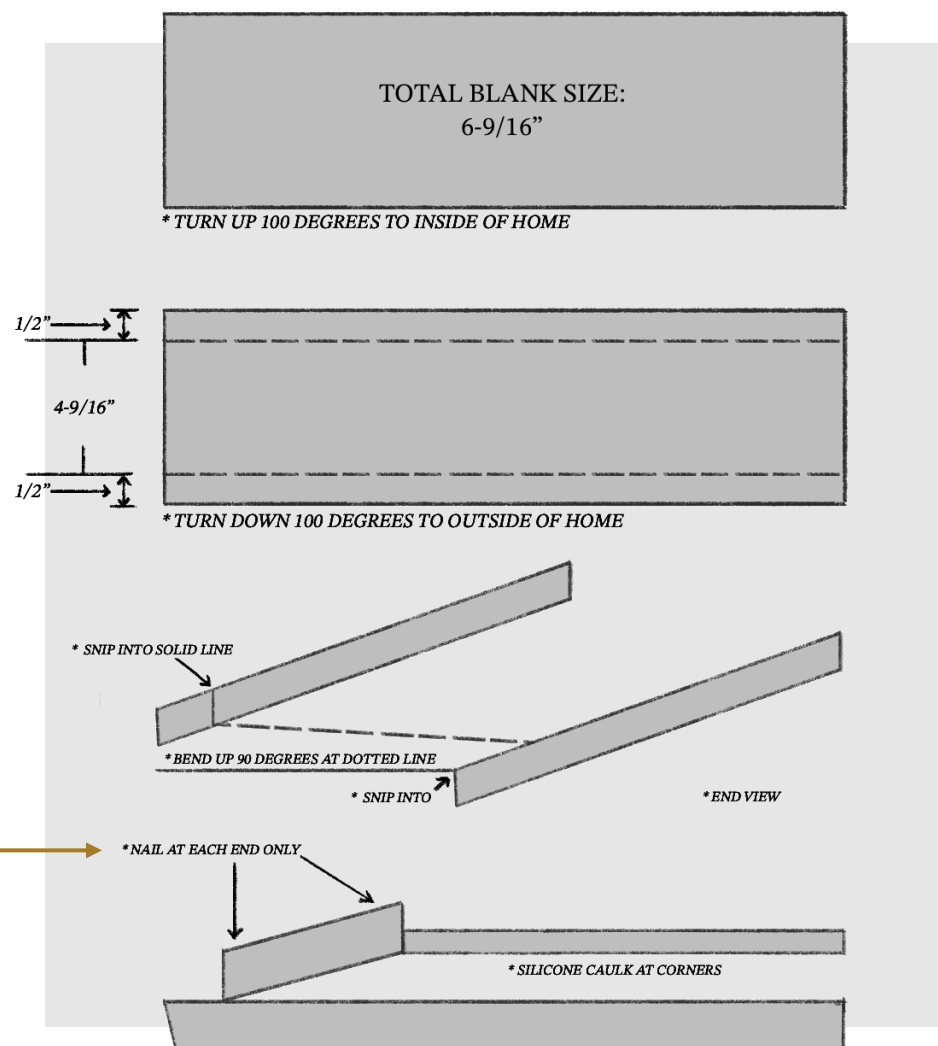

LAST UPDATED: September 2, 2025