
EXTRUDED DRIPCAP INSTALLATION

MOUNT WITH ½" SIDE OF DRIPCAP TO THE TOP AS LOW AS POSSIBLE, YOU SHOULD BE ABLE TO LET IT REST ON TOP OF THE MOUNTING FLANGE, CENTER THE DRIPCAP SO 2.5 INCHES WILL BE ON BOTH SIDES PAST THE DOOR FRAME. INSTALL WITH METAL SCREWS ABOUT 6 INCHES APART,

ONCE THE DRIPCAP IS INSTALLED APPLY CAULKING ACROSS THE TOP WHERE THE DRIPCAP MEETS THE UNIT.

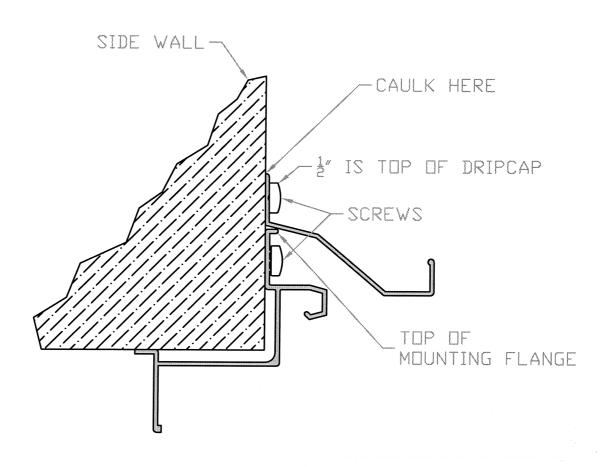

DVN BYSNI DATE 7-11-11	REV			ВҮ	DATE	•
<u> </u>						STANDARD TOLERANCE UNLESS OTHERWISE
CHKD BY Ry DATE 7-12-4						UNLESS OTHERWISE
ELIXIR EXTRUDED DRIPCAP INSTALLAT						PLOT SCALE DNS BREAK SHARP CORNERS
1300 POPE DRIVE DOUGLAS GA. 31533	PART	*	MATERIAL	FINISH		UNNOTED VALLS