

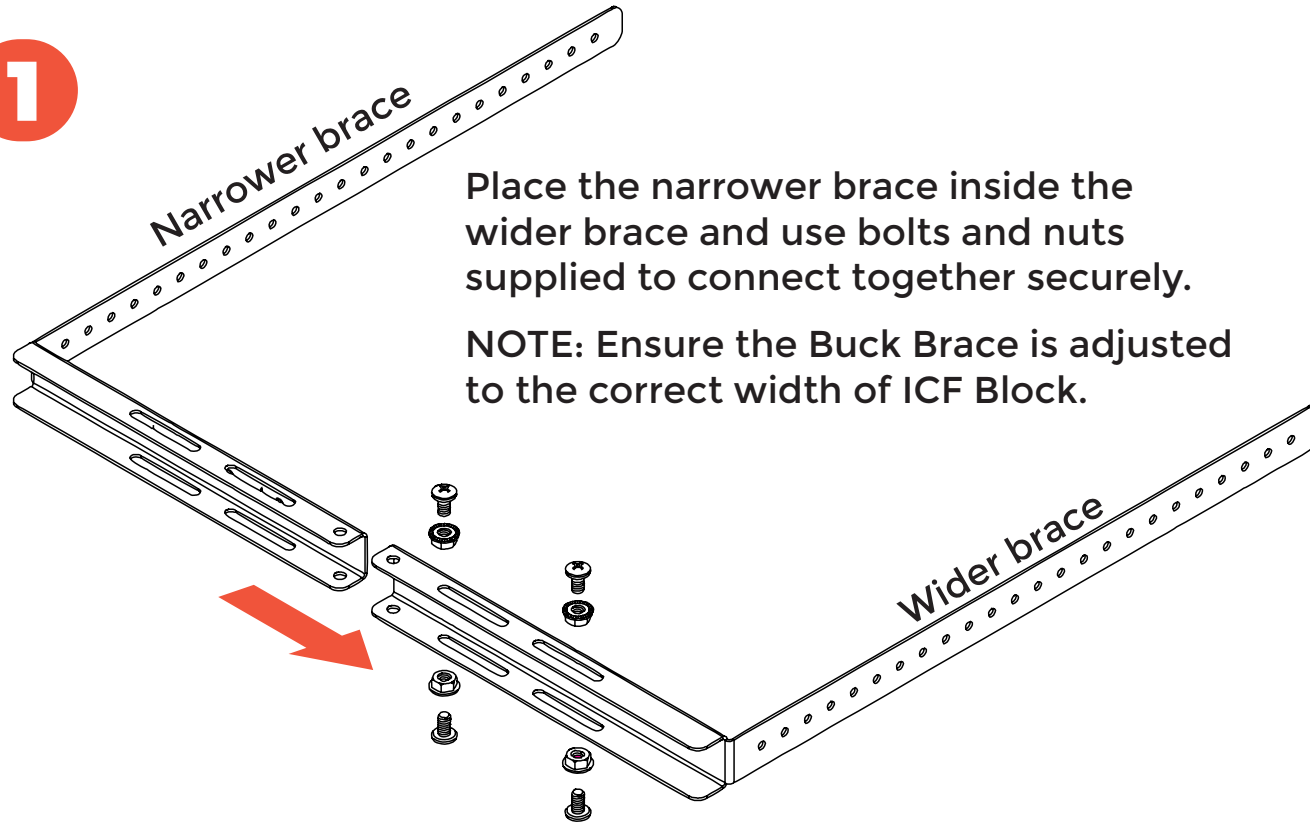


burmon **BUCK BRACE** INSTALLATION & FIXING GUIDE

1

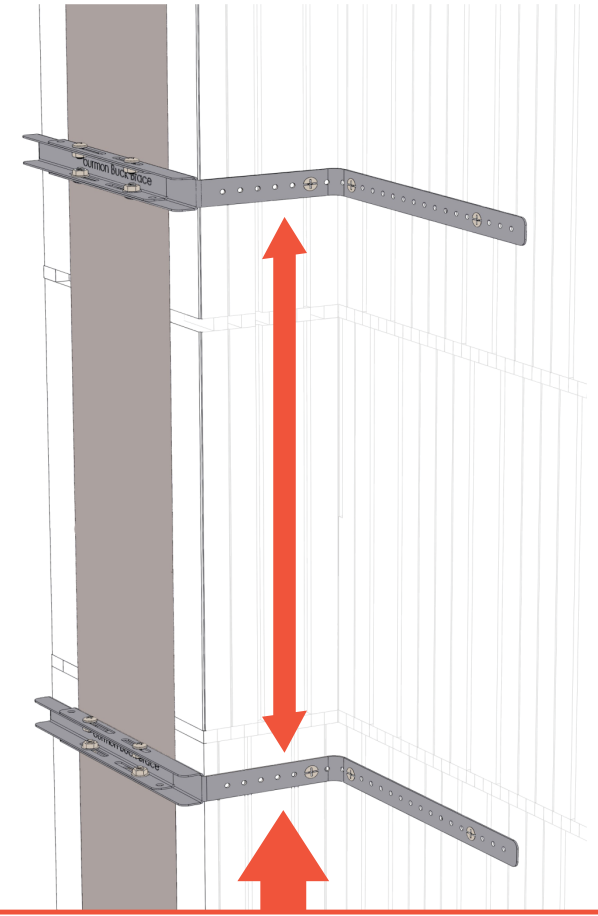

2

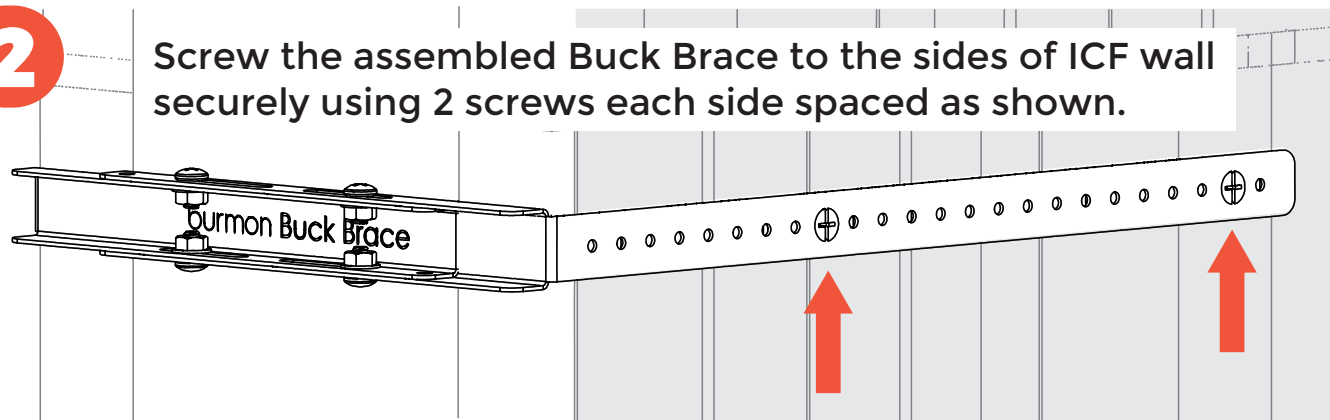

IMPORTANT NOTE: The Buck Brace shall be installed no less than 2 feet apart on a 6-inch core ICF Block and 18 inches apart on an 8-inch core ICF block. This minimum distance between braces will ensure adequate window and door opening bracing.