


Wall Mounted Camera

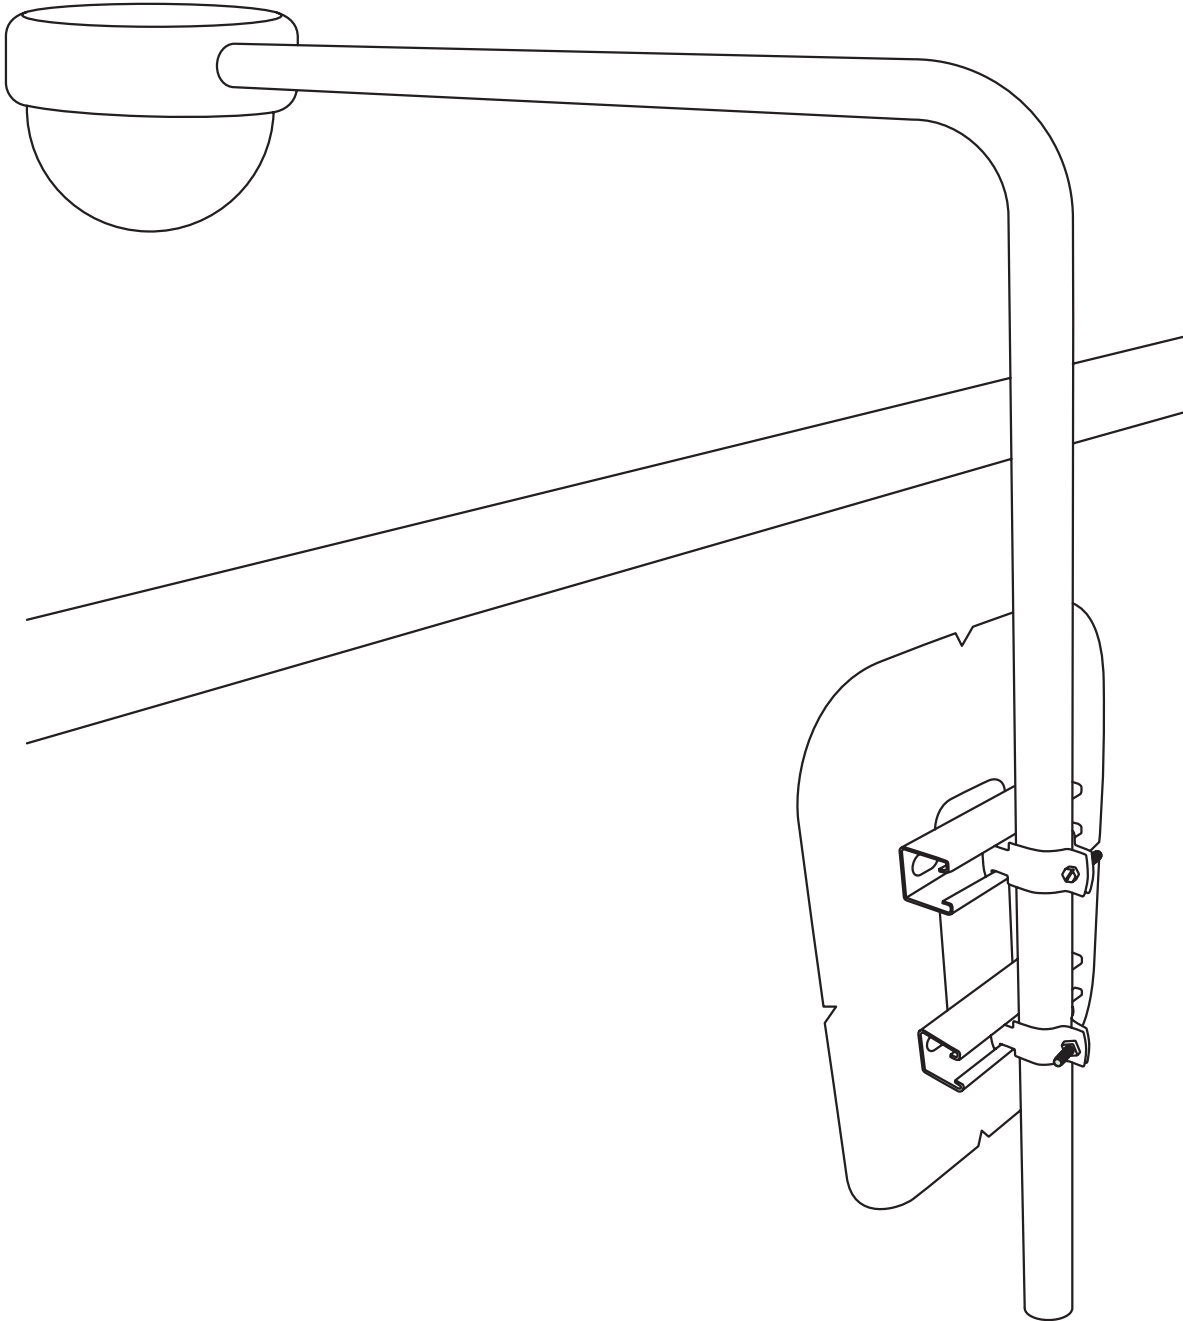


CAM 0530 Install Instructions




CAM 0530 Install Instructions

Step 1

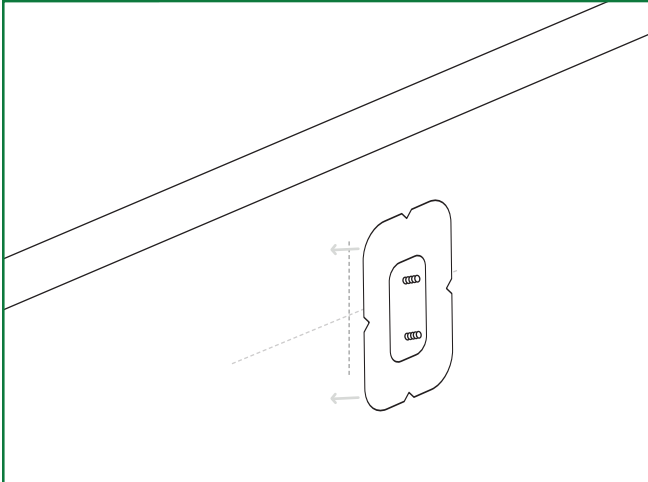


Align the U-Anchor on the parapet wall as per design requirements and attach the U-Anchor according to the install instructions provided by Anchor Products.

Step 2

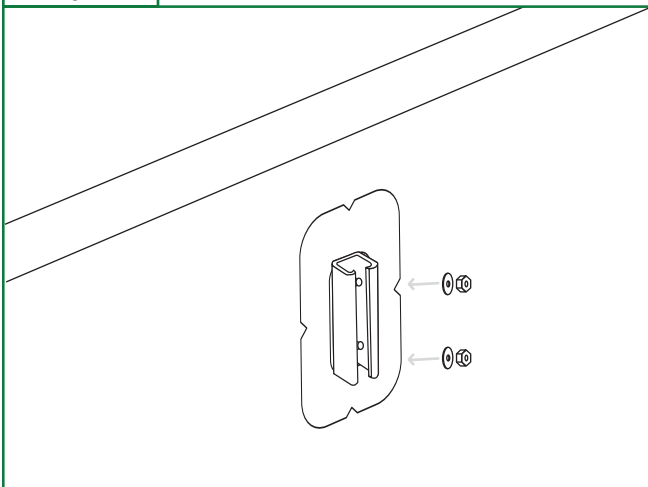

Attach the Three-sided Strut Bracket using the provided 3/8" Flat Washer and 3/8"-16 Flanged Nut. Tighten to 20 ft/lbs.


Step 3

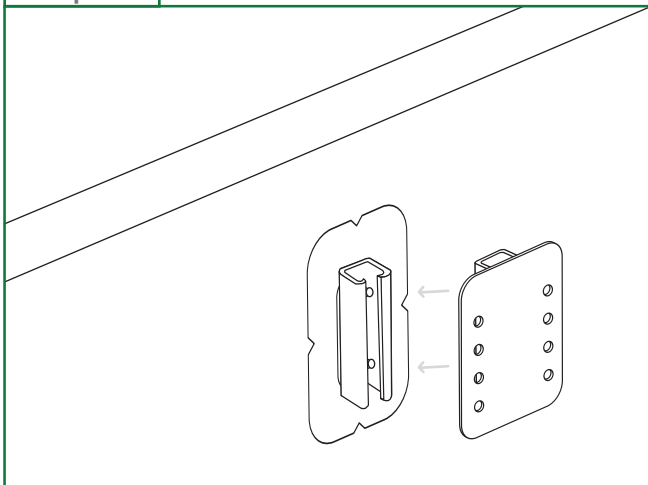

Secure the Attachment Plate to the Three-sided Strut Bracket using 3/8"-16 Spring Nuts and 3/8"-16 Stainless Steel Flathead Bolts.

CAM 0530 Install Instructions

Step 4

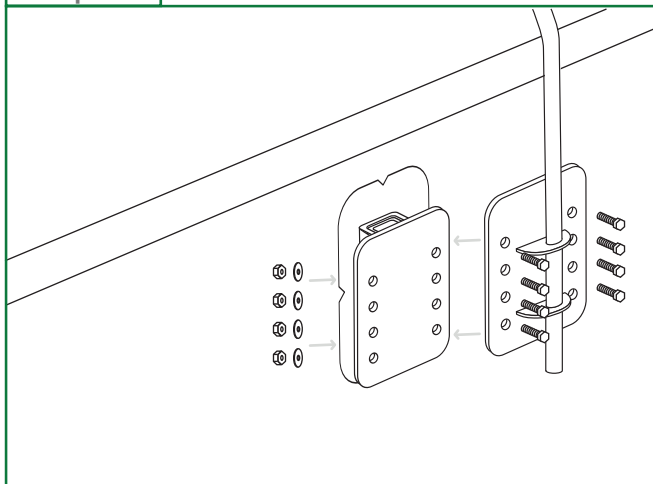


Secure the pre-assembled Camera Post and Plate to the previously attached plate using a minimum of 3/8" Flat Washers on each side of the plate and 3/8"-16 Nuts and 3/8"-16 Bolts.




CAM 0530 Install Instructions

Step 1

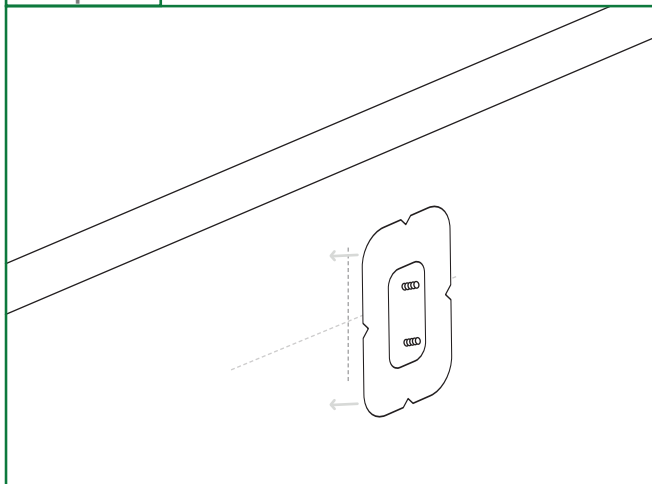


Align the U-Anchor 3000 series vertically, and install the U-Anchor attachment according to the instructions provided by Anchor Products.

Step 2

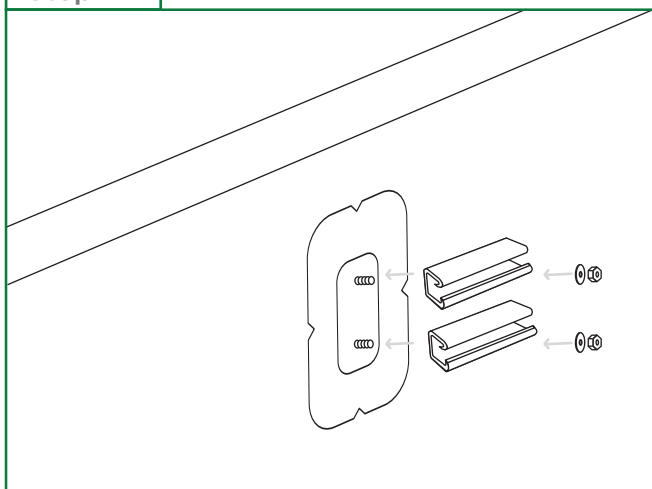

Attach the two pieces of channel strut horizontally. (One over the top bolt and the second over the bottom bolt.), then secure the channel strut using the provided stainless steel washer and nut.


Step 3

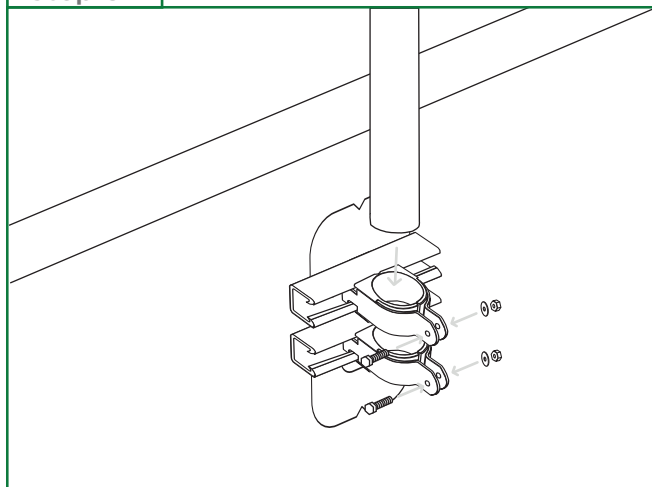

Secure the provided round pipe using properly sized pipe clamps.



CAM 0530 Install Instructions

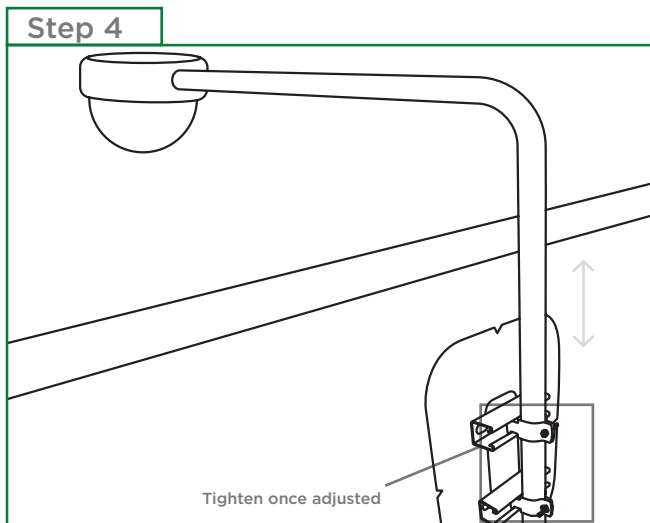

Position the height as needed and tighten the clamps.