


Electrical Box Wall Mount

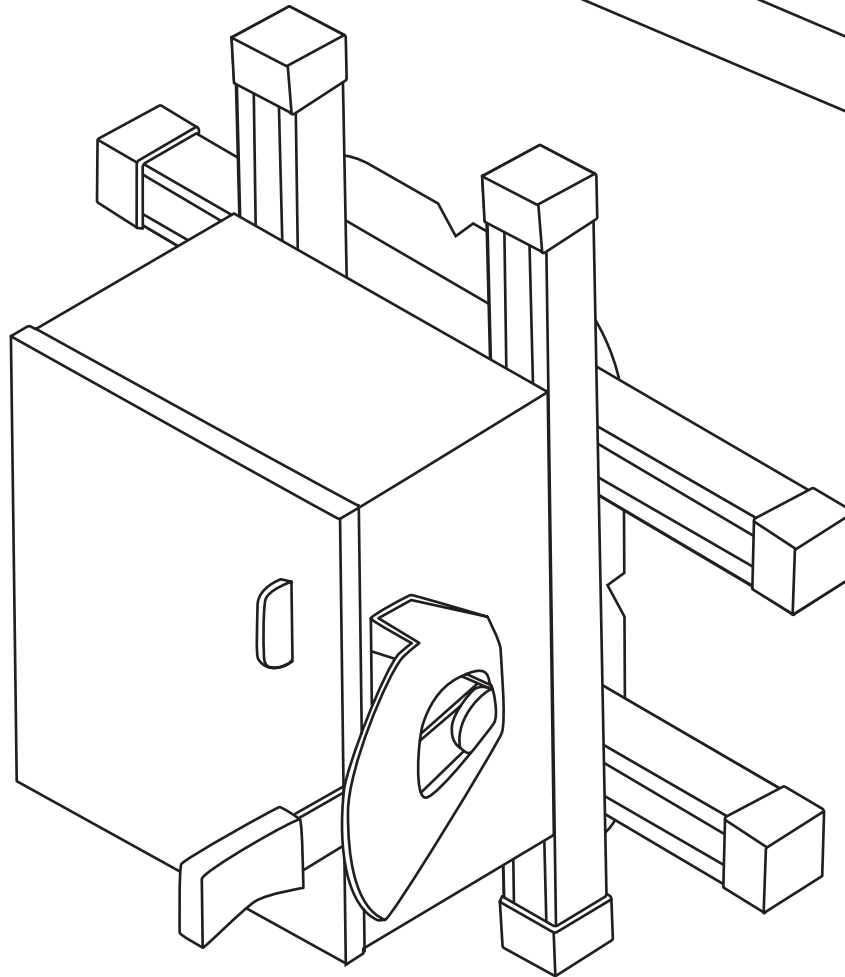


EBK 0920 Install Instructions




EBK0920 Install Instructions

Step 1

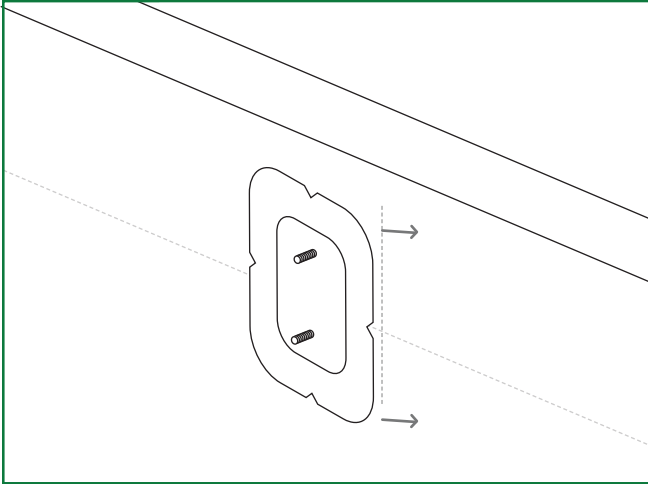

Align the U-Anchor on the parapet wall as per design requirements, and attach the U-Anchor according to the install instructions provided by Anchor Products.


Step 2

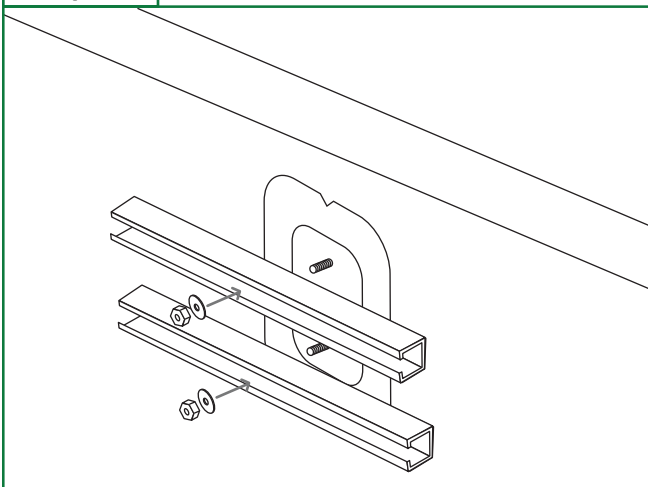

Install the 5/8" Strut horizontally to the previously installed U-Anchors as shown, using 3/8" Flat Washers and 3/8"-16 Flanged Nuts.

Tighten to 20 ft/lbs.


Step 3

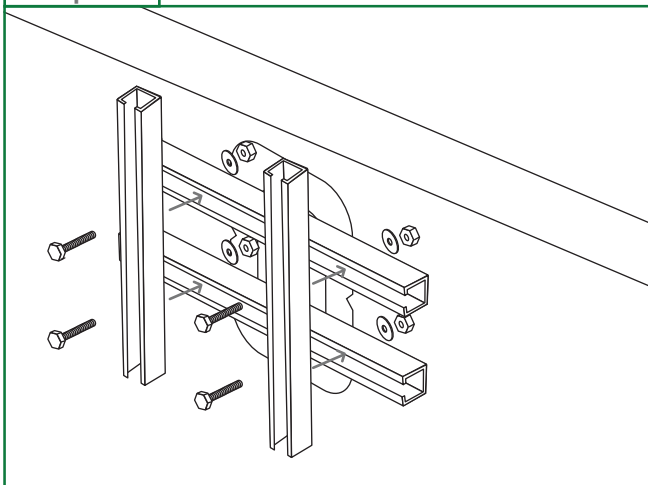

Install the 3/16" Vertical Strut to allow for dimensional adjustability. Secure by inserting 3/8"-16 Spring Nut into the Horizontal Strut channel and fasten the Vertical Strut using 3/8"-16x1" Bolts and 3/8" Stainless Steel Flat Washers.

EBK 0920 Install Instructions

Step 4

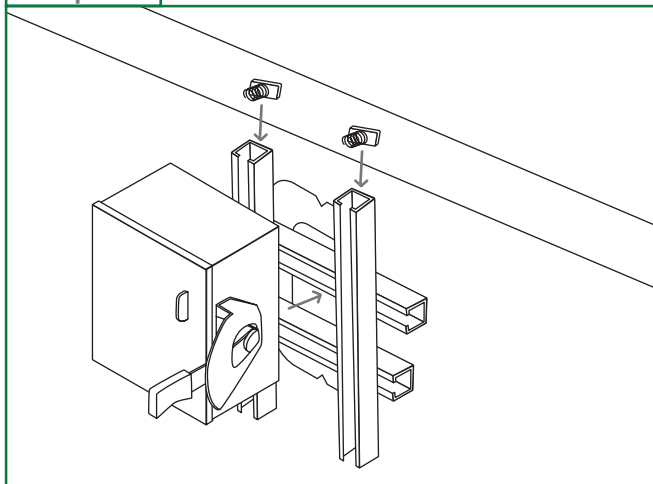

Insert 4 additional Spring Nuts in to the 13/16" channel. Secure the box with compatible bolts through the back of the box using the fastening holes provided.

