


Existing Mechanical Tie-Down INSTALL INSTRUCTIONS

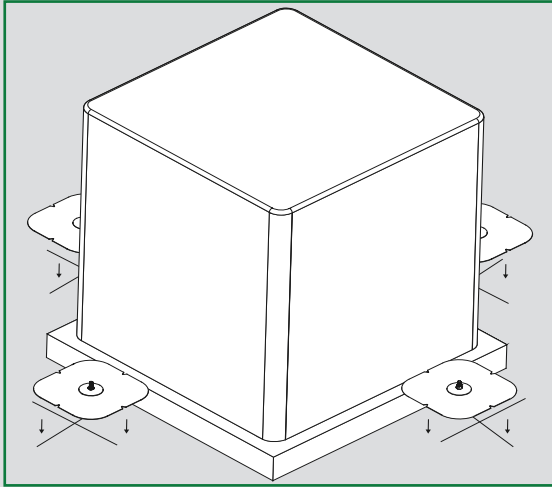


**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Before beginning installation, confirm the manner and location in which the 3/16" stainless steel cable will connect to the equipment. Use only hand tools during installation. For further assistance, contact us.




Step 1: Install the U-Anchor

- Follow U-Anchor Install instructions provided by Anchor Products.
- Ensure compliance with roofing manufacturer requirements.
- Meet all applicable requirements as per engineered design.

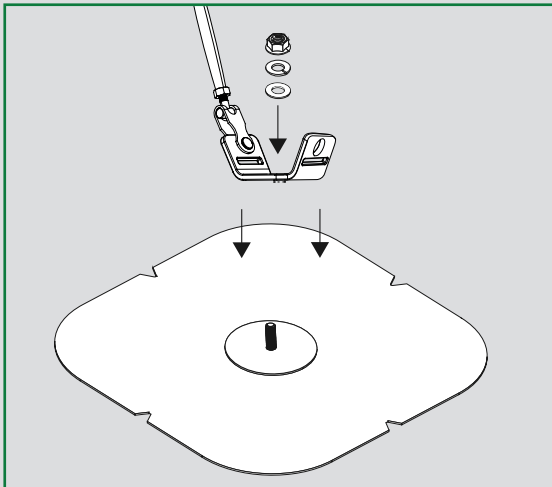

Step 2: Secure the 30/30 Bracket with Cable

- Place the bracket with the attached cable onto the U-Anchor bolt.
- Loosely secure the washer and nut onto the bracket and bolt.

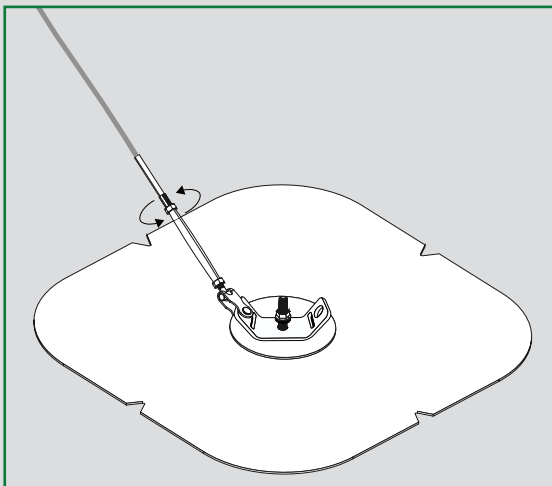

Step 3: Prepare the Turnbuckle


- Extend the turnbuckle to allow for proper tensioning later.

Existing Mechanical Tie-Down INSTALL INSTRUCTIONS




**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Before beginning installation, confirm the manner and location in which the stainless steel cable will connect to the equipment. Use only hand tools during installation. Contact Anchor Products for further assistance.

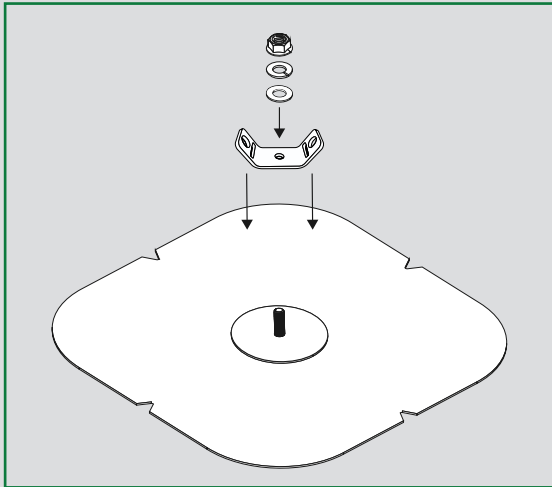


Step 4: Secure the Opposing 30/30 Bracket

- Position the next 30/30 bracket without an attached cable over the opposite U-Anchor bolt.
- Loosely secure the washer and nut onto the bracket.

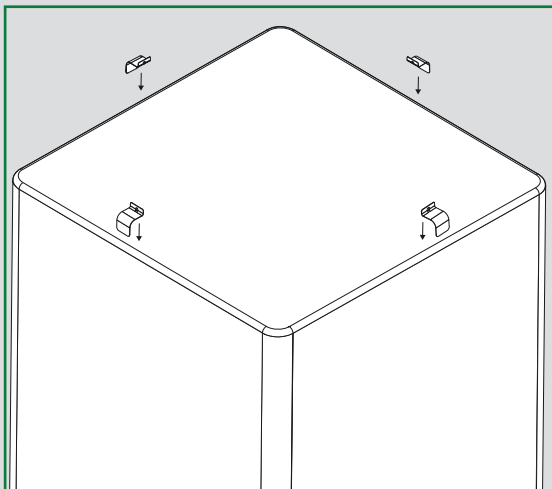

Step 5: Apply Edge Protection Bracket

- Align the bracket directly in line with the two opposing U-Anchors on either side of the equipment.
- Manually shape the bracket to follow the contour of the equipment's corner.
- Remove the adhesive backer and adhere the Edge Protection Bracket into the position

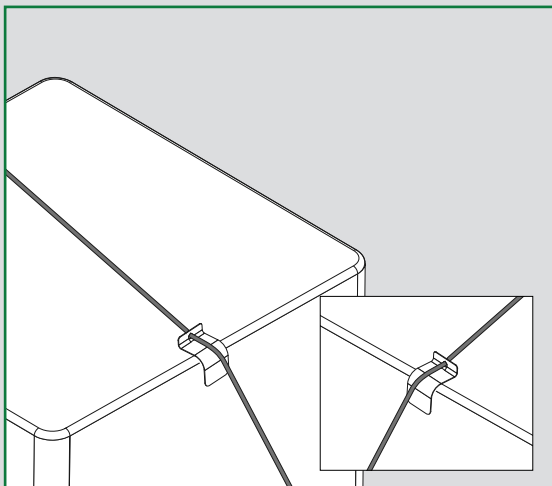

Step 6: Thread the Wire


- Insert the wire through the eyelet on the first and second Edge Protection Bracket.

Existing Mechanical Tie-Down INSTALL INSTRUCTIONS




**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Before beginning installation, confirm the manner and location in which the stainless steel cable will connect to the equipment. Use only hand tools during installation. Contact Anchor Products for further assistance.

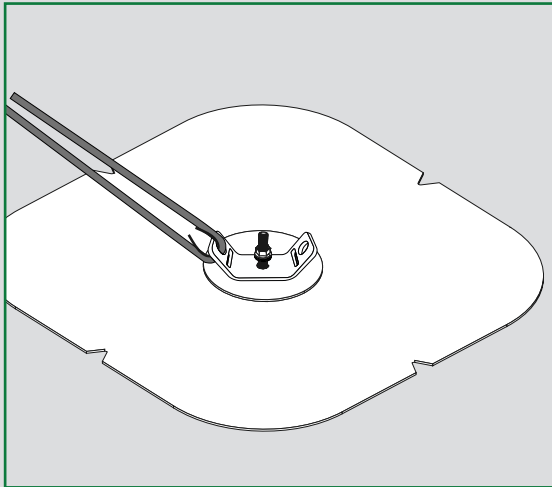


Step 7: Secure Wire Through Eyelet & Thimble

- Install thimble to 30/30 bracket eyelet on 30/30 Bracket.
- Thread the cable through the eyelet and thimble.
- Loop the wire rope back on itself and remove slack.

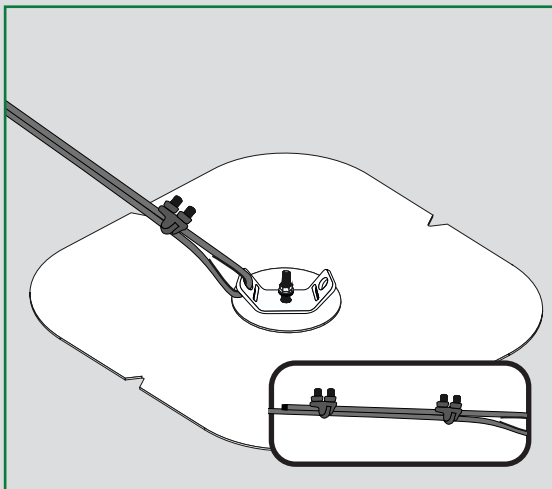

Step 8: Install the First Wire Rope Clip

- With the cable tight, secure the first wire rope clip as close to the opposing 30/30 bracket as possible.
- Wire rope clips should be installed with the “nut side” on the live end and the u-bar on the dead or cut end.
- Firmly tighten the nuts evenly by alternating.

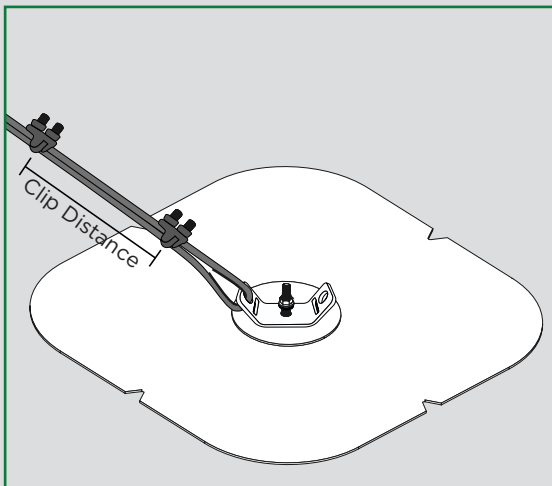

Step 9: : Install the Second Wire Rope Clip


- Repeat step 8, securing the second wire
- *If the guy wire is **3/16” wire**, secure the second clip **3 3/4” above** the first clip.
- *If the guy wire is **5/16” wire**, secure the second clip **6 1/2” above** the first clip.

Existing Mechanical Tie-Down INSTALL INSTRUCTIONS



**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Before beginning installation, confirm the manner and location in which the stainless steel cable will connect to the equipment. Use only hand tools during installation. Contact Anchor Products for further assistance.

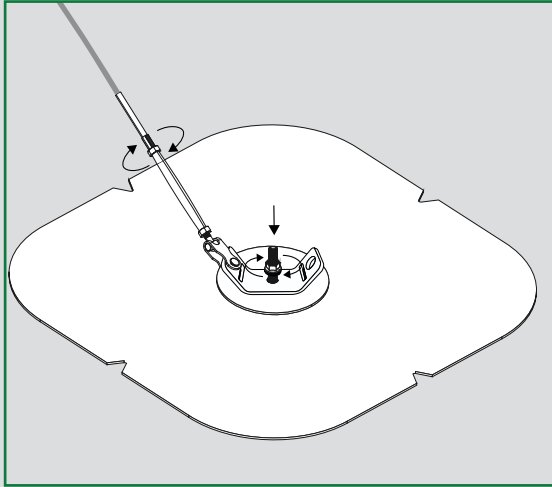

Step 10: Final Fastening & Adjustments

- Tighten nuts onto the U-Anchor bolts to 20 ft. lbs.
- Tighten the turnbuckle to desired tension using hand or tool hole in turnbuckle.
- Tighten secondary securing nut on both ends of the turn buckle to be tought.




Hoja de Anclaje Mecánico Existente

INSTRUCCIONES DE INSTALACION



**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Antes de comenzar la instalación, confirme cómo y dónde se conectará el cable de acero inoxidable de 3/16" al equipo. Use solo herramientas manuales. Para más ayuda, contáctenos.

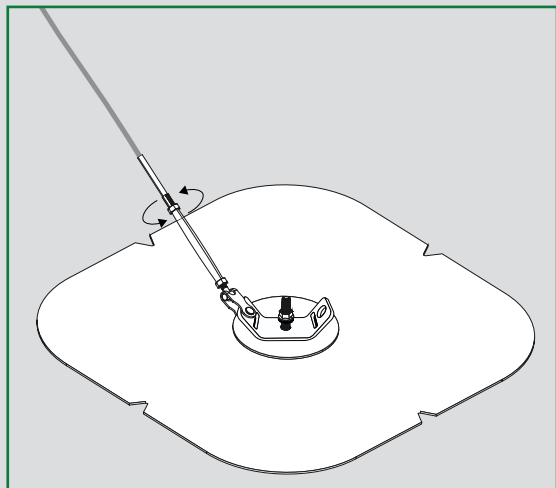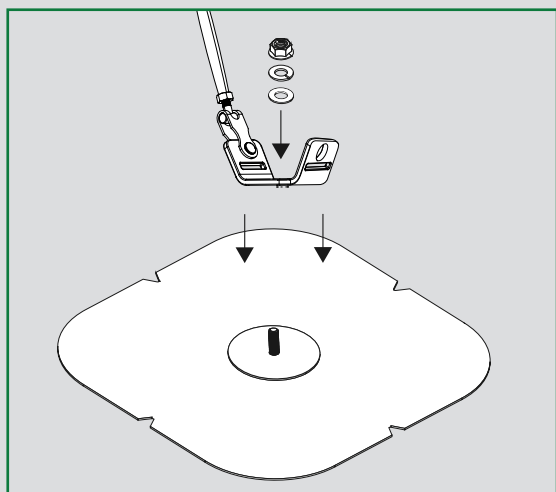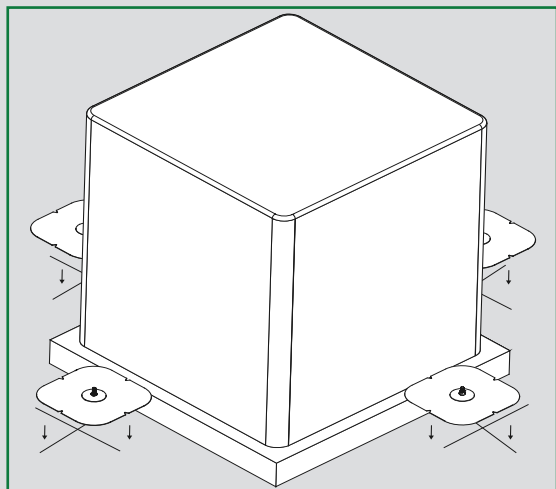

Paso 1: Instale el U-Anchor

- Siga las instrucciones de instalación del U-Anchor proporcionadas por Anchor Products.
- Asegúrese de cumplir con los requisitos del fabricante del sistema de techado.
- Cumpla con todos los requisitos aplicables según el diseño estructural.

Paso 2: Asegure el soporte 30/30 con el cable

- Coloque el soporte con el cable unido sobre el perno del U-Anchor.
- Fije sin apretar la arandela y la tuerca al soporte y al perno.

Paso 3: Prepare el tensor

- Extienda el tensor para permitir una tensión adecuada más adelante.


Hoja de Anclaje Mecánico Existente

INSTRUCCIONES DE INSTALACION




**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Antes de comenzar la instalación, confirme cómo y dónde se conectará el cable de acero inoxidable de 3/16" al equipo. Use solo herramientas manuales. Para más ayuda, contáctenos.

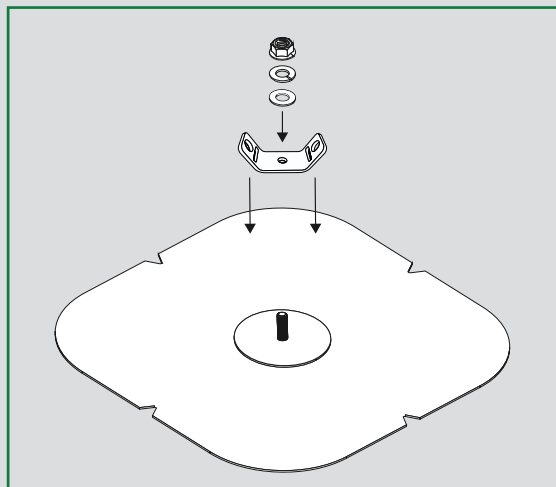


Paso 4: Asegure el soporte 30/30 opuesto

- Coloque el siguiente soporte 30/30 sin cable en el perno opuesto del U-Anchor.
- Fije sin apretar la arandela y la tuerca.

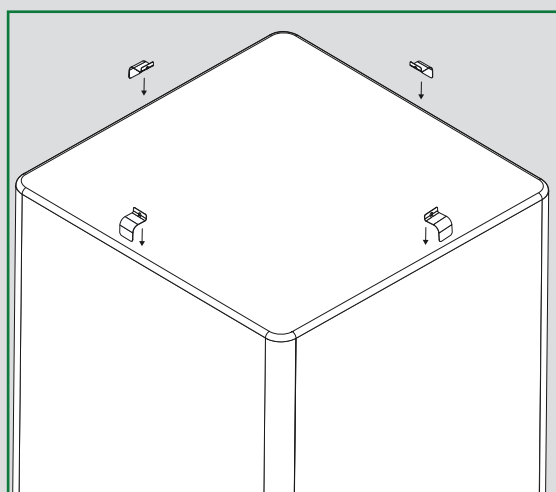

Paso 5: Aplique el soporte de protección de bordes

- Alinee el soporte directamente en línea con los dos U-Anchors opuestos a cada lado del equipo.
- Moldee el soporte manualmente para que siga el contorno de la esquina del equipo.
- Retire el protector adhesivo y adhiera el soporte de protección de bordes en su lugar.

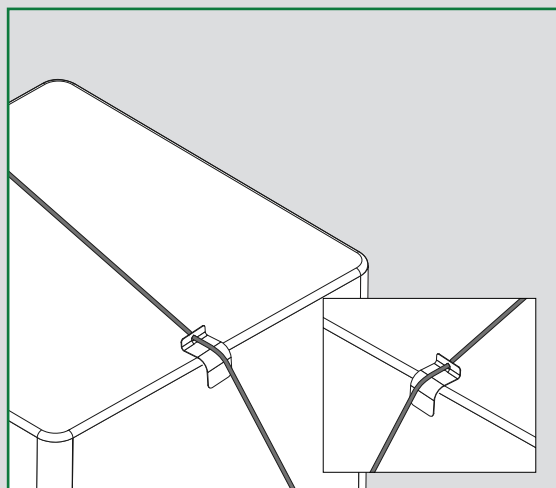

Paso 6: Pase el cable

- Inserte el cable a través de los ojales del primer y segundo soporte de protección de bordes.


Hoja de Anclaje Mecánico Existente

INSTRUCCIONES DE INSTALACION




**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Antes de comenzar la instalación, confirme cómo y dónde se conectará el cable de acero inoxidable de 3/16" al equipo. Use solo herramientas manuales. Para más ayuda, contáctenos.

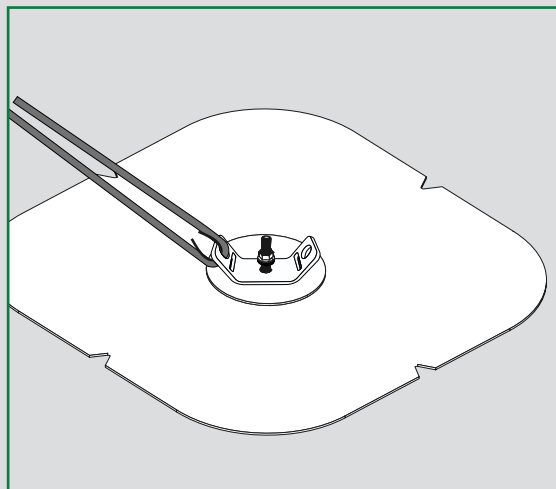


Paso 7: Asegure el cable a través del ojal y guardacabos

- Instale el guardacabos en el ojal del soporte 30/30.
- Pase el cable por el ojal y el guardacabos.
- Forme un bucle con el cable y elimine la holgura.

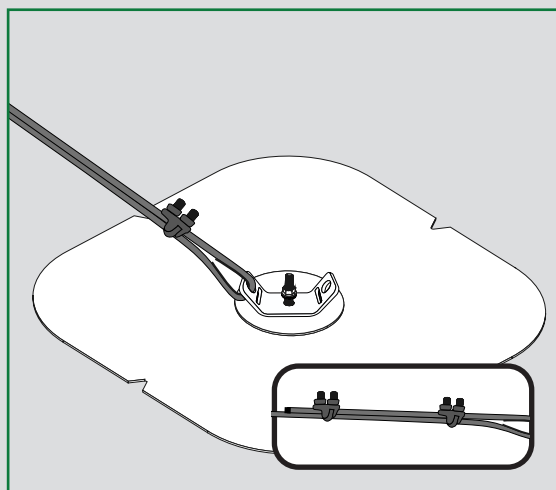

Paso 8: Instale la primera abrazadera para cable

- Con el cable tenso, instale la primera abrazadera lo más cerca posible del soporte opuesto.
- Las abrazaderas deben instalarse con el lado de la tuerca en el extremo activo y la "U" en el extremo muerto o cortado.
- Apriete uniformemente las tuercas alternando.

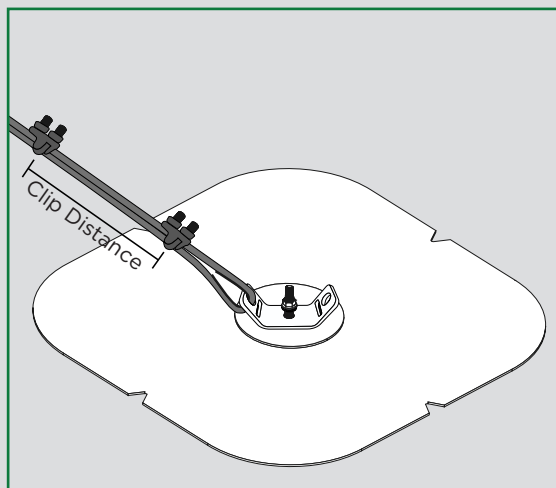

Paso 9: Instale la segunda abrazadera

- Repita el paso 8 para instalar la segunda abrazadera.
- *Si el cable es de **3/16"**, instale la segunda abrazadera a **3 3/4"** por encima de la primera.
- *Si el cable es de **5/16"**, instale la segunda a **6 1/2"** por encima de la primera.


Hoja de Anclaje Mecánico Existente

INSTRUCCIONES DE INSTALACION



**ANCHOR
PRODUCTS®**
Connections That Last

IMPORTANT: Antes de comenzar la instalación, confirme cómo y dónde se conectará el cable de acero inoxidable de 3/16" al equipo. Use solo herramientas manuales. Para más ayuda, contáctenos.

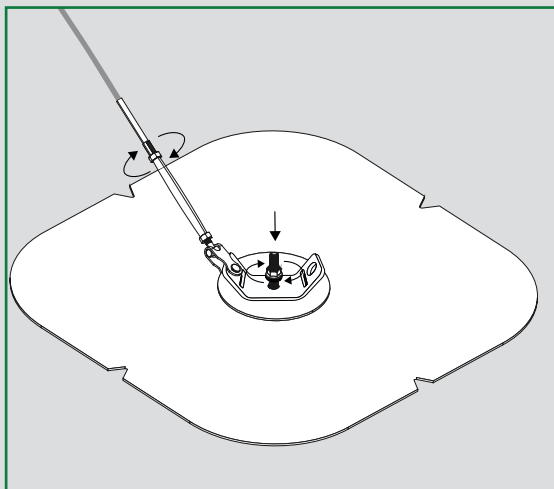

Paso 10: Ajustes finales

- Apriete las tuercas en los pernos del U-Anchor a 20 ft. lbs.
- Apriete el tensor hasta lograr la tensión deseada usando la mano o el orificio de herramienta.
- Apriete la tuerca de seguridad en ambos extremos del tensor.