

Apollo

SCREENING SYSTEM

INSTALLATION GUIDE





Installation Guide

Cut. Clip. Complete.

The Apollo Screening System is designed for easy installation while maintaining robust construction. Follow these steps for a seamless setup:

- 1 Align and Secure Brackets:** Affix the proprietary Apollo Screening Brackets to the floor and ceiling. Use a laser level for perfect alignment.
- 2 Measure & Cut:** Tailor the Apollo Aluminium Screening Battens (supplied as a base palette and cover plate) to the required dimensions. Ensure to account for any changes in floor and ceiling height across the screen width.
- 3 Install the Base Plate:** Position the Apollo Two-Piece Base Plate around the brackets at both ends and fasten it securely through the side walls.
- 4 Attach the Cover Plate:** Simply Clip the Apollo Two-Piece Cover Plate onto the secured Back Plate for a seamless, concealed finish.

Tools required for installation




DROP SAW



TAPE MEASURE



SPIRIT LEVEL



DRIVER BIT



DRILL / DRIVER

SELF TAPPING
SCREW


Instructions

Step #1 | **Align and Secure Brackets**

Affix the proprietary Apollo Screening Brackets to the floor and ceiling.



TIP! Use a line laser to ensure brackets align perfectly.

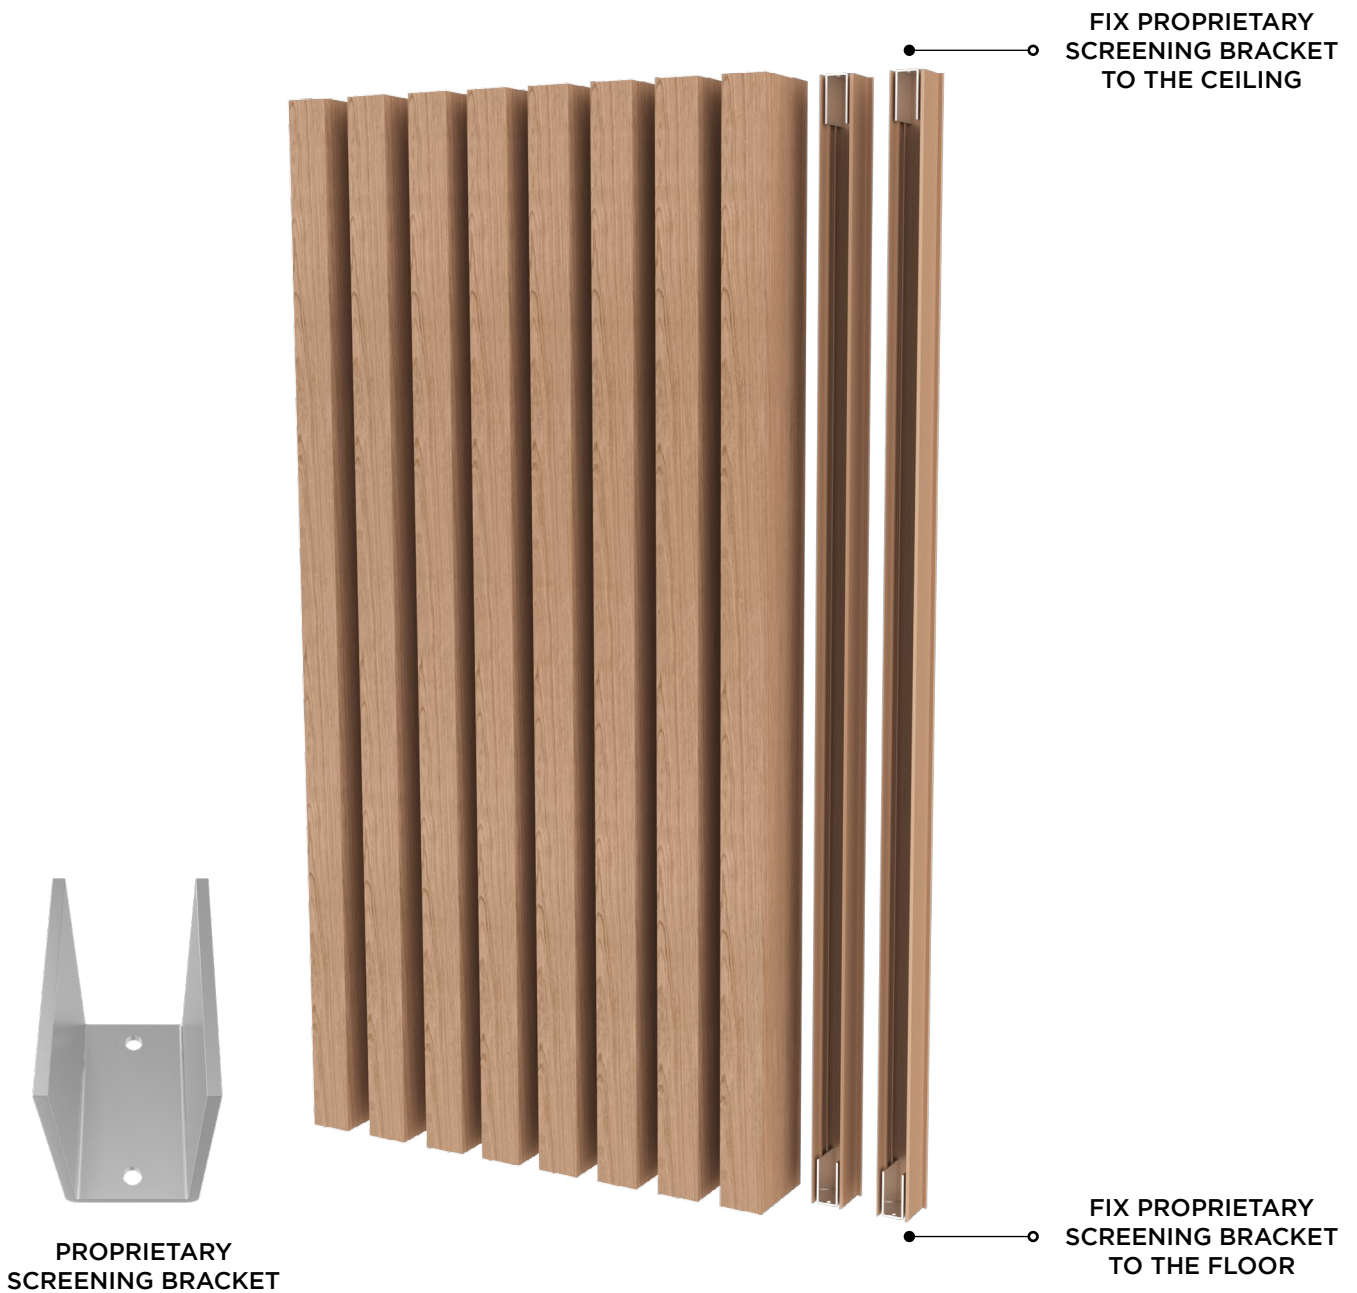




Step #2 | Measure & Cut

| Trim the base plate to suit your span


Tailor the Apollo Aluminium Screening Battens (supplied as a base palette and cover plate) to the required dimensions. Ensure to account for any changes in floor and ceiling height across the screen width.



TIP! For best performance, the base plate should run the full length of your span.

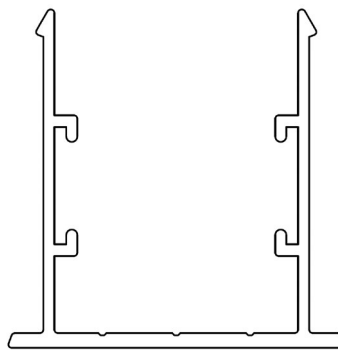


| Trim the cover plate to suit your measured span

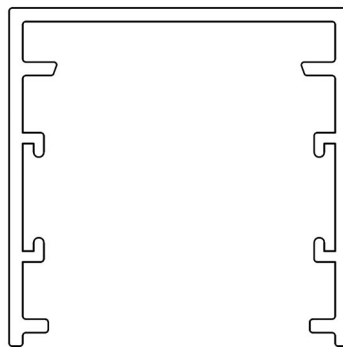


Step #3 | **Install the Base Plate**

Position the Apollo Two-Piece Base Plate around the brackets at both ends and fasten it securely through the side walls.

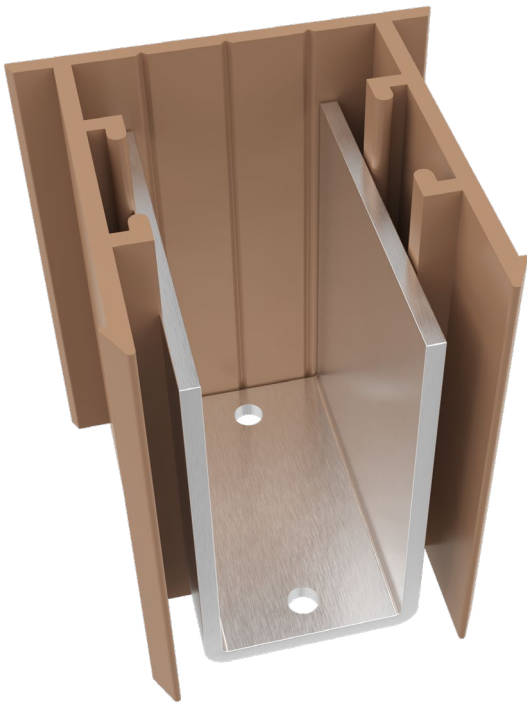

THIS IMAGE ILLUSTRATES THE BASE PLATE WRAPPING AROUND THE BRACKET

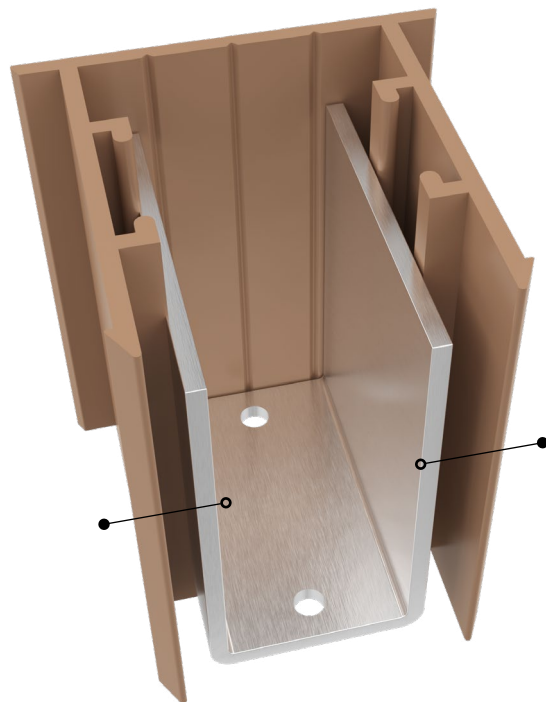

FIXING THROUGH SIDE WALL ON BOTH SIDES. ENSURE YOU UTILISE A SUITABLE SELF-TAPPING SCREW WITH A FLAT HEAD.

Step #4 | **Attach the Cover Plate**

Simply clip the Apollo Two-Piece Cover Plate onto the secured Back Plate for a seamless, concealed finish.



TIP! A white rubber mallet must be used to avoid damaging the battens.



Step #5 | **Repeat the process**

Continue the same process for the remainder of your Apollo Screening battens, ensuring the centres of the installed battens match the centres detailed in the specification.



TIP! In some instances, it may be worth measuring the width of your external application prior to beginning the installation process and confirming the best yield for batten centres to your specification that will work with the width of your external application.



NEED HELP?! Have questions? Need support with the installation? Please contact your local Apollo consultant or reach out to the team on hello@mbsarchitectural.com.au or call us direct on **03 9580 7800**.



Apollo

03 9580 7800

hello@mbsarchitectural.com.au

VIC | 7 Haymer Court, Braeside 3195

QLD | 13 Pease Court, Bethania 4205