




IMI CORNELIUS INC ■ One Cornelius Place ■ Anoka, MN 55303-6234

Telephone (800) 238-3600

Facsimile (800) 535-4231

## WHEEL KIT (P/N 316290000) ON UNIVERSAL 750 DISPENSER

These Instructions outline installation of Wheel Kit (P/N 316290000) on the Universal 750 Dispenser to make it portable. Retain these Instructions as part of your equipment manual.

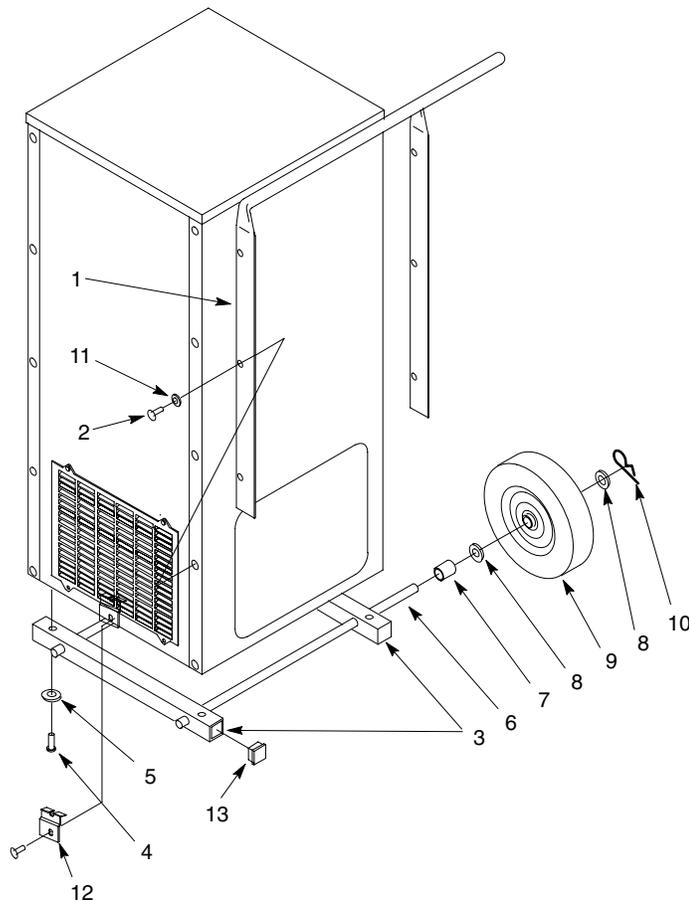

**UNIVERSAL 750 DISPENSER**

**IMPORTANT: Only qualified Personnel should install this Kit.**

1. Unpack and inspect this Kit. Make sure all items in Kit are present and in good condition.

<b>TABLE 1. LOOSE-SHIPED PARTS</b>			
<b>Item No.</b>	<b>Part No.</b>	<b>Name</b>	<b>Qty.</b>
1	316143000	Handle	1
2	320106000	Screw, Thread Rolling, Phil Pan Hd, No. 6-32 By 1-in. Long	6
3	316286000	Frame (Axle Support)	2
4	20409	Cap Screw, Hex Hd, 5/16-18by 1 3/4 in. Long	4
5	68833001	Lock Washer, Spring, 5/16 O. D.	4
6	187415000	Axle Shaft	2
7	316288000	Spacer	4
8	187414000	Flat Washer	8
9	189952000	Wheel	4
10	398034400	Hitch Pin	4
11	344088000	Flat Washer, Stainless Steel No. 6	6
12	0545	Clip, Grille	2
13	317489000	End Cap	4

2. Remove and discard all except the top and bottom wrap retaining screws from each back corner of the Dispenser. Install HANDLE (item 1) on the Dispenser using SCREWS (item 2) and FLAT WASHERS (item 11) to secure handle.



**CAUTION: On Dispensers that are in operation, the power cord *must* be unplugged from electrical outlet and *care* must be taken not to tilt the Dispenser too far spilling water out of the evaporator tank. Blocks should be used to raise the Dispenser while the Wheel Kit is being installed.**

3. Remove leveling legs (if used) from each corner of the Dispenser base.
4. Install FRAMES (item 3) on each side of the Dispenser base as shown in illustration. Secure frames to base using CAP SCREWS (item 4) and LOCK WASHERS (item 5).
5.
  - A. Remove two bottom screws securing bottom of the side access grille to the Dispenser cabinet.
  - B. Install CLIP (item 12) on the Dispenser to secure the bottom access grille as shown in illustration.
  - C. Repeat preceding steps A and B to install other CLIP (item 12) to secure bottom of the other side access grille.