


# INSTALLATION INSTRUCTIONS ED300 ARCO SPLASH SPLASH GUARDS

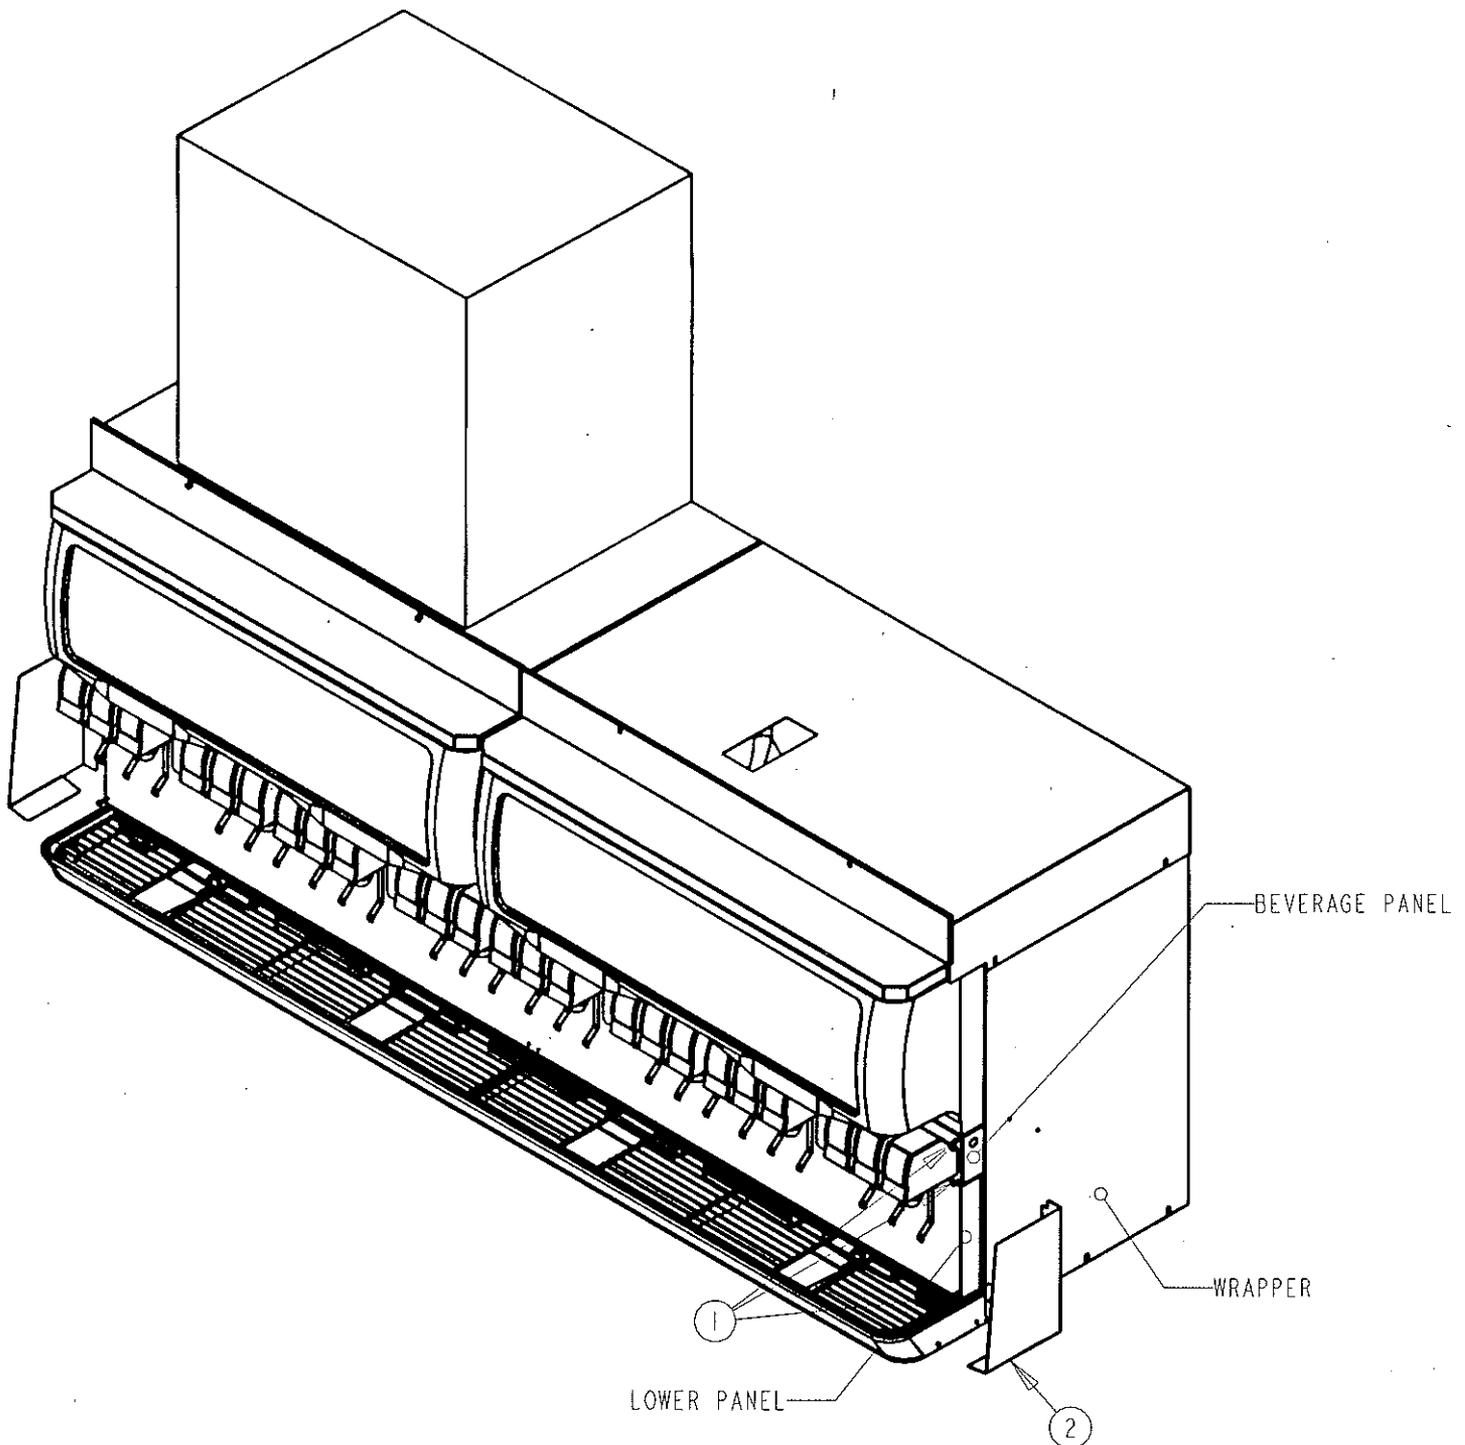

## ASSEMBLY INSTRUCTIONS

- 1) LOOSEN (6) 8-32 SCREWS SECURING BEVERAGE AND LOWER PANEL TO WRAPPER SO THAT THERE IS A 1/8 GAP BETWEEN THE PANELS AND WRAPPER.
- 2) SLID SPLASH GUARDS IN BETWEEN WRAPPER AND PANELS. SPLASH GUARD SHOULD EXTEND PAST WRAPPER APPROX. 1"
- 3) TIGHTEN 8-32 SCREWS SO SPLASH GUARD ARE SECURED IN PLACE.