

# INSTALLATION INSTRUCTIONS

## For Millennium Ground Lead Retrofit Kit

### SAFETY INSTRUCTIONS

**WARNING:**

Before starting installation, read and understand all safety label and warnings on the machine. Also review and understand all safety instructions in the owners, installation and service manuals.

**Failure to comply could result in serious injury, death or damage to the equipment.**

### QUALIFIED SERVICE PERSONNEL

**WARNING:**

Only trained and certified electrical, plumbing and refrigeration technicians should service this unit.

**All wiring and plumbing must conform to national and local codes. Failure to comply could result in serious injury, death or equipment damage.**

### SAFETY PRECAUTIONS

This unit has been specifically designed to provide protection against personnel injury. To ensure continued protection observe the following:

**WARNING:**

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

**Failure to comply could result in serious injury, death or damage to the equipment.**

**CAUTION:**

Always be sure to keep area around the unit clean and free of clutter.

**Failure to keep this area clean may result in injury or equipment damage.**


# INSTALLATION INSTRUCTIONS

This kit allows the user to add a ground wire to the sheet metal wrapper.


**Table 1. Kit Parts List**

Item	Part Number	Description	Qty.
1	70076	Hex Nut	1
2	750300240	Ground Lead	1
3	1450580001	Ground Label	1

1. Remove the black plastic merchandiser from the unit (620519202 - 6 flavor units and 620519201 - 4 flavor units).
2. Attach the #8 ring terminal of the provided ground lead to the RHS front screw joining the top and bottom wraps by using the provided hex nut (70076). See Figure 1.
3. Attach the 250 quick connect tab on the ground lug installed on the side of the main transformer - ref. deck assembly - See Figure 2. and Figure 3.
4. Apply the supplied ground label (1450580001) to the wrapper, as shown in Figure 3.

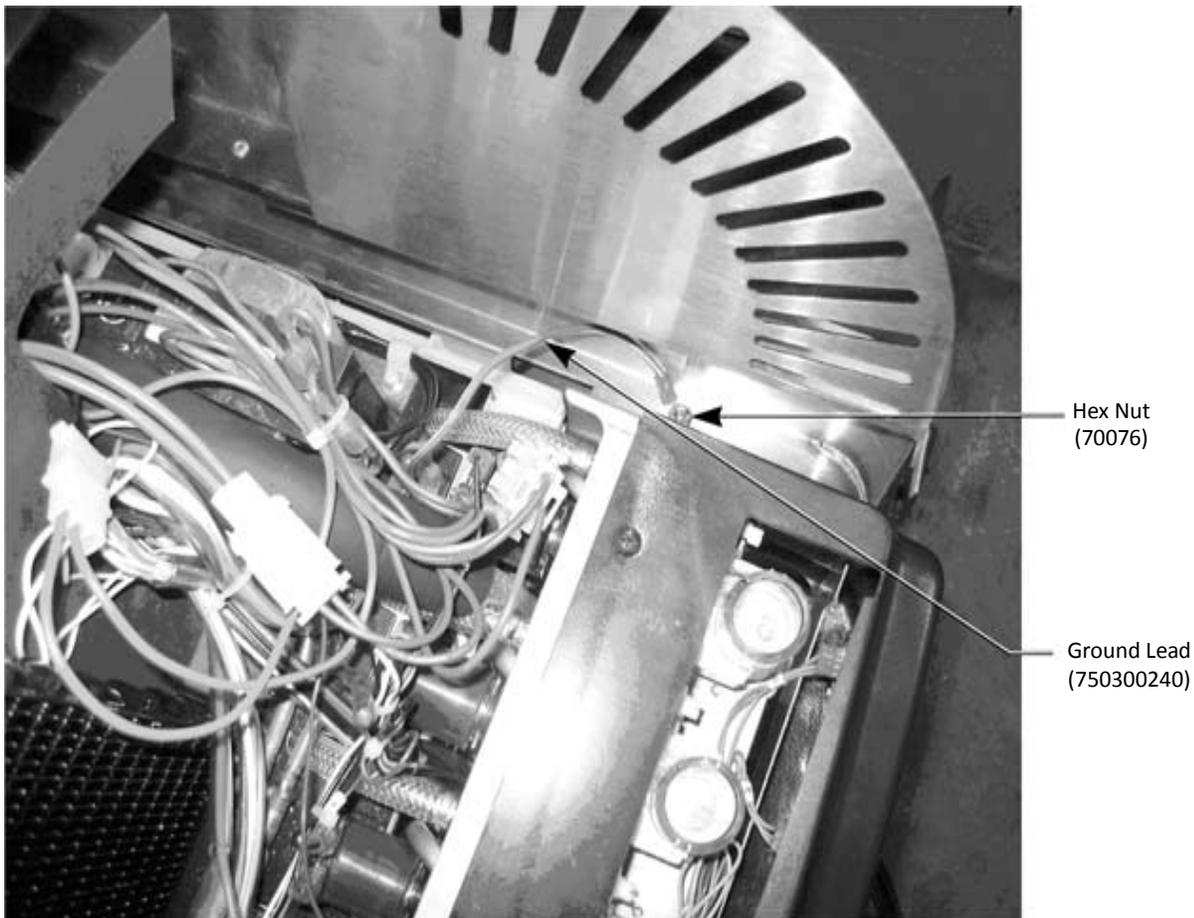


**Figure 1.**

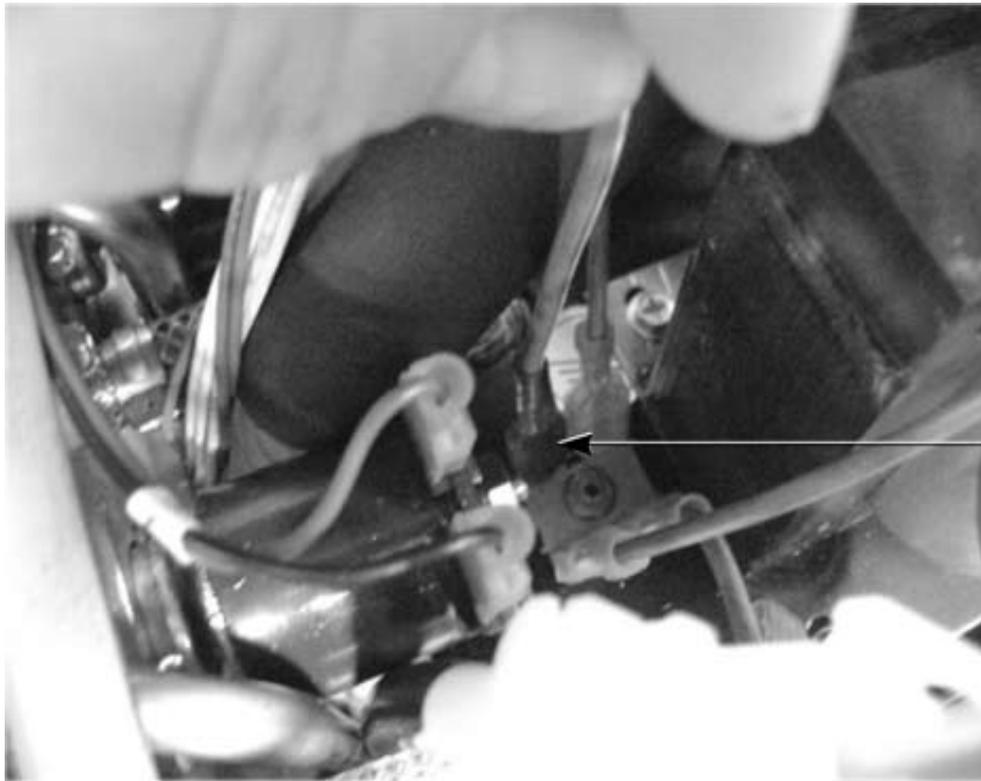

Attach Ground Lead Here

Figure 2.

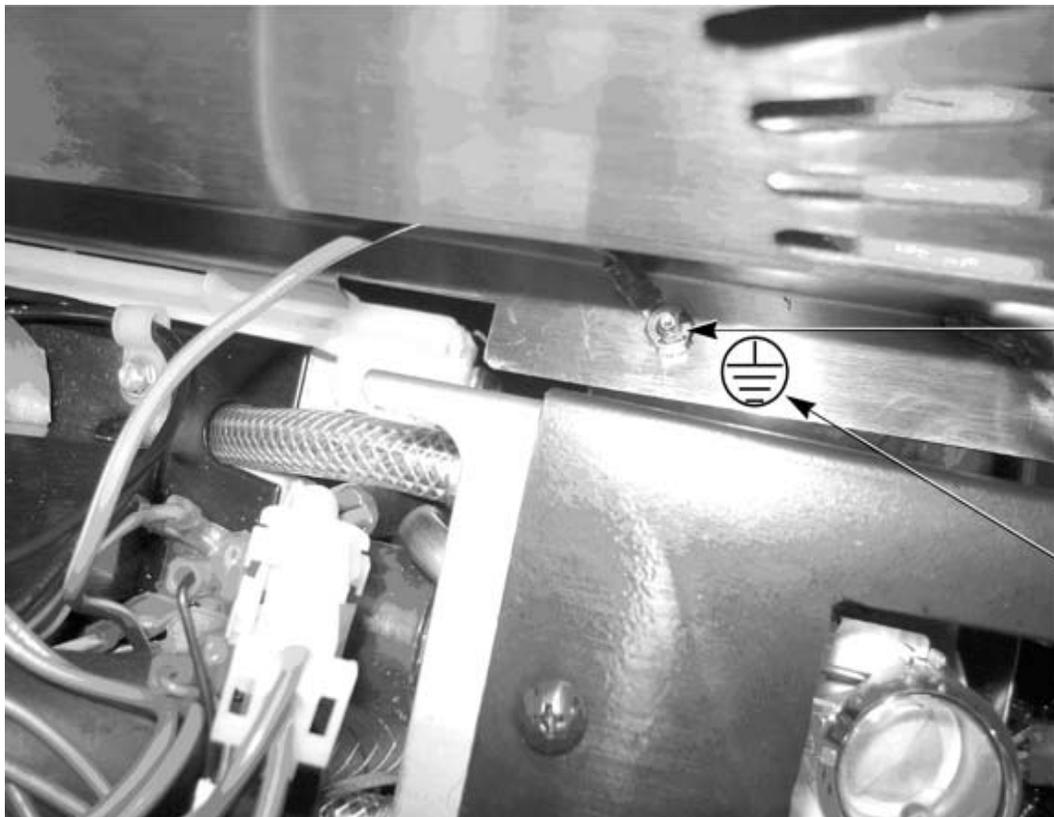

Hex Nut (70076)

Ground Label (145058001)

Figure 3.