


INSTALLATION INSTRUCTIONS

FIELD INSTRUCTIONS FOR KIT No. 629097545 (NON-COLDPLATE, QT)

WARNING:

Disconnect power to the unit before servicing. Follow all lock out/tag out procedures established by the user. Verify all power is off to the unit before performing any work.

Failure to comply could result in serious injury, death or damage to the equipment.

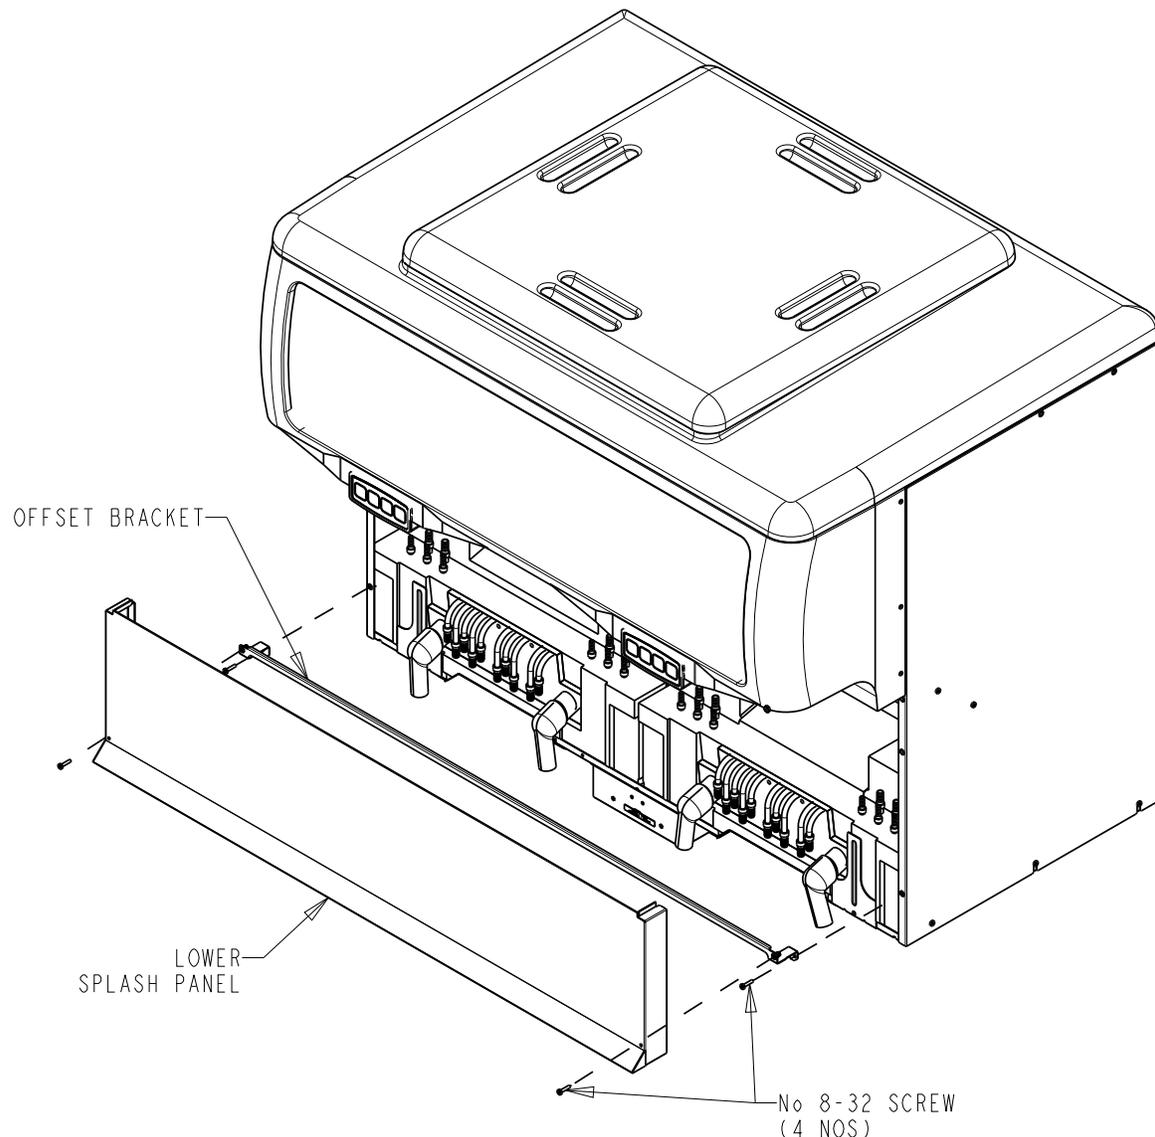

PROCEDURE:

If applicable, first remove the current splash panel from the unit. Then with the unit currently with no splash panel, fasten the offset bracket to the unit with two screws per the featured area in the diagram. Then, mount the splash panel to the unit and in front of the offset bracket. Make sure that the threaded areas of the offset bracket align with the mounting holes of the splash panel. Then fasten the splash panel to the offset bracket with the other two screws. This procedure also fastens the splash panel to the unit. This completes the task.