


# INSTALLATION INSTRUCTIONS

## SPLASHGUARD PANEL KIT

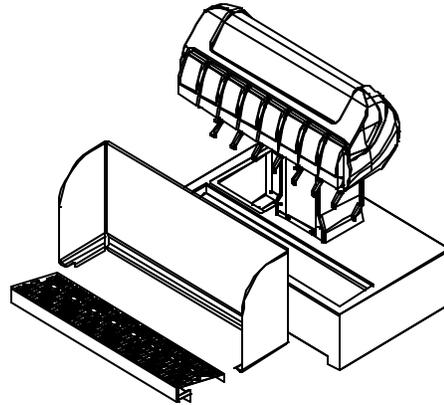

1. Remove Opti-fill cup rest
2. Tilt splashguard behind valve levers. With shield behind levers tilt splashguard to a vertical position. Place into the drip tray.
3. Reinstall Opti-fill cup rest.