

INSTALLATION INSTRUCTIONS


FOR KIT #1930

IMPORTANT: Ice-O-Matic's bin level kit for Remcor Model TJ300 dispenser is required for this kit.

Refer to Figure 1 and the following procedure for installing Ice-O-Matic series c-20, c-40 and c-60 cubers on Remcor TJ300 dispenser.

1. Install the mounting bracket for the bin level thermostat bulbwell.
2. Seal icemaker to top of dispenser as follows:
 - A. Run a bead of RTV on the dispenser cover around the outline of the icemaker frame (icemaker front panel removed) as shown in Figure 1.
 - B. Set icemaker onto cover.
 - C. Wipe excess RTV away immediately.
3. Install adhesive backed gasket strip to dispenser cover.
4. Follow Ice-O-Matic's instructions in their bin level kit for installing the bin level thermostat. Install the thermostat bulbwell into the mounting bracket of Step 1, and insert the thermostat capillary tube.
5. Secure icemaker to dispenser with mounting brackets provided.
6. Follow Ice-O-Matic's instructions to complete the installation of the icemaker.

1. FRONT LID OF DISPENSER SHOWN REMOVED FOR INSTALLATION.
2. FRONT PANEL OF ICEMAKER REMOVED FOR THIS INSTALLATION.

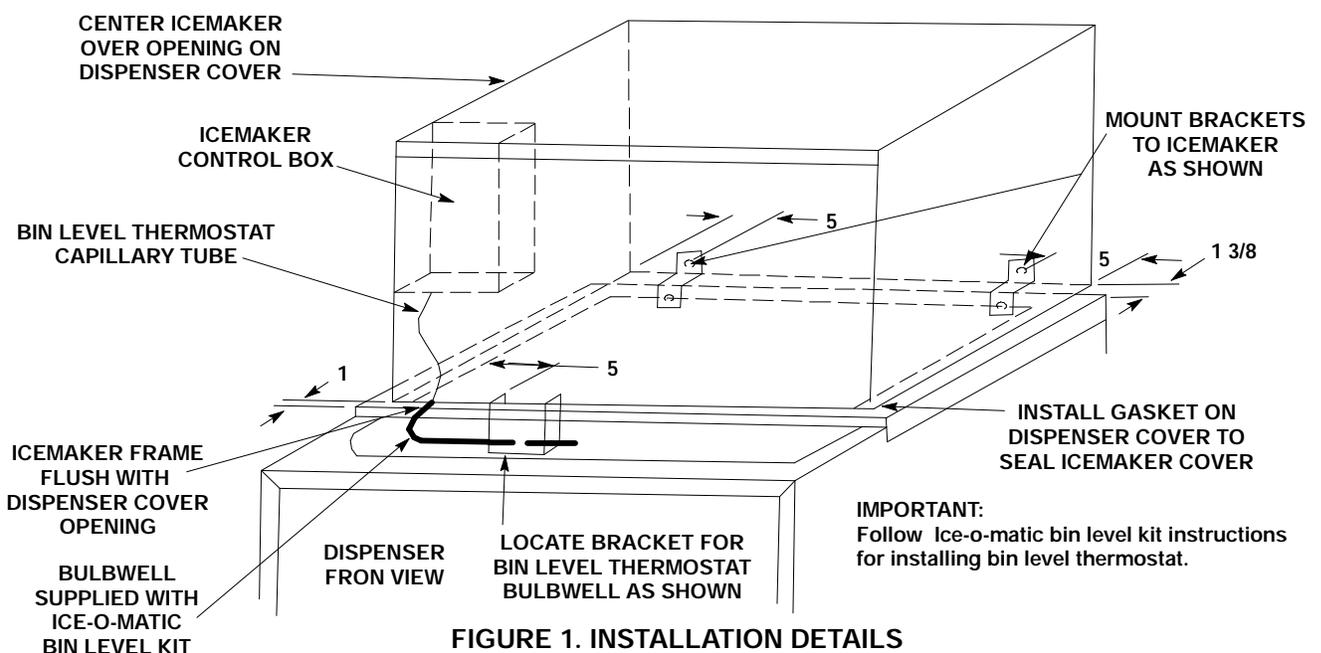

**FIGURE 1. INSTALLATION DETAILS
ICE-O-MATIC C-20, C-40 AND C-60 ICEMAKERS**