


INSTALLATION INSTRUCTIONS

For installing Manitowac cubers on Remcor Model TW200/
TJ200 dispensers.

- 1.) Seal icemaker to top of dispenser as follows:
 - a.) Run a bead of RTV on the dispenser cover around the outline of the icemaker and inside edge of cover opening.
 - b.) Set icemaker onto cover and position as shown.
 - c.) Wipe away excess RTV.
- 2.) Fasten brackets as shown. Drill holes and install sheet metal screws provided into icemaker and dispenser cover.
- 3.) Follow the manufacturers instructions to complete the installation of the icemaker.

INSTALLATION DETAILS
MANITOWAC 200/400 ICE MAKERS

Front lid of dispenser & front icemaker panel shown removed for installation.

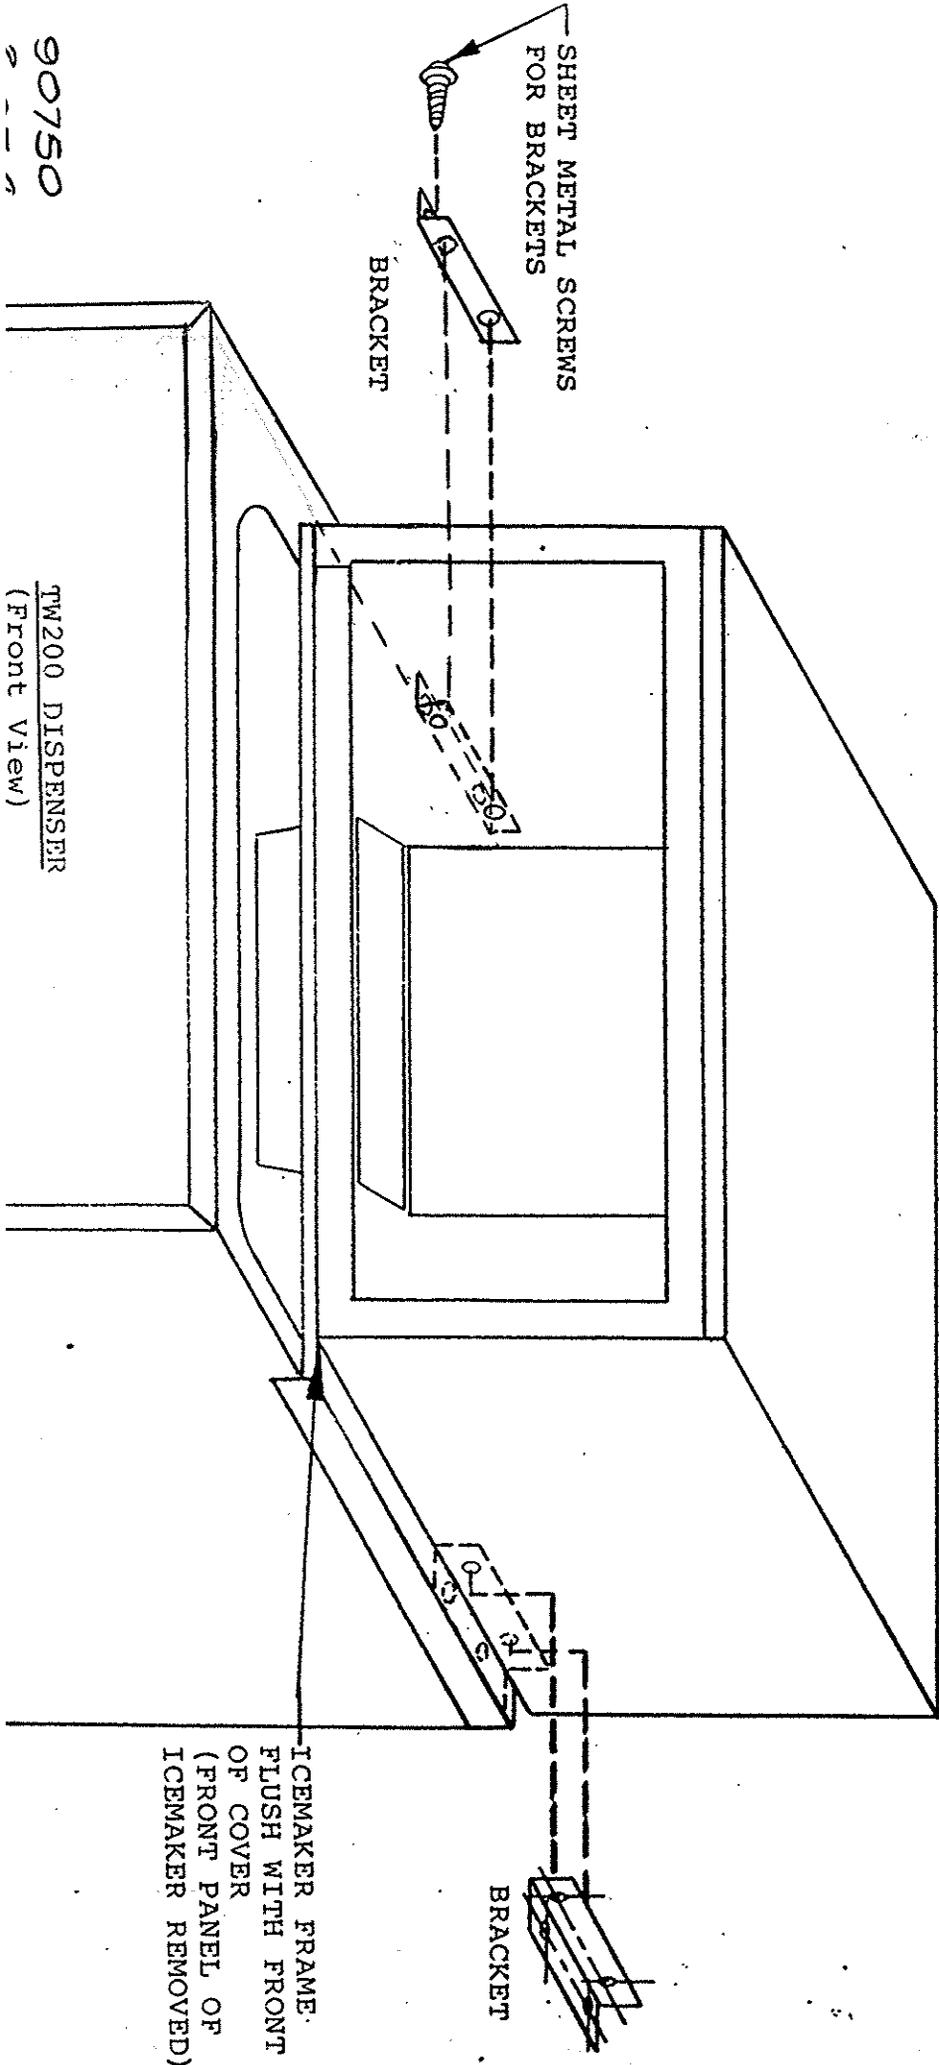

ICEMAKER FRAME
FLUSH WITH FRONT
OF COVER
(FRONT PANEL OF
ICEMAKER REMOVED)

BRACKET

BRACKET

SHEET METAL SCREWS
FOR BRACKETS

TW200 DISPENSER
(Front View)

90750

INSTALLATION INSTRUCTIONS


For installing Mile High Series C-20/C-40 cubers on Remcor Model TW200/TJ200 dispensers.

- 1.) Drill hole in bottom of icemaker for exit of thermostat bulb. Hole must be a minimum of 4 5/8" from left edge of icemaker and 9 1/2" from the rear edge to clear the TW200/TJ200 cover opening.
- 2.) Seal icemaker to top of dispenser as follows:
 - a.) Run a bead of RTV on the dispenser cover around the outline of the icemaker and inside edge of cover opening.
 - b.) Set icemaker onto cover and position as shown.
 - c.) Wipe away excess RTV.
- 3.) Fasten brackets as shown. Drill holes and install sheet metal screws provided into icemaker and dispenser cover.
- 4.) Fasten the deflector (supplied with icemaker) using two sheet metal screws provided.
NOTE: Deflector must be securely fastened to prevent damage to thermostat bulb.
- 5.) Route bin thermostat bulb against bottom of icemaker and install into tube in deflector.
NOTE: Before installing, cover exposed bulb with tubing provided.
- 6.) Follow the manufacturers instructions to complete the installation of the icemaker.

INSTALLATION DETAILS
SUNBEAM C-20/C-40 ICEMAKERS

Front lid of dispenser and front icemaker panel shown removed for installation.

Route thermostat bulb against bottom of icemaker, and install in deflector tube. Cover exposed bulb with plastic sleeving.

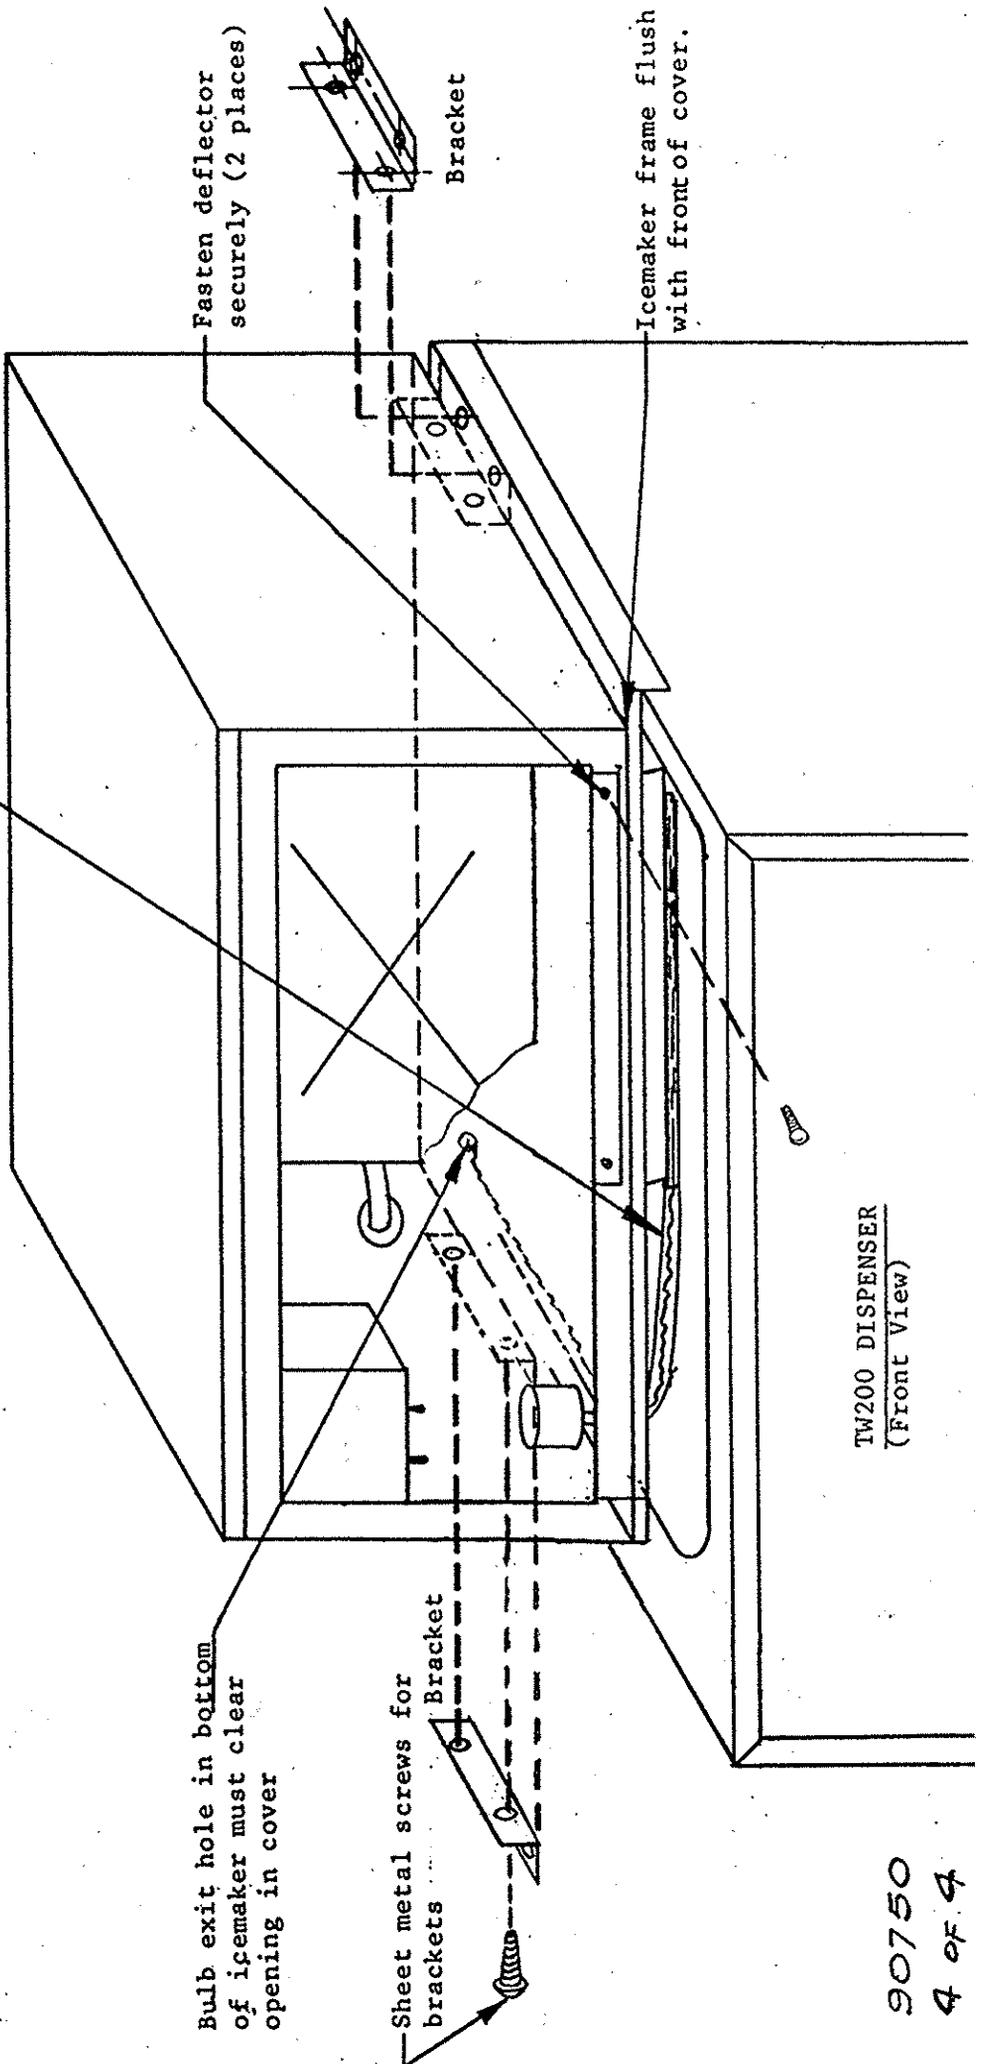

TW200 DISPENSER
(Front View)