


KIT #1958
INSTALLATION INSTRUCTIONS


For converting a TJ65-F dispenser into one capable of dispensing Crystal Tips flaked ice.

1. Disconnect power to dispenser.
2. Remove upper front panel.
3. Using Fig. 2 as a guide, remove existing sleeve and cone agitator. Save all hardware, it will be needed later.
4. Position sub-floor over bottom of hopper as shown in Fig. 1. Dispense ramp on sub-floor must be in line with gate opening. Using sub-floor as a template, locate four (4) mounting holes on hopper bottom. Remove sub-floor, drill and tap for 8-32 threads. Install sub-floor using hardware provided.
5. Again using Fig. 2 as a guide:
 - A. Install new cone agitator
 - B. Install new sleeve
 - C. Install new ice diverter
6. Finally, rotate the cone agitator manually to make sure the arms do not come in contact with anything in the hopper.

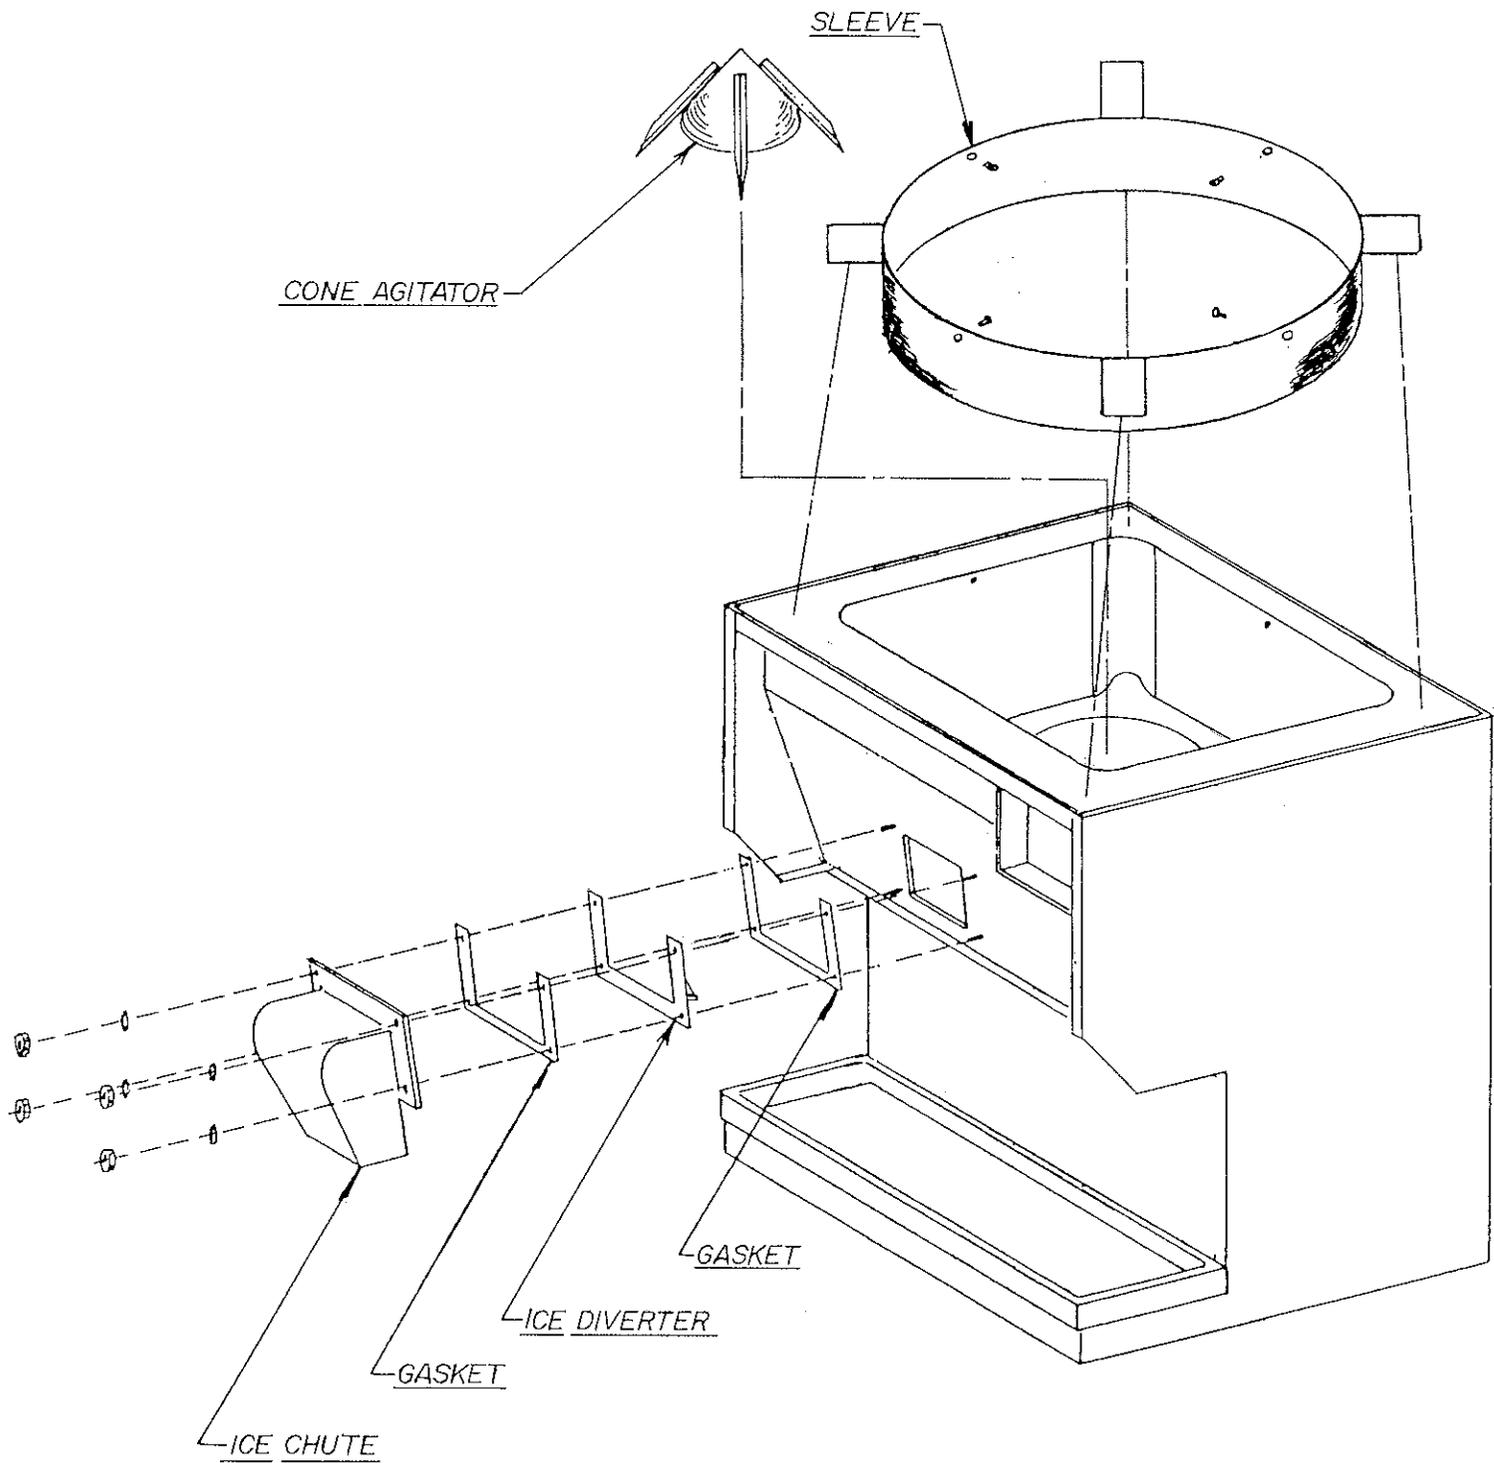

NOTE: FRONT PANEL REMOVED

FIG. 2

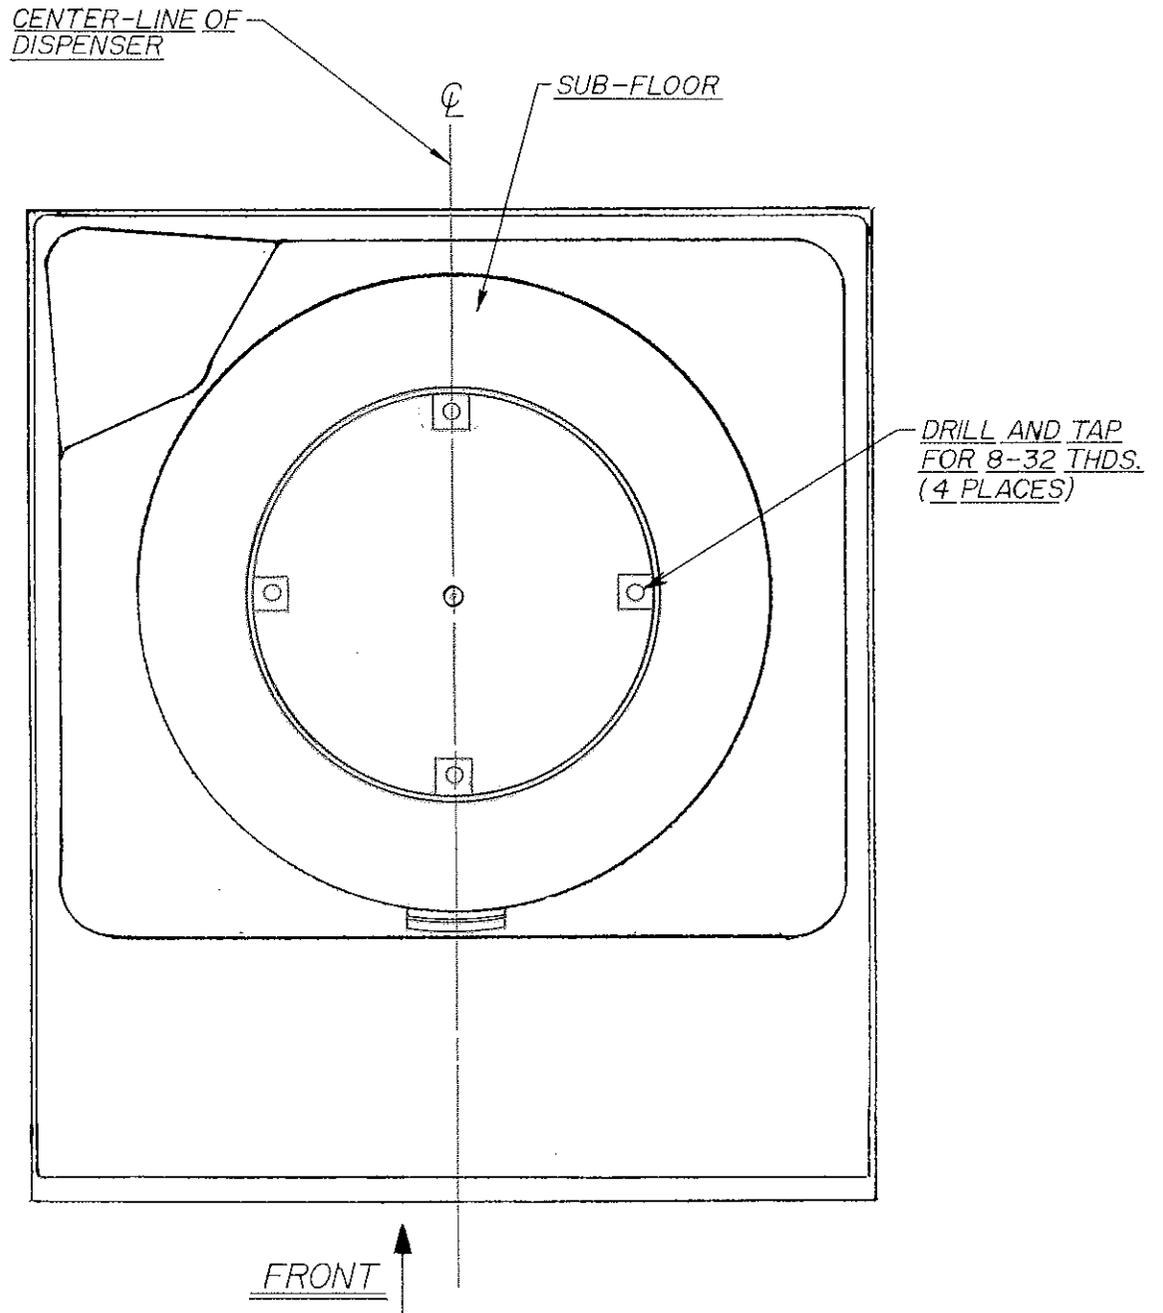

NOTE: TOP VIEW LOOKING INTO HOPPER.

FIG. 1