

KIT 23590


Installation Instructions

For installing a Scotsman MH750 icemaker on a Remcor Model TJ90-K dispenser.

1. Disconnect power to dispenser.
2. Place icemaker on gasket on dispenser top cover.
3. Install the bin thermostat bracket provided in the kit as follows (see Fig. 1):
 - A. Cut the vertical portion of the ice transport tube to the length shown in Fig 1.
 - B. Carefully uncoil the thermostat capillary tube and insert the end into the bulbwell ($\frac{1}{4}$ OD plated tube) on the thermostat bracket.
 - C. Secure the thermostat bracket on the end of the ice transport tube. See Fig. 1 for the proper orientation of the thermostat bracket in relation to the dispenser hopper.
 - D. Before proceeding check that the vertical upright on the dispenser agitator does not contact the thermostat bulbwell and the ice transport tube.
4. Follow the manufacturer's instructions to complete installation of the icemaker.
5. Locate the icemaker mounting brackets as shown in Fig 2. Using the brackets as templates, drill .136 DIA holes (#29 drill size) in both the dispenser and icemaker cabinets and secure with sheet metal screws provided.

KIT INCLUDES

<u>Part No.</u>	<u>Quantity</u>	<u>Description</u>
22602	1	Mtg. Plate
22604	1	Mtg. Bracket
22605	1	T'stat Bulb Bracket Assy
70215	2	#8 X $\frac{1}{4}$ Scr.
70225	8	#10 X $\frac{1}{2}$ Scr.
90889	1	Instructions

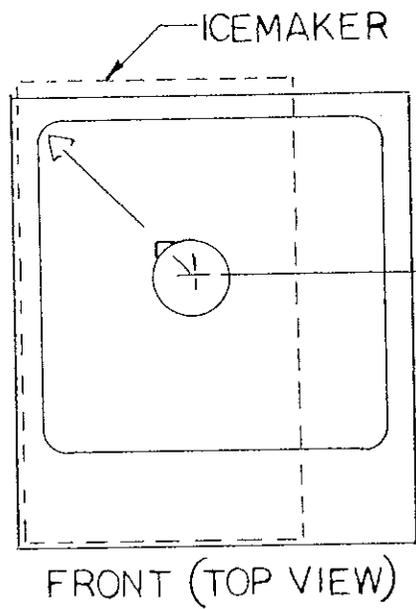

LOCATE BIN THERMOSTAT BRACKET TOWARDS REAR LEFT CORNER OF DISPENSER BIN

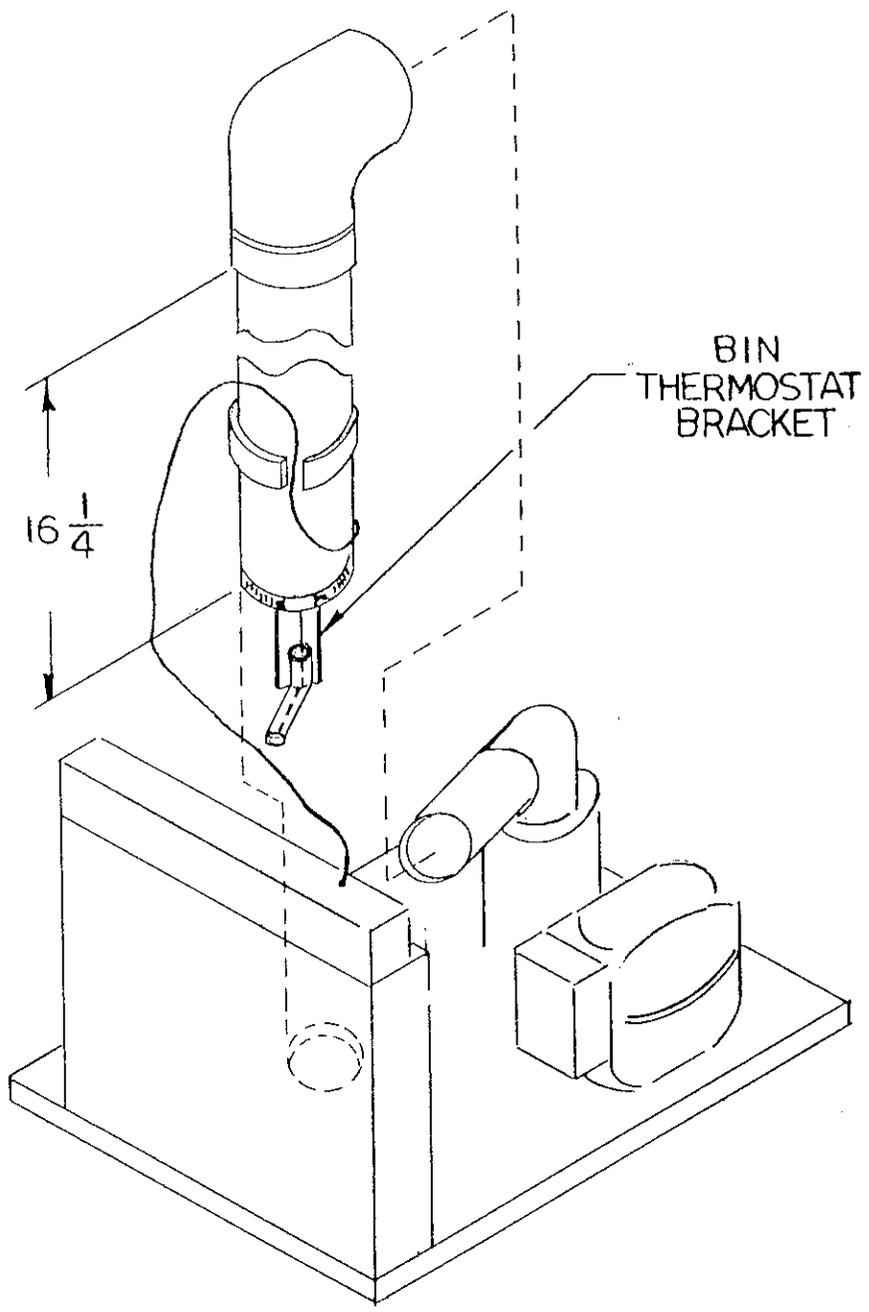


FIG. 1

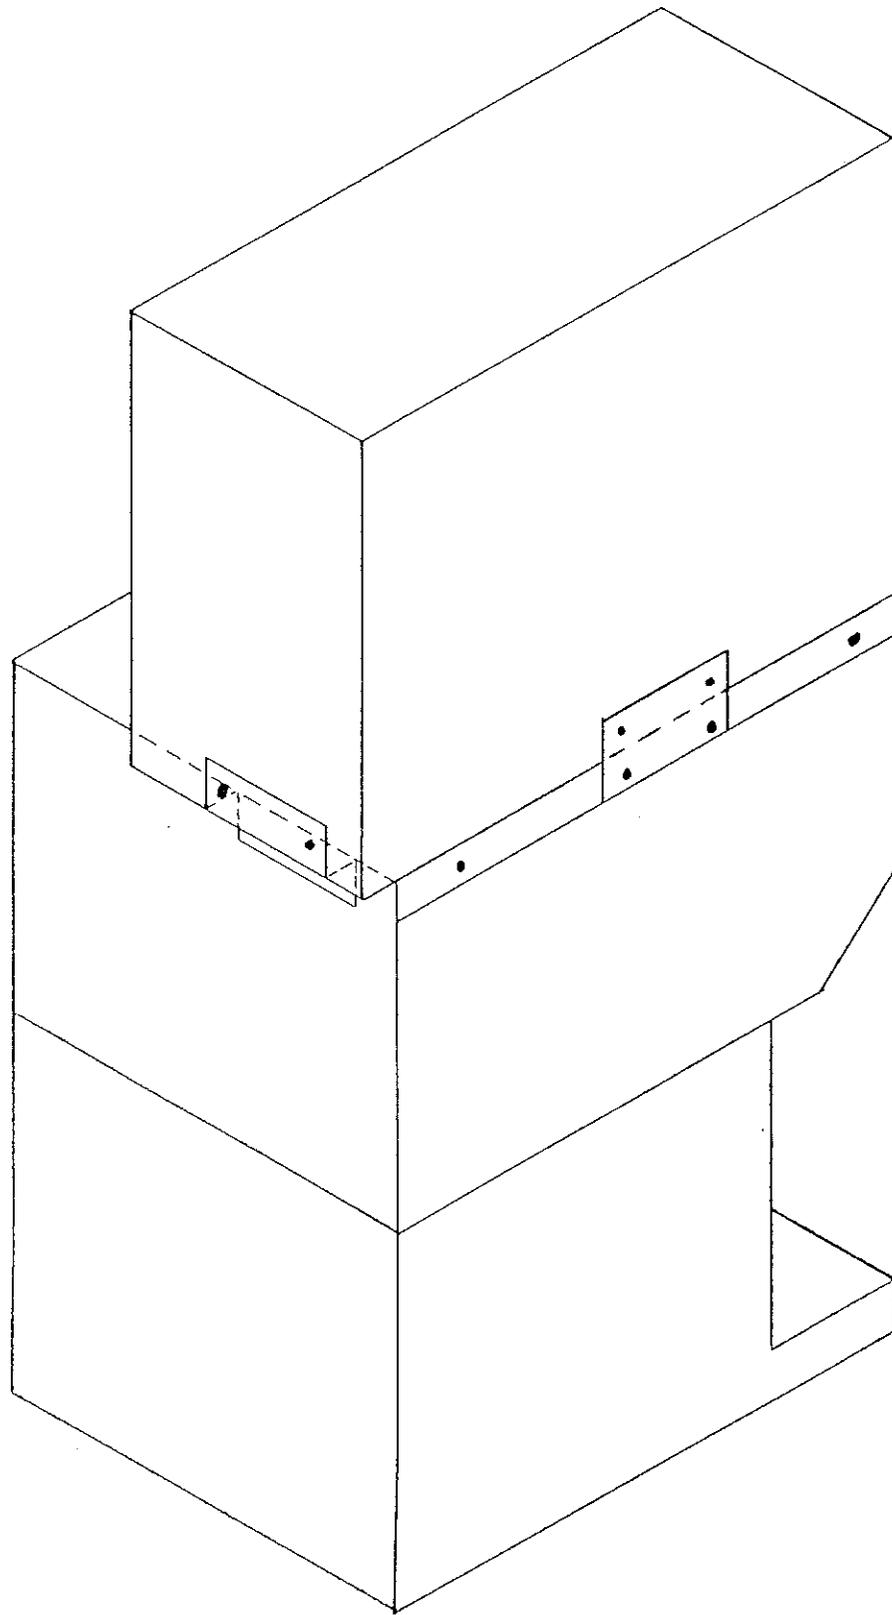


FIG. 2