


KIT 2016

INSTALLATION INSTRUCTIONS

For installing Kold Draft GT Series cubers on a Remcor model TJ150 dispenser.

1. Install icemaker to top of dispenser as follows using the attached drawing as a guide:
 - a. Locate 1" diameter clearance hole in rear of dispenser cabinet for icemaker drain. Drill through cabinet and into storage hopper.
 - b. Seal icemaker to dispenser cover as follows:
 1. Run a bead of RTV on the cover around the inside of the icemaker outline.
 2. Set icemaker onto cover and position as shown.
 3. Wipe away excess RTV.
 - c. Install 90° ell fitting to icemaker drain. Hook-up icemaker drain line as shown and route through hole in rear wall of hopper. Seal drain line with RTV at hopper wall.
 - d. Locate the icemaker mounting brackets as shown. Using the brackets as templates, drill holes in the icemaker cabinet and dispenser cover for the #10 sheet metal screws provided.
2. Route the bin thermostat bulb according to the icemaker manufacturer's instructions.
3. Follow the manufacturers instructions to complete the installation of the icemaker.

DRAIN HOOK-UP

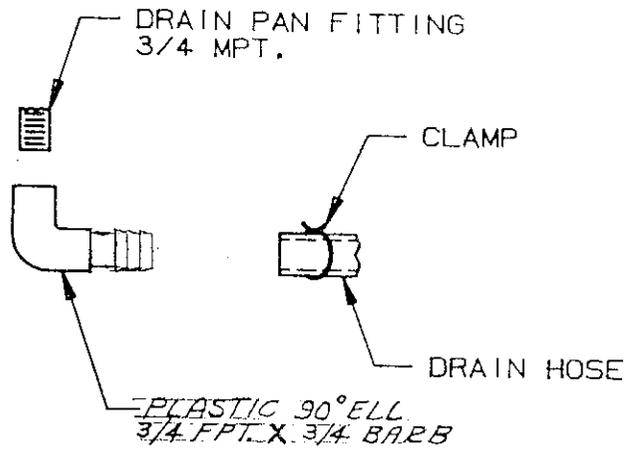

DRILL 1" DIA HOLE THROUGH
CABINET & STORAGE HOPPER
FOR ICEMAKER DRAIN LINE.

