

## Kit 2068


### Installation Instructions

The following procedure is for installing Crystal Tips model series 200, 300 and 400 cubers with bin spacer (Crystal Tips P/N 803417-01) on a REMCOR Model TJ90 dispenser:

1. Seal icemaker to top cover of dispenser.
  - a. Follow the icemaker manufacturers' instructions for installing the gasket material supplied with the icemaker and bin spacer.
  - b. Locate the icemaker/bin spacer on the dispenser as shown in Figure 1.
2. Secure the icemaker/bin spacer to the dispenser with the mounting brackets supplied with the icemaker.
3. Install the agitation timer in the dispenser electrical control box as follows (TJ90-BC models and factory ordered dispensers with the 2068 kit will already have the timer installed):
  - a. Disconnect electrical power to the dispenser.
  - b. Remove the upper front panel and control box cover.
  - c. Install the timer in control box as shown in Fig. 2 with the 4 screws supplied in the kit.
  - d. Refer to the wiring diagram in Fig. 3 for hook-up of the timer. Note that the red lead on the capacitor from the terminal block is removed from the capacitor and connected to the NC terminal on the timer.
4. Follow the manufacturers' instructions to complete the installation of the icemaker.

### IMPORTANT


For proper dispensing, the ice control should be set only for the smaller chip size.

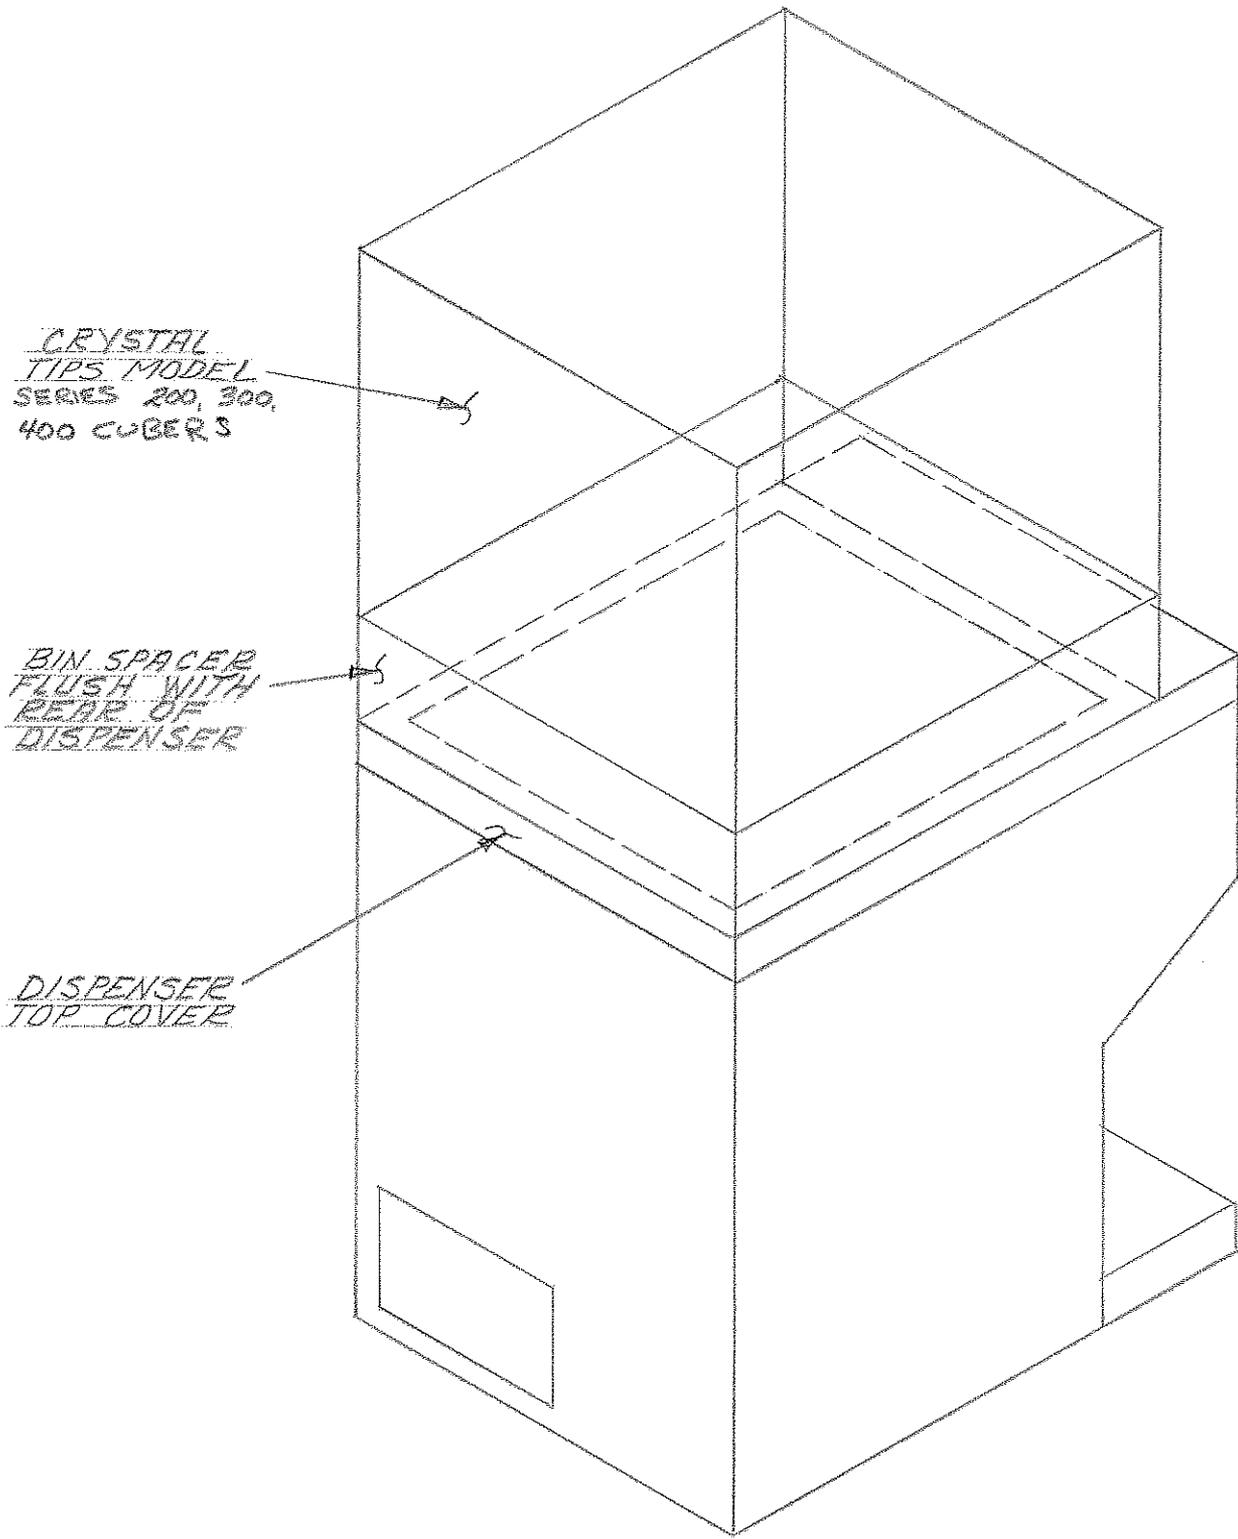


TJSD REAR VIEW

FIG 1

FIG 2

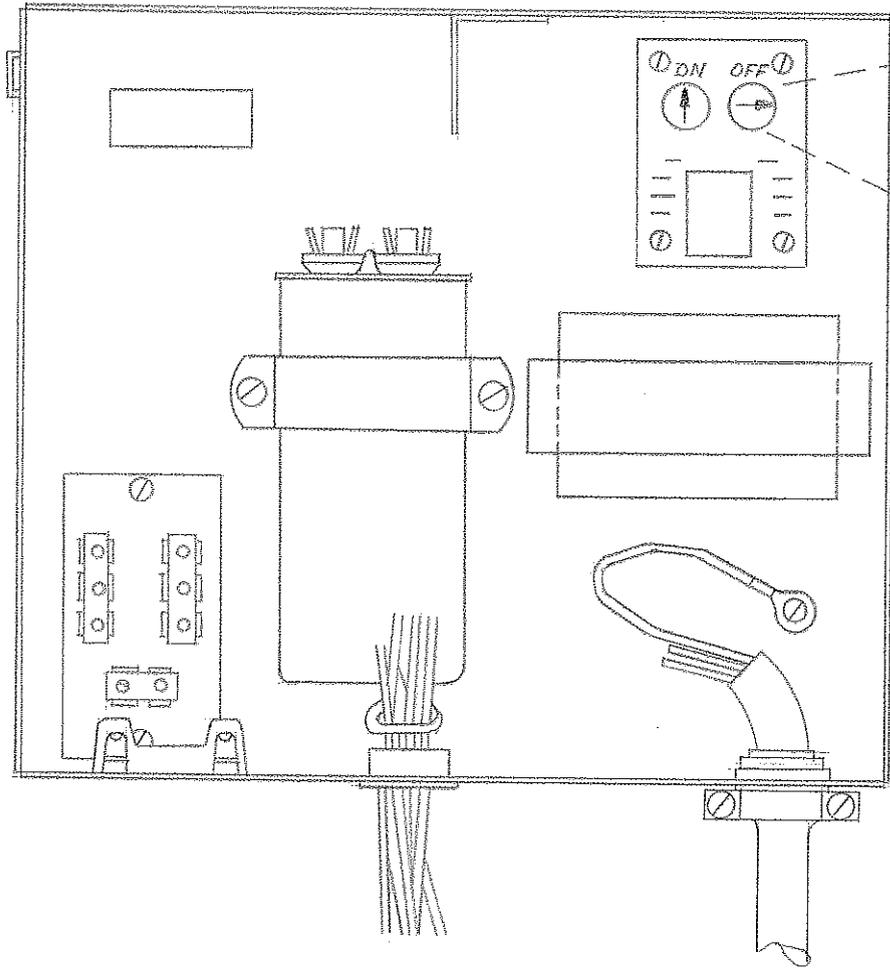


TIMER CYCLE DIAL  
SETTING

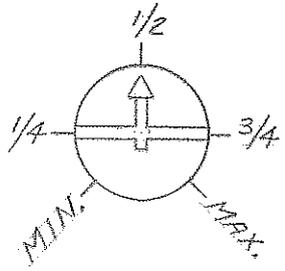

"ON"	"OFF"
1/2 (2 SECONDS)	3/4 (120 MINUTES)

91099  
3 of 4

FIG 3

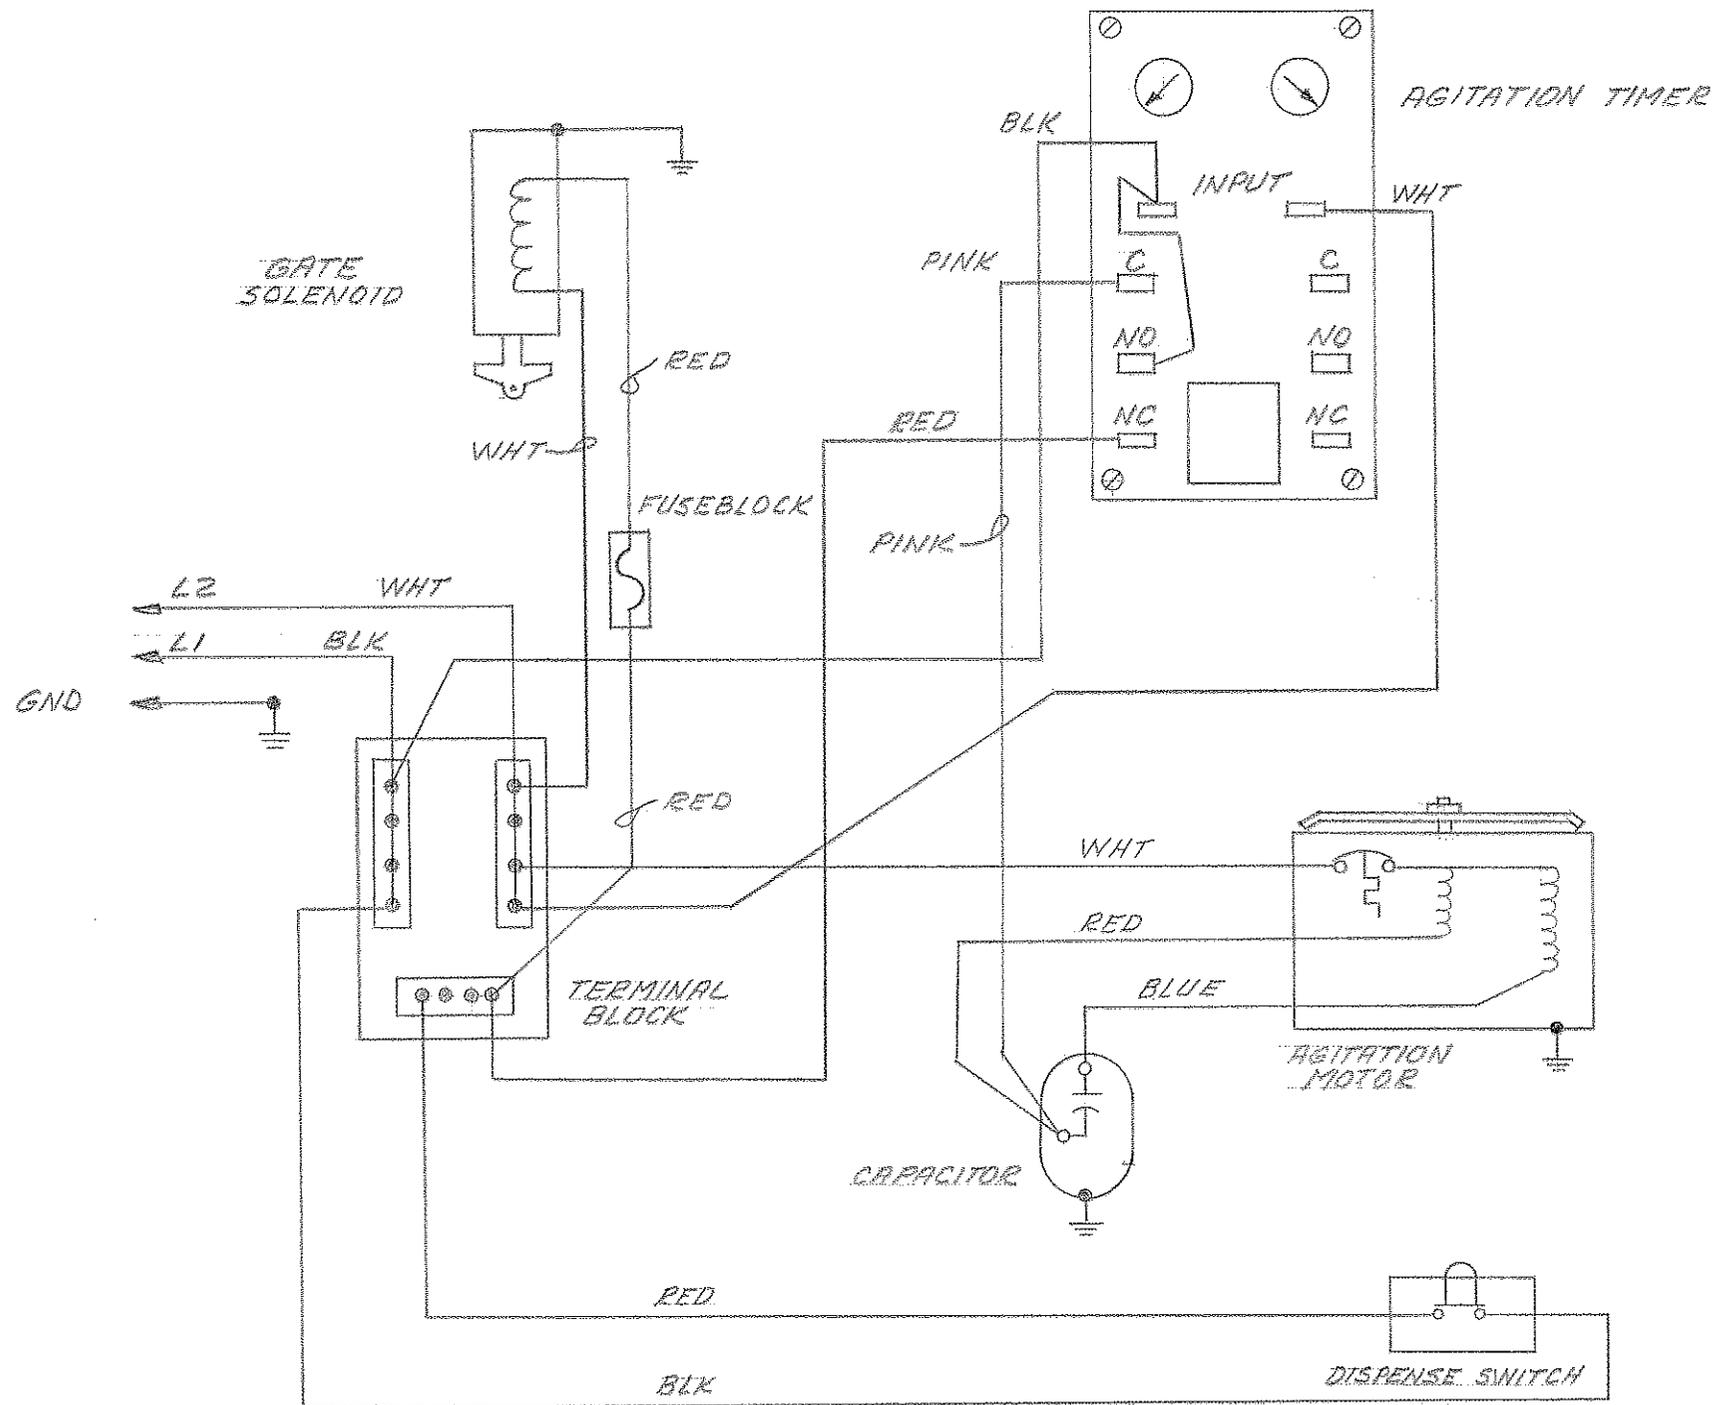

91099  
4034  
66016