




KIT #2082

INSTALLATION INSTRUCTIONS

For installing Scotsman series CM500/650 cubers on Remcor Model TJ150 Dispenser.

1. Locate the mounting holes for the icemaker bin level thermostat capillary tube in the dispenser hopper as shown in FIG. 1.
2. Install the icemaker and bin level thermostat in the dispenser as shown in FIG. 1 and 2.
3. Secure the icemaker to the dispenser with the mounting brackets provided as shown in FIG. 2.
4. Seal icemaker to dispenser with RTV.
5. Follow Scotsman's instructions to complete the installation of the icemaker.

TOP VIEW (DISPENSER COVER REMOVED)

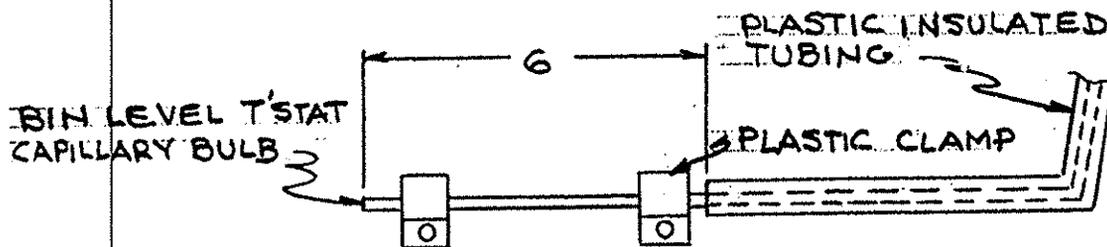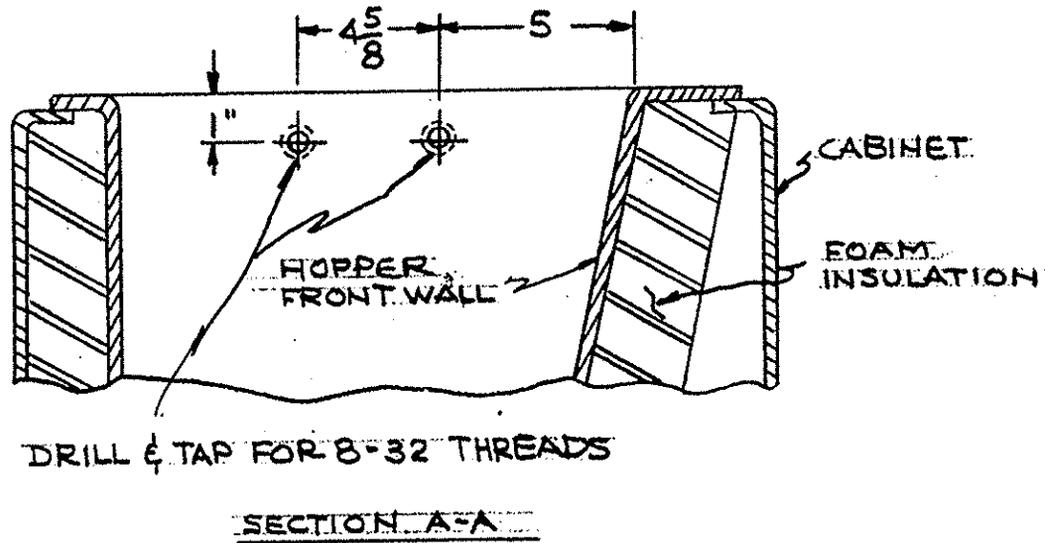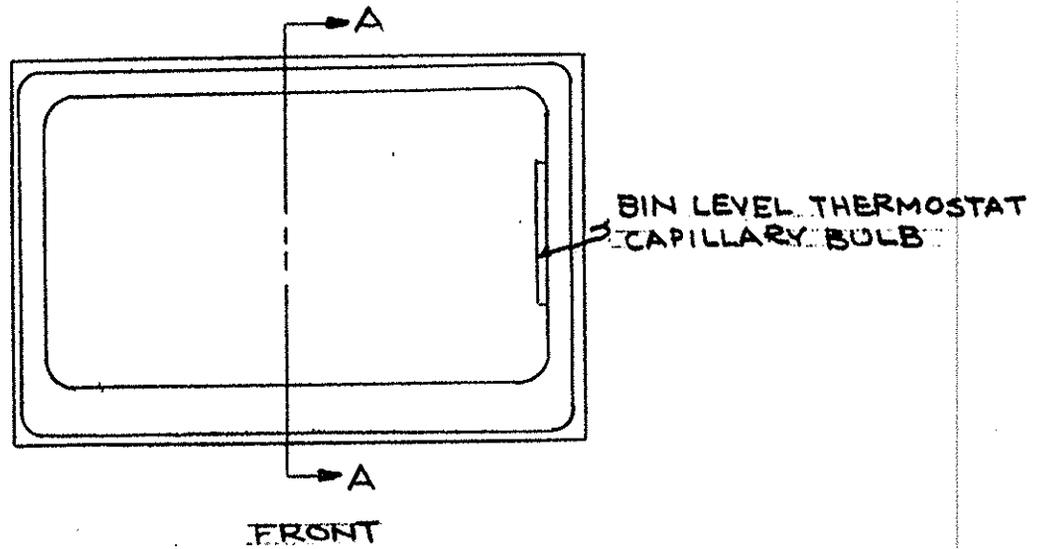

LOCATION OF MOUNTING HOLES FOR BIN  
LEVEL THERMOSTAT CAPILLARY TUBE

FIG. 1

FIG. 2

ROUTE ICEMAKER BIN LEVEL  
T'STAT. CAPILLARY TUBE AS  
SHOWN & INSTALL IN DISPENSER  
HOPPER AS SHOWN IN FIG 1.

POSITION ICEMAKER  
FLUSH WITH DISPENSER  
REAR COVER

REMOVE SCREWS & TURN  
BRACKET 180°. REPLACE  
SCREWS, USING BRACKET AS  
A TEMPLATE, DRILL .136" Ø  
HOLES INTO ICEMAKER CAST.  
FOR SHEET MTL. SCREWS  
PROVIDED.

CLIPS  
(3) PLCS.

APPLY  
R.T.V.

