

KIT #2114

Installation Instructions


For installing a Scotsman CM1000 Cuber on a REMCOR Model TJ400 dispenser
(see attached illustration):

1. Seal icemaker to top of dispenser as follows:
 - A. Locate gasket on dispenser top cover as shown.
 - B. Set icemaker onto cover and position as shown.
2. Fasten brackets as shown. Drill holes and install sheet metal screws provided into icemaker and dispenser cover.
3. Install gasket on lid and secure to top cover as shown.
4. Follow the manufacturer's instructions to complete the installation of the icemaker.

DRILL (8)
.136 DIA. HOLES
FOR MOUNTING BRACKETS

LOCATE ICEMAKER
FLUSH WITH REAR AND
LEFT SIDE OF DISPENSER

LOCATE GASKET
AROUND OPENING
ON DISPENSER COVER

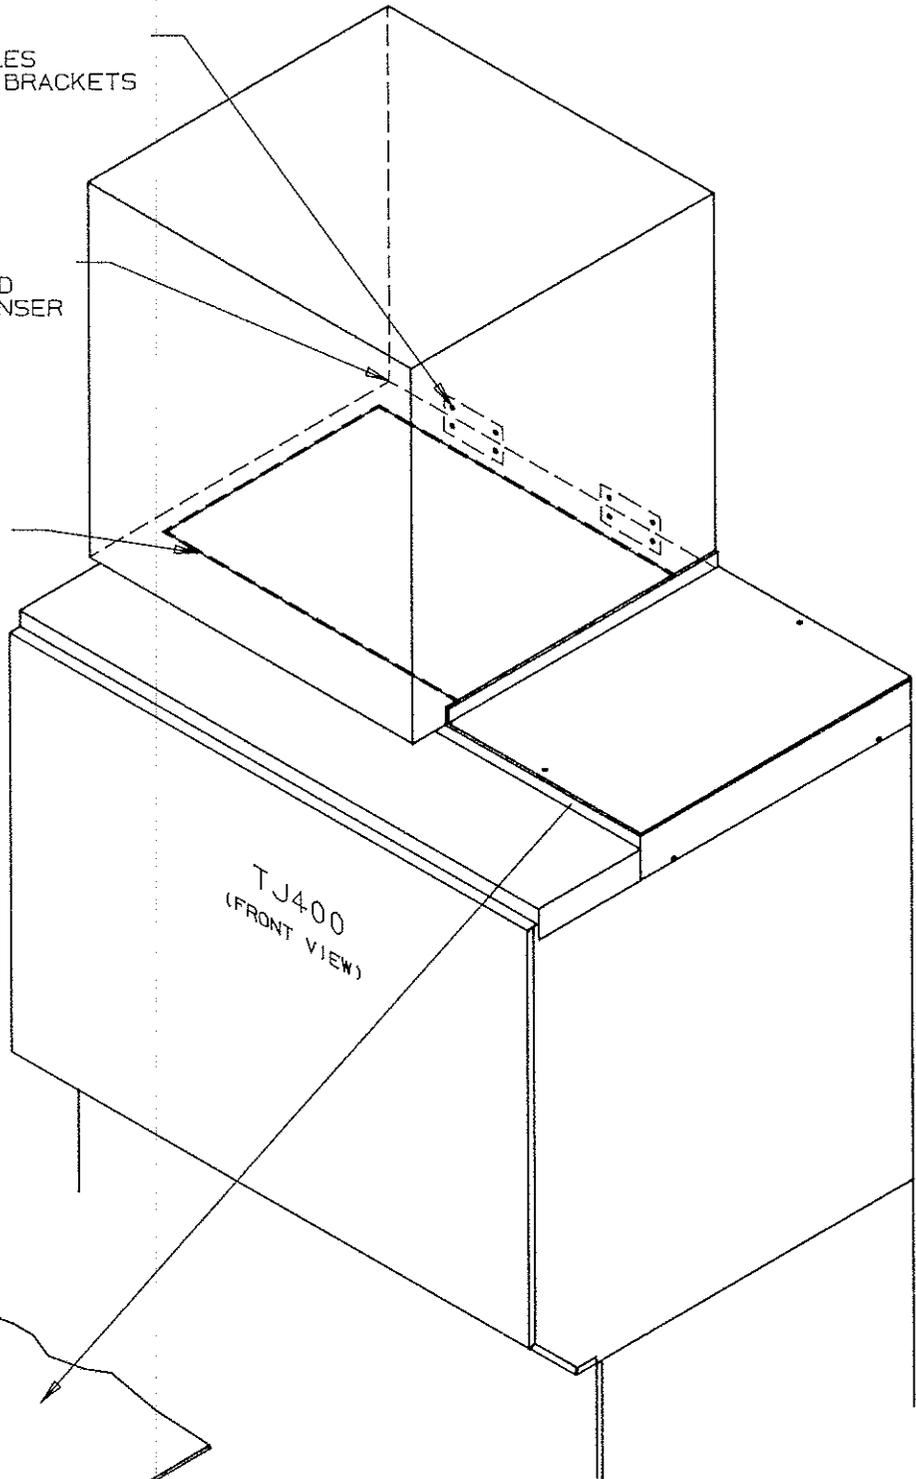

TJ400
(FRONT VIEW)

LID

INSTALL GASKET
ON LID