


2121 KIT  
 INSTALLATION INSTRUCTIONS  
 TJ400/CRYSTAL TIPS 600/800 ICEMAKERS

IMPORTANT: FOR PROPER DISPENSING, USE ONLY  
 CRYSTAL TIPS HALF CUBES ("CHIPS").

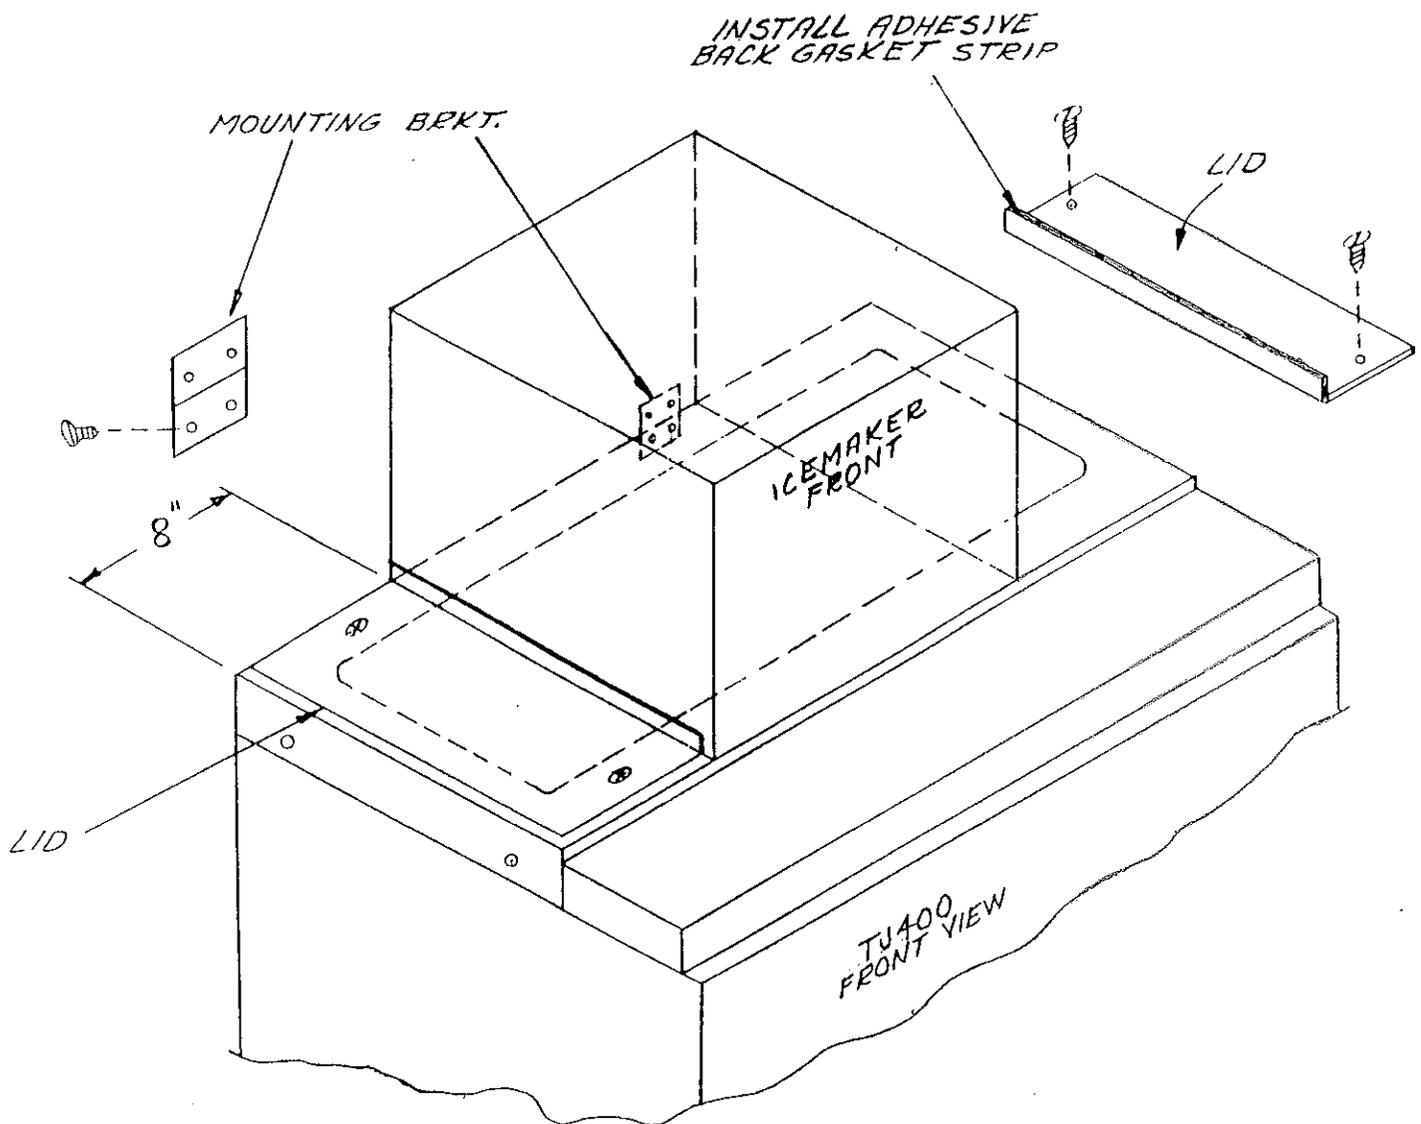

- 1-LOCATE THE OUTLINE OF THE ICEMAKER BASE ON THE DISPENSER COVER. RUN A BEAD OF RTV ALONG THIS OUTLINE & SET THE ICEMAKER ON THE DISPENSER. WIPE AWAY EXCESS RTV.
- 2-LOCATE THE LIDS & MOUNTING BRKTS. AS SHOWN. DRILL HOLES (.136 DIA.) FOR #10 SHEET-METAL SCREWS USING THESE PARTS AS TEMPLATES.
- 3-FOLLOW ICEMAKER MANUFACTURERS INSTRUCTIONS TO COMPLETE THE INSTALLATION.

REV A  
 91266