
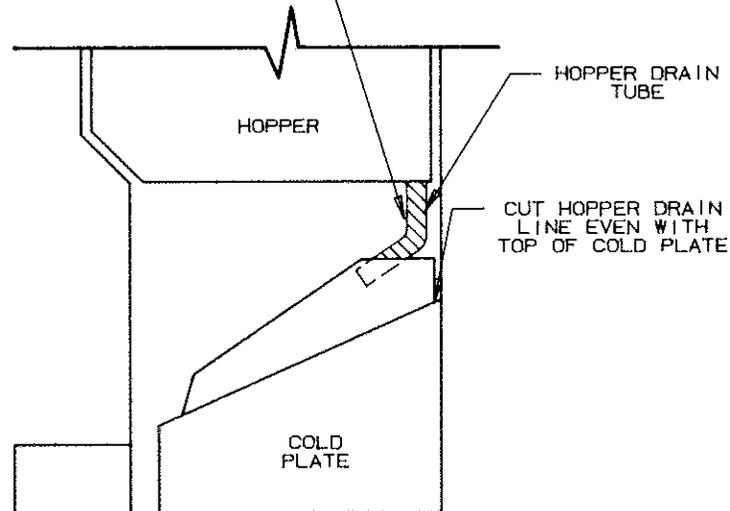


STEP 1 (FRONT STAINLESS PANEL REMOVED) REMOVE COLD PLATE COVER AND ICE DROP CHUTE. DISCONNECT HOPPER DRAIN TUBE FROM SINK. CUT INSULATED DRAIN LINE EVEN WITH TOP OF COLD PLATE.

STEP 2 REASSEMBLE COLD PLATE COVER AND ICE CHUTE. ROUTE DRAIN LINE THROUGH OPENING IN COLD PLATE COVER.

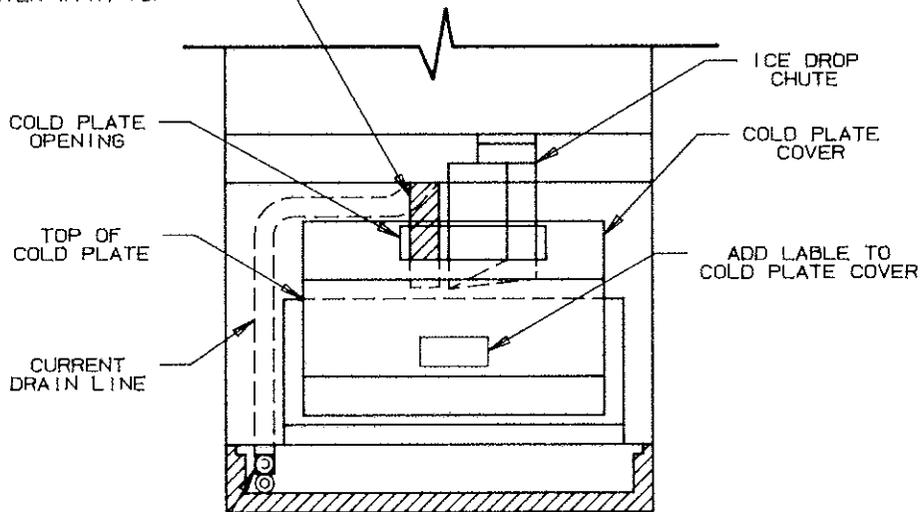

STEP 3 CEMENT DRAIN PLUG OVER TOP HOLE WITH PVC CEMENT. JOINT MUST BE WATER TIGHT.

SECTION THRU SINK LOOKING INTO LOWER CABINET WITH PANEL REMOVED.

FRONT VIEW

SIDE VIEW

TJ90-BC INSTRUCTIONS FOR RE-ROUTING HOPPER DRAIN

INSTALLATION START-UP

Please take the time to complete this form and return it to REMCOR.
Your assistance is appreciated.

Serial #: _____
Installation Date: _____
Installed by: _____
Co. Phone #: _____

Restaurant Address: _____

Restaurant Phone #: () _____

Installation observations:

Please check if OK. List any problems in the space to the right.

Packaging
Cabinet
POS Communication
Photo Eyes: Position

Cup Switches:
Conveyor System: Main:
 Front:
Ice Gate: Manual:
 Automatic:
Valves: Manual:
 Automatic:

Drink Temperature:
Syrup Sold Outs:
Air System:
Installation Kit:

Other comments: _____

Overall view of installation: _____

What improvements would you like to see?

Return to: Mr. Paul Rzeppa
REMCOR PRODUCTS COMPANY
500 Regency Drive
Glendale Hts, IL 60139

P/N 9/335