



INSTRUCTIONS: TJ 150's TO ACCEPT SCOTSMAN NUGGET ICE

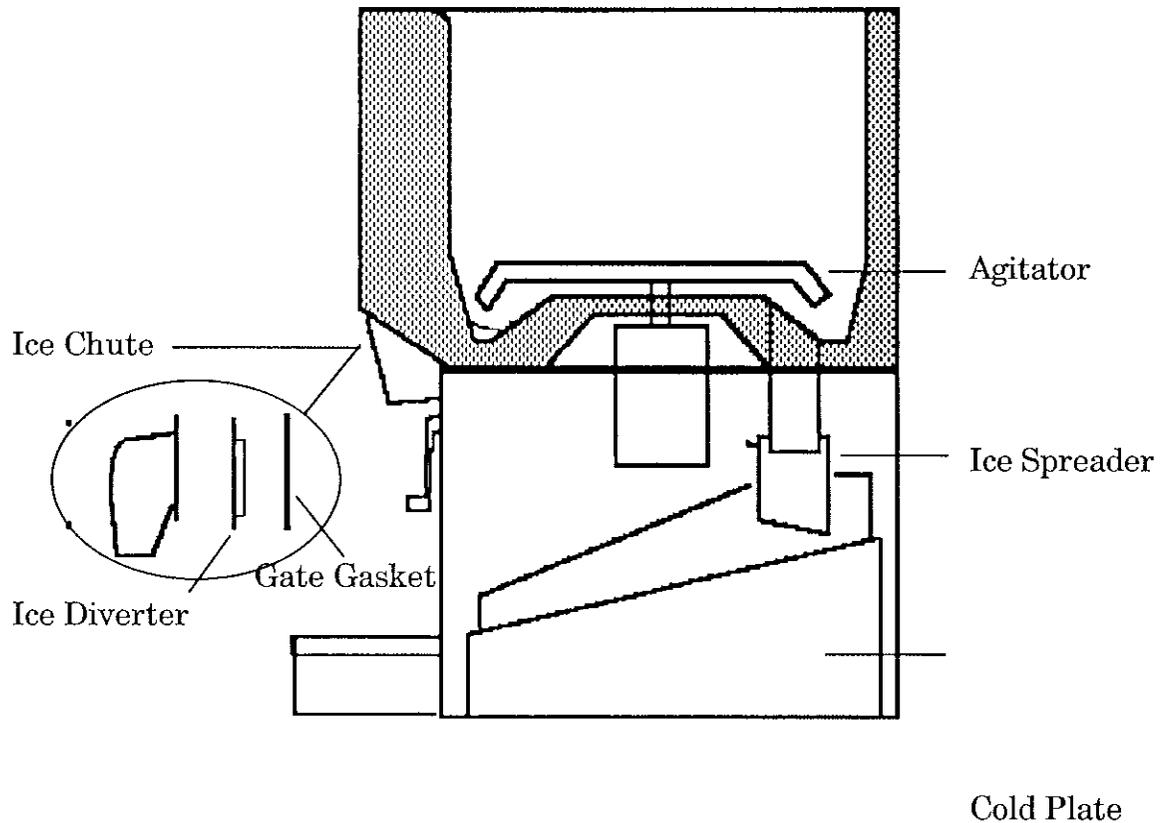

- 1) Remove original agitator and replace with agitator cone, part number 25777.
- 2) Remove ice chute and flip gate restrictor upside down so hopper gate opening is completely open.
- 3) With the ice chute off, install the ice diverter part number 21929, using the same bolts as the ice chute would use.
- 4) Install ramp, part number 51681 and epoxy, part number 51625.
(See Page 2).
- 5) Remove ice spreader.

INSIDE VIEW OF HOPPER FROM BACK VIEW

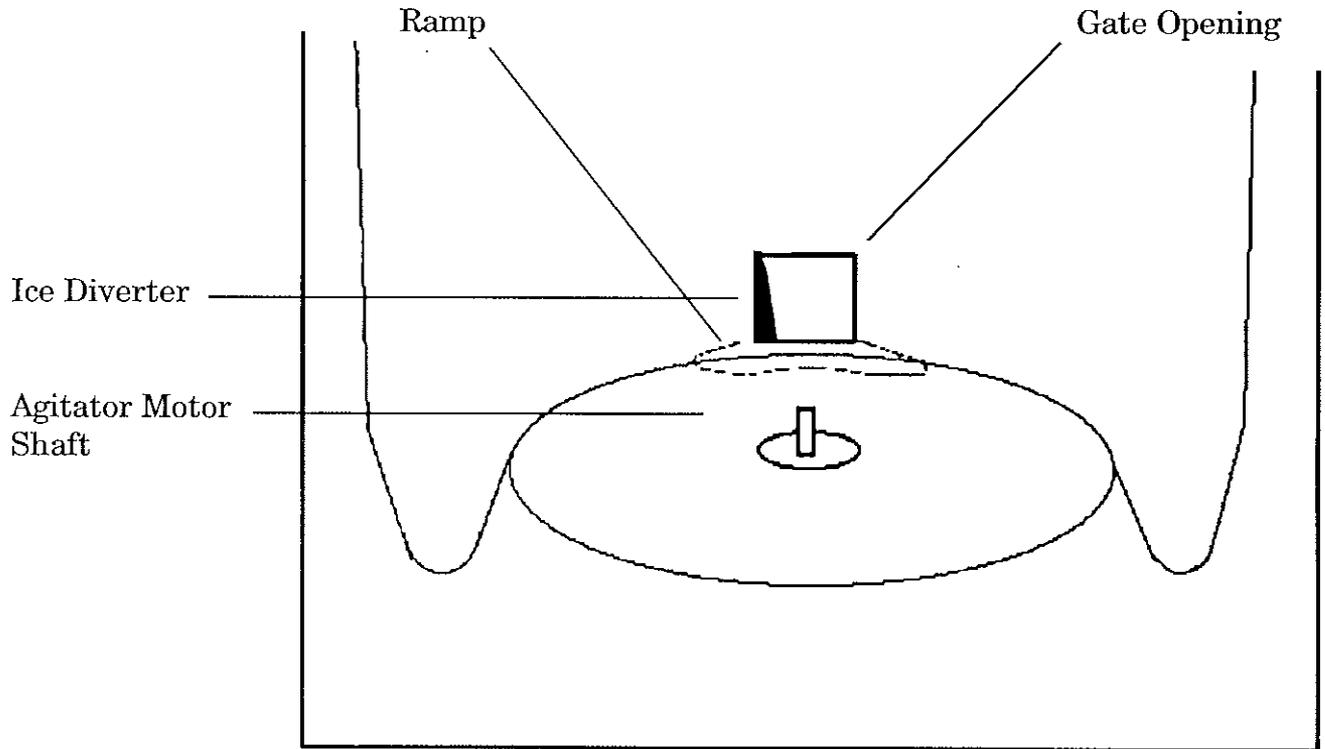

INSTALLING RAMP

NOTE: When handling an epoxy material, avoid contact to skin. The epoxy should be used within 24 hours because it has a short shelf life of three days. The epoxy will set up in about four to six hours, however if possible, allow to dry overnight.

When installing the ramp, the straight part of the ramp should be flush with the bottom of the gate opening. While holding the ramp in place, apply epoxy around the outside of the ramp. The epoxy should be applied in layers and smoothed out as much as possible.