



INSTALLATION INSTRUCTIONS  
TJ90 & TJ150

START BY ALIGNING DECAL ALONG  
TOP & FRONT EDGE OF DISPENSER,  
SIDE DECALS OVERLAP REAR,  
(TYPICAL BOTH SIDES)

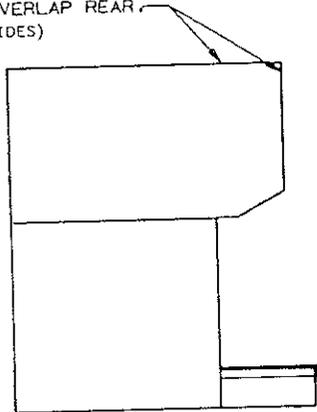

SIDE VIEW

USE THESE EDGES TO  
ALIGN REAR DECAL.

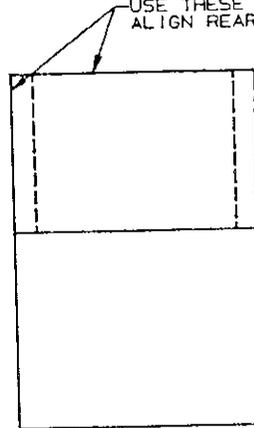

REAR VIEW

**Step 1:** Prepare the surface to which the decal will be applied by removing all residue and making sure it is clean and smooth.

**Step 2:** Fill a 32 oz. spray bottle with water and add one tablespoon of Joy dishwashing soap. Spray the solution onto the surface of the ice dispenser to reduce adhesive tension while positioning the decal.

**Step 3:** As you align the decal along the top and front of the dispenser, gradually remove the liner: **apply the side decals first.**

**Step 4:** After decal is applied, use a squeegee to smooth vinyl from the center outward, firming its' position. Wipe dry. Presto! A beautiful "like-new" ice dispenser.