

REMCOR®


KIT NUMBER 2202

INSTALLATION INSTRUCTIONS

Important: Ice-O-Matic's bin level kit #1051020-02 for REMCOR® Model TJ400 Dispenser is required for this kit.


Refer to Figures 1 and 2 and the following procedure for installing Ice-O-Matic Series C106 cubers on REMCOR® Model TJ400 Dispenser:

1. Thermostat bulbwell/mounting bracket must be installed by REMCOR® Factory as shown in Figure 1.
2. Seal ice maker to top of dispenser as follows:
 - a.) Run a bead of RTV on the dispenser cover around the outline of the ice maker frame (ice maker front panel removed), as shown in Figure 2.
 - b.) Set ice maker onto cover.
 - c.) Wipe excess RTV away immediately.
3. Follow Ice-O-Matic's instructions in their bin level kit for installing the bin level thermostat. Insert the thermostat capillary tube into the bulbwell.
4. Install adhesive backed gasket strips on lids as shown in Figure 2.
5. Locate the lids on the dispenser cover as shown in Figure 2. Drill .136 diameter holes for #10 sheet metal screws into the cover using the lids as templates.
6. Secure ice maker to dispenser with mounting brackets provided. Drilling must not interfere with ice maker components.
7. Follow Ice-O-Matic's instructions to complete the installation of the ice maker.

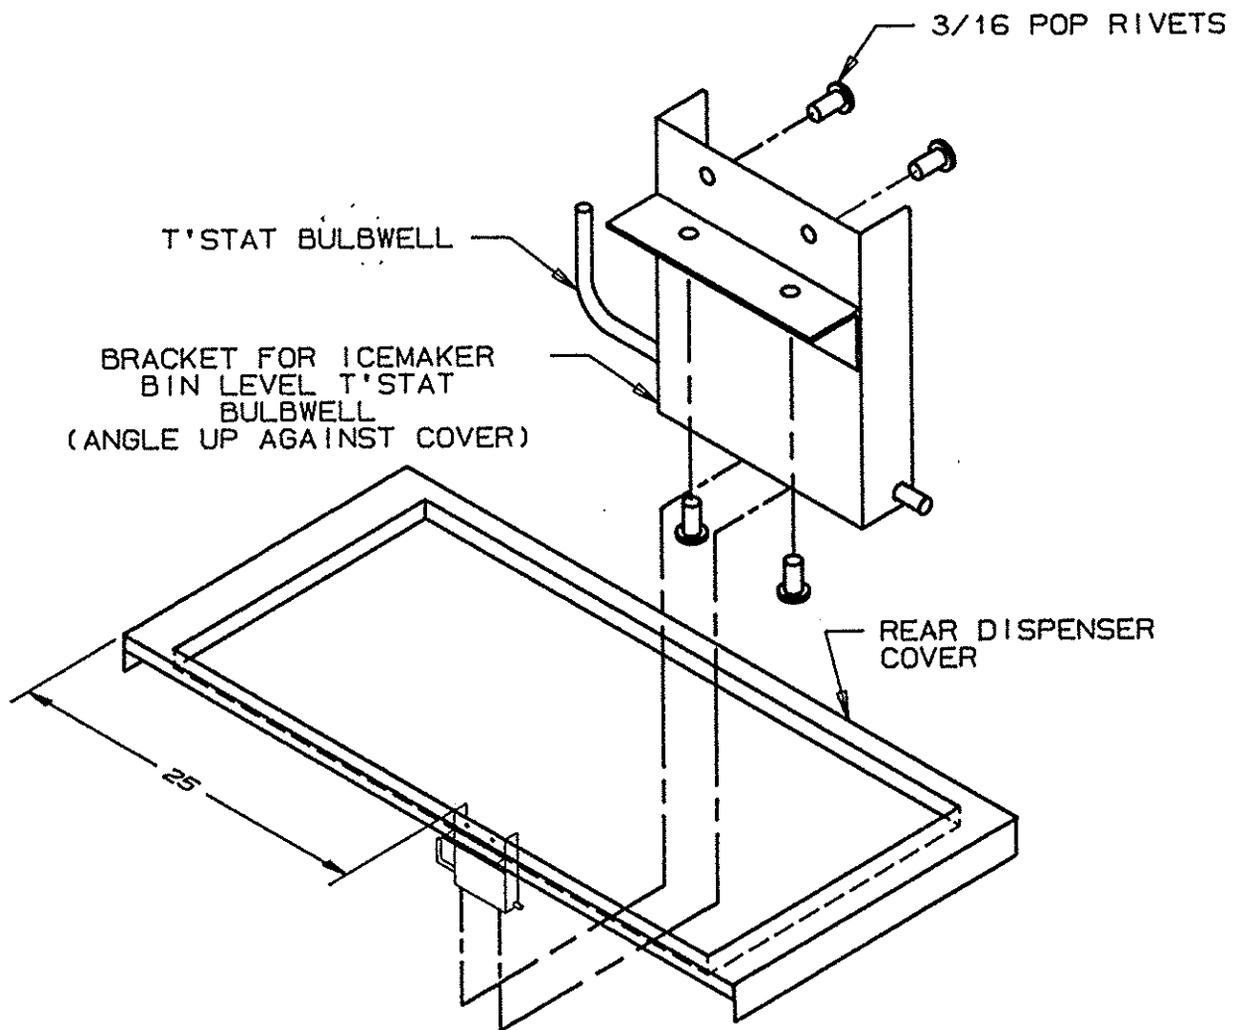

NOTE: THIS PROCEDURE BY
REMCOR FACTORY.

FIG. 1

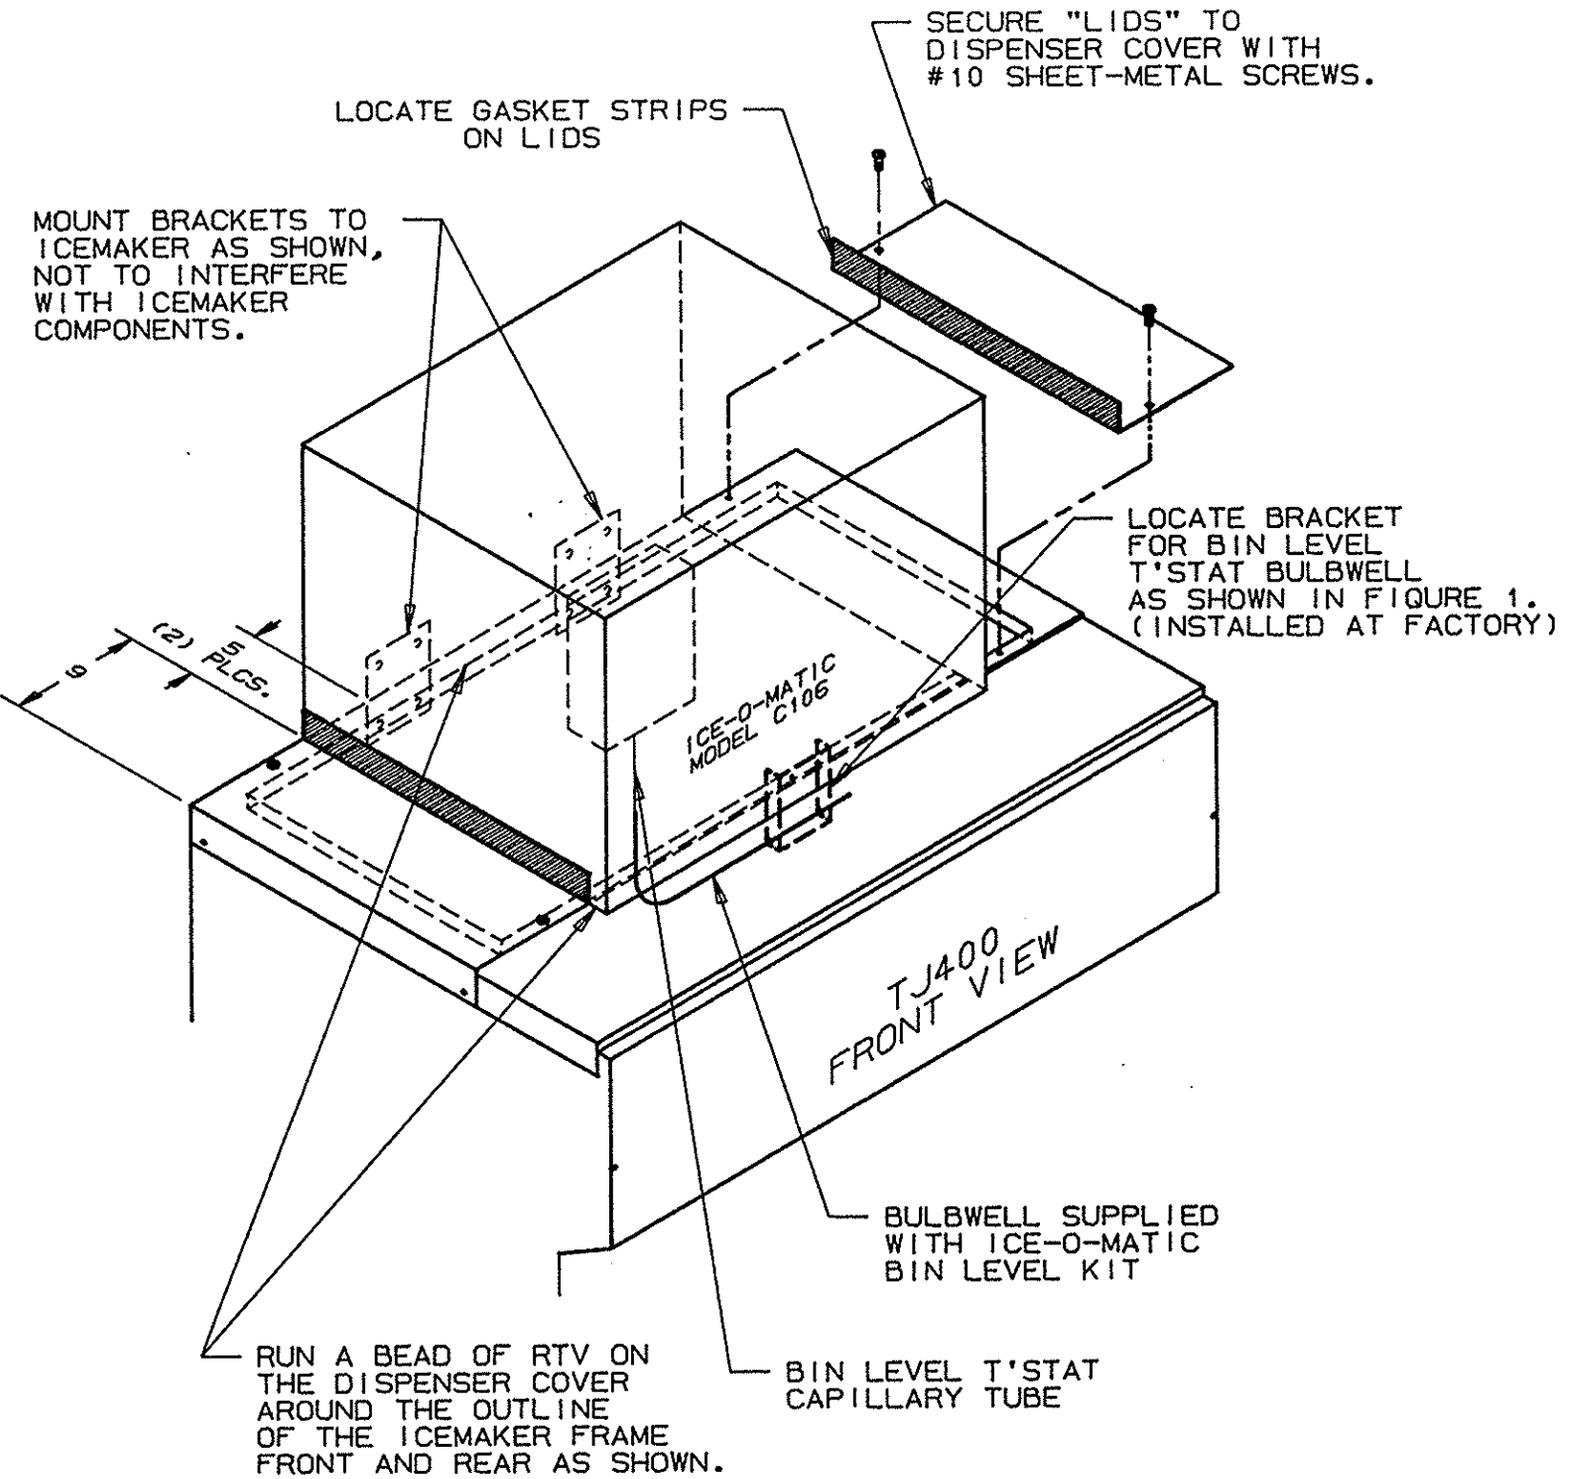

IMPORTANT:

FOLLOW ICE-O-MATIC BIN LEVEL KIT INSTRUCTIONS FOR INSTALLING BIN LEVEL THERMOSTAT.

FIG. 2