

KIT #2080
INSTALLATION INSTRUCTIONS

Important: Ice-O-Matic's bin level kit for REMCOR® Model TJ400 Dispenser is required for this Kit.


Refer to Figure 1 and the following procedure for installing Ice-O-Matic Series C-20, C-40 and C-61 Cubers on REMCOR® Model TJ400 Dispenser:

- 1) Install the mounting bracket for the bin level thermostat bulbwell.
- 2) Seal icemaker to top of dispenser as follows:
 - a) Run a bead of RTV on the dispenser cover around the outline of the icemaker frame (icemaker front panel removed) as shown in Figure 1.
 - b) Set icemaker onto cover.
 - c) Wipe excess RTV away immediately.
- 3) Install adhesive backed gasket strip on dispenser cover.
- 4) Follow Ice-O-Matic's instructions in their bin level kit for installing the bin level thermostat. Install the thermostat bulbwell into the mounting bracket of Step 1, and insert the thermostat capillary tube.
- 5) Secure icemaker to dispenser with mounting brackets as shown. Drill holes and install #10 sheet metal screws into icemaker cabinet and dispenser cover using brackets as templates.
- 6) Follow Ice-O-Matic's instructions to complete the installation of the icemaker.

KIT 2080

ICE-O-MATIC C20,40 & 61 / REMCOR TJ400

FIG. 1

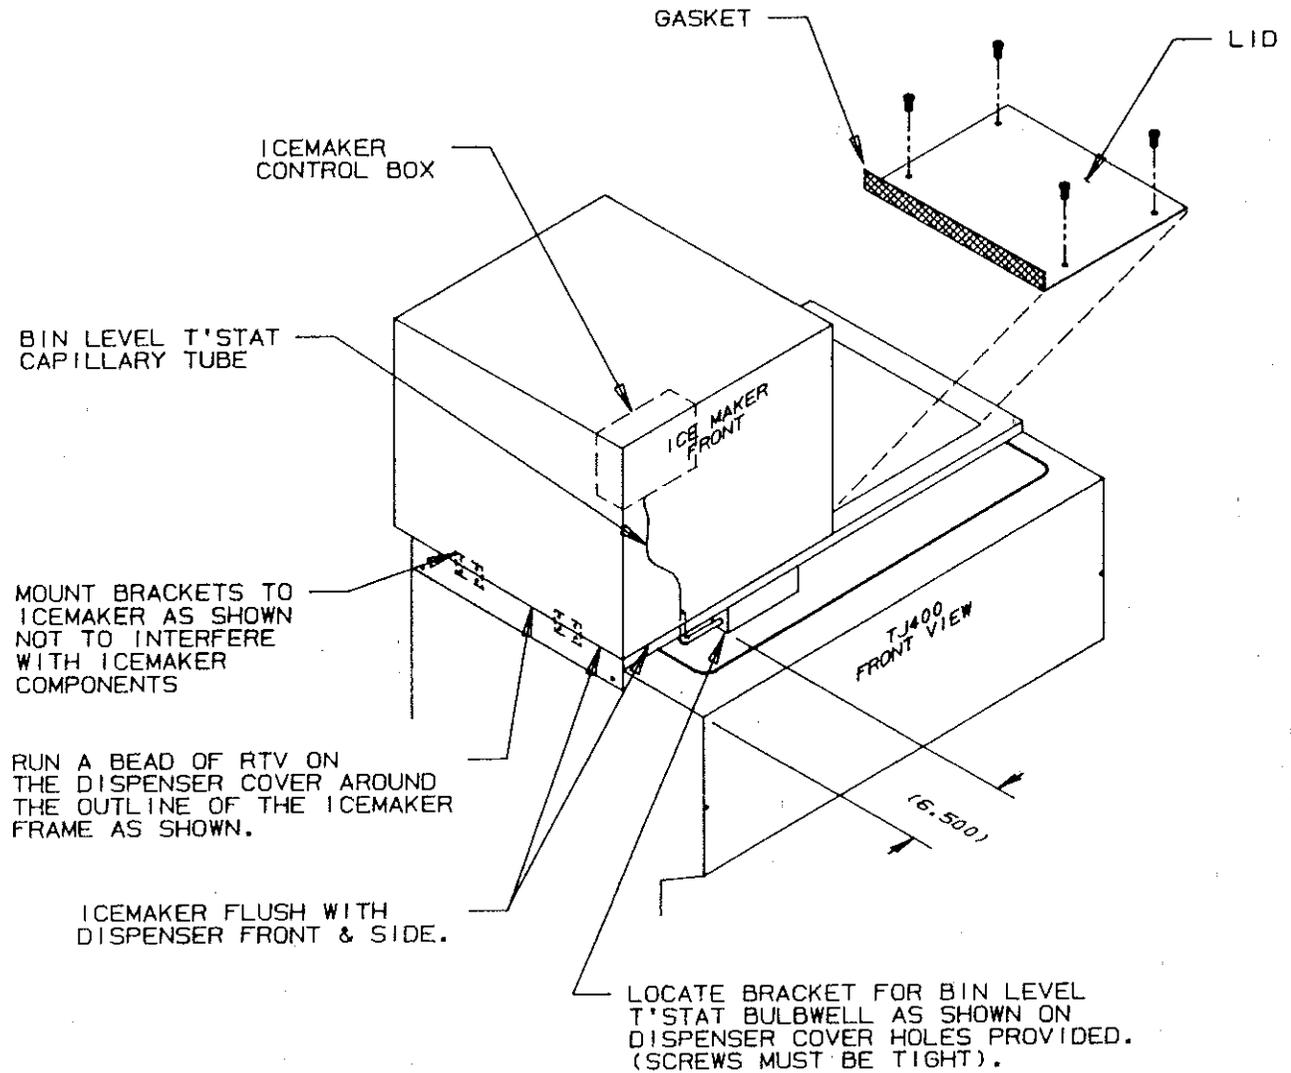

NOTE:

- 1) FRONT PANEL OF ICEMAKER REMOVED FOR THIS INSTALLATION.
- 2) REMOVABLE LID OF DISPENSER SHOWN REMOVED FOR INSTALLATION.