


Kit Number 2254 Installation Instructions

Important: Ice-O-Matic's Bin Level Kit Number 1051020-02 for REMCOR® Model TJ400 Dispenser is required for the Kit.

Refer to Figure 1 and the following procedure for installing Ice-O-Matic Series C136 cubers on REMCOR® Model TJ400 Dispenser:

- 1) Thermostat bulbwell/mounting bracket must be installed by REMCOR® factory. Figure 2.
- 2) Seal icemaker to top of dispenser as follows:
 - a) Run a bead of RTV on the dispenser cover around the outline of the icemaker frame (icemaker front panel removed), as shown in Figure 1.
 - b) Set icemaker onto cover.
 - c) Wipe excess RTV away immediately.
- 3) Follow Ice-O-Matic's instructions in the Bin Level Kit for installing the Bin Level Thermostat. Install the thermostat capillary tube into the bulbwell.
- 4) Secure icemaker to dispenser with mounting brackets provided. Drilling must not interfere with icemaker components.
- 5) Follow Ice-O-Matic's instructions to complete the installation of the icemaker.

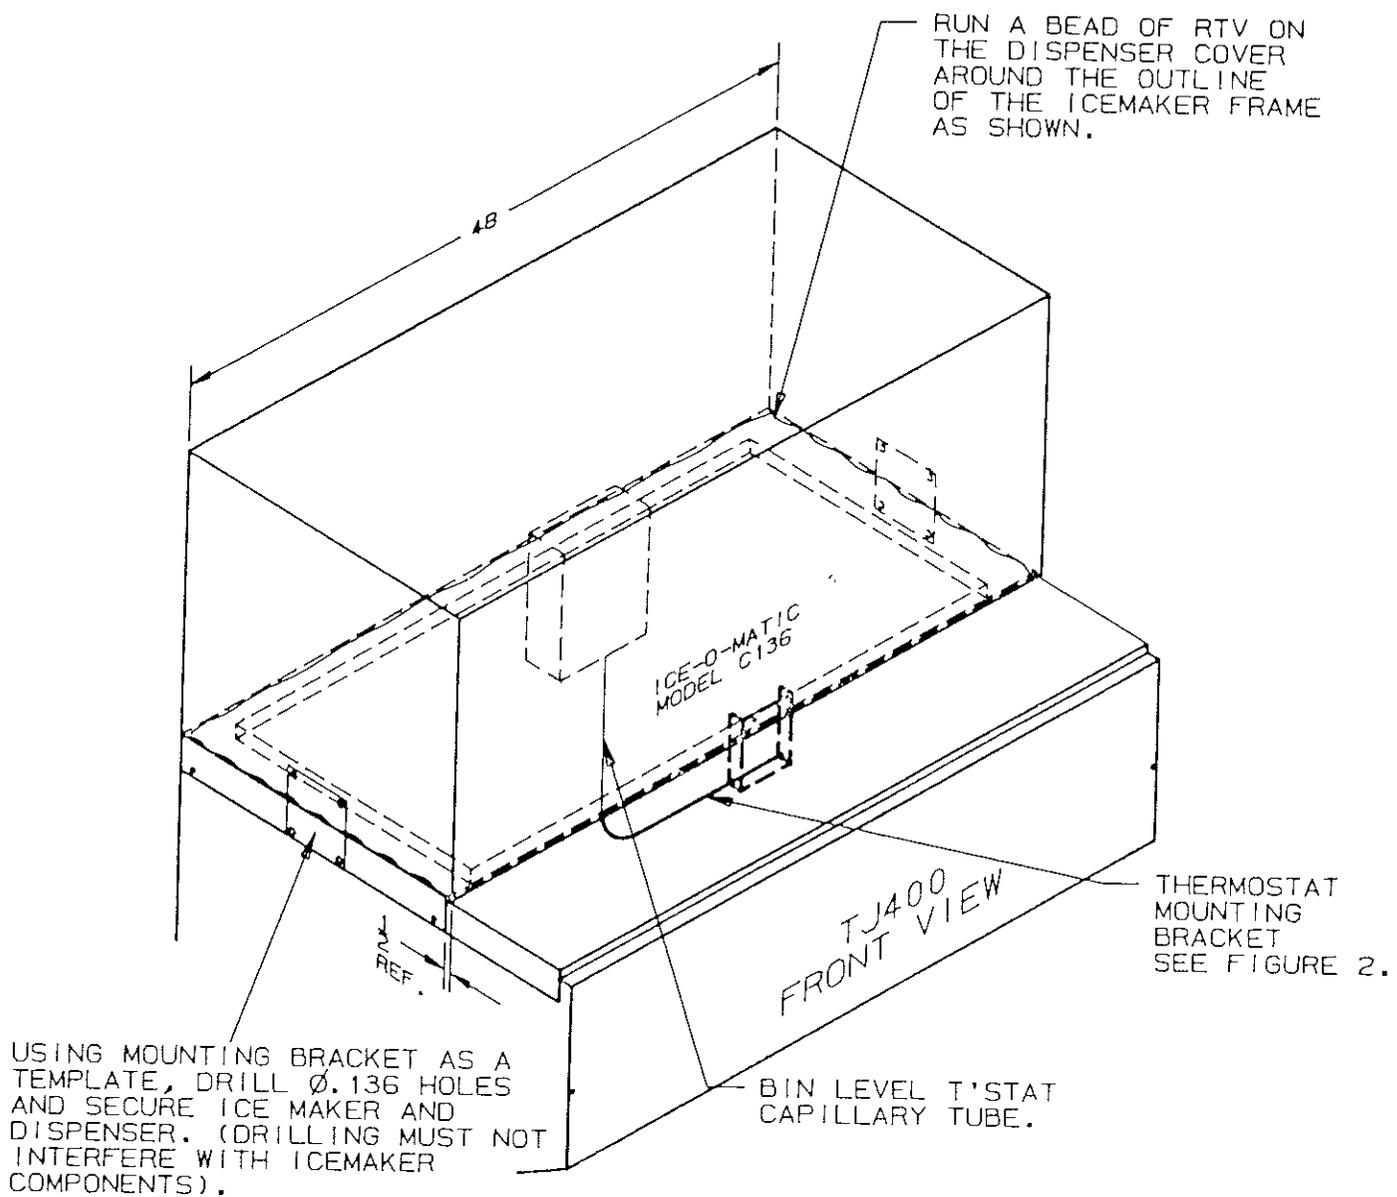


USING MOUNTING BRACKET AS A TEMPLATE, DRILL Ø.136 HOLES AND SECURE ICE MAKER AND DISPENSER. (DRILLING MUST NOT INTERFERE WITH ICEMAKER COMPONENTS).

IMPORTANT

FOLLOW ICE-O-MATIC BIN LEVEL KIT INSTRUCTIONS FOR INSTALLING BIN LEVEL THERMOSTAT.

FIG 2

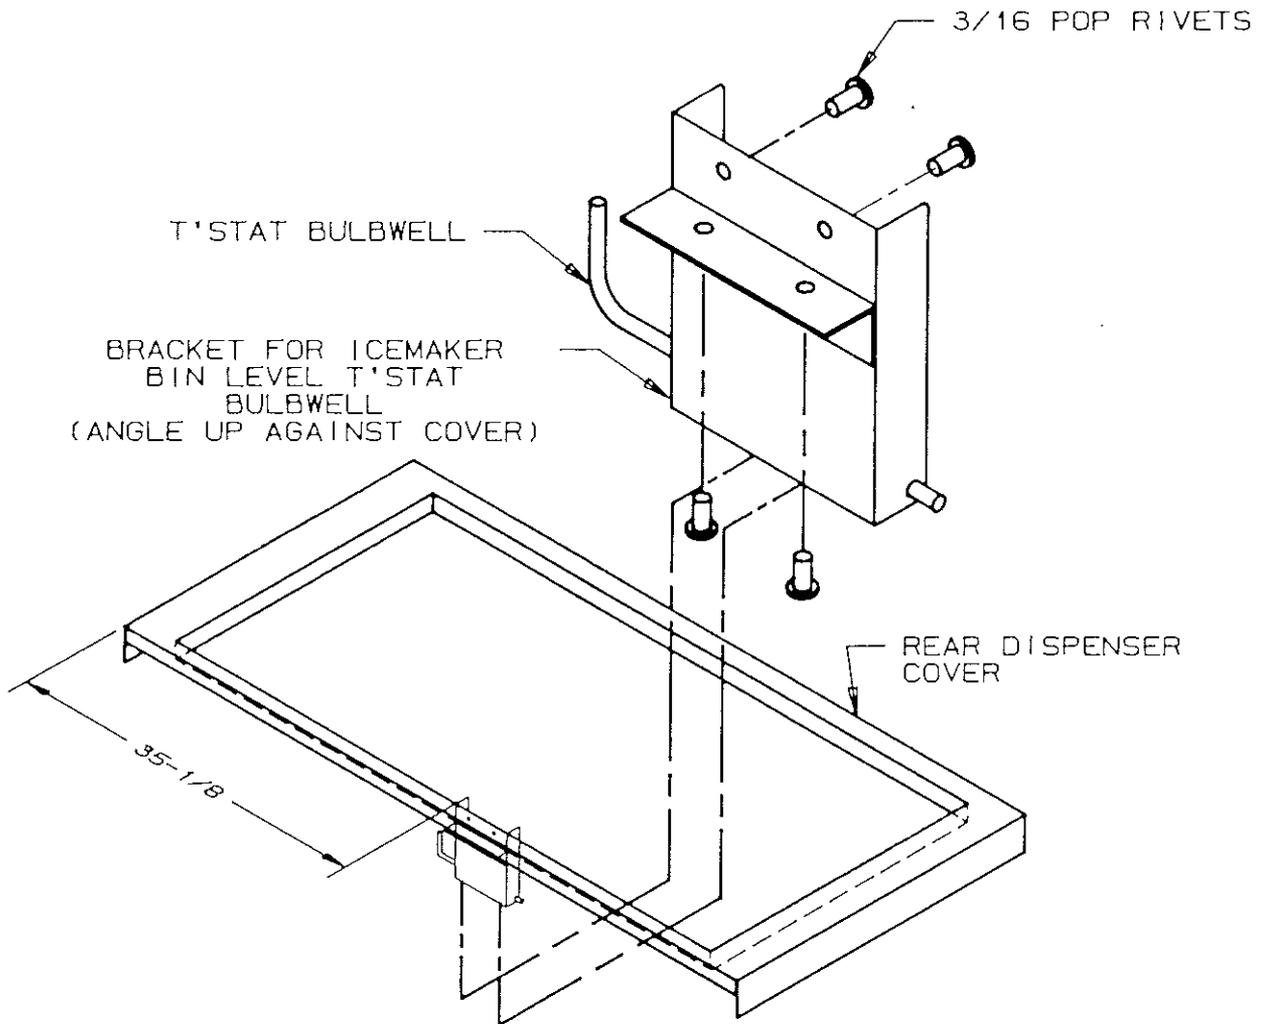

NOTE : THIS PROCEDURE BY
REMCOR FACTORY.

FIG. 3