

## Kit 2255

### Installation Instructions

**Important:** Ice-O-Matic's bin level kit for REMCOR® Model TJ250 Dispenser is required for this.


For installing Ice-O-Matic Series C106 Cubers on REMCOR® Model TJ250 Dispensers.

1. Seal icemaker to top of dispenser as follows:
  - a) Run a bead of RTV on the dispenser cover around the outline of the icemaker frame (icemaker front panel removed) as shown in Figure 1.
  - b) Set icemaker onto cover.
  - c) Wipe excess RTV away immediately.
2. Follow Ice-O-Matic's instructions in their bin level kit for installing the bin level thermostat and routing the capillary tube into the storage hopper. Locate the mounting holes for the clamps that secure the brass bulb-well to the hopper wall as shown in Figure 2.
3. Secure icemaker to dispenser with mounting brackets provided as shown in Figure 1. Drill holes and install sheet metal screws provided into icemaker cabinet and dispenser cover. Screws must not interfere with ice maker components.
4. Follow Ice-O-Matic's instructions to complete the installation of the icemaker.

FIG. 1

INSTALLATION DETAILS

- NOTE
- 1-FRONT LID OF DISPENSER SHOWN REMOVED FOR INSTALLATION.
  - 2-FRONT PANEL OF ICEMAKER REMOVED FOR THIS INSTALLATION.

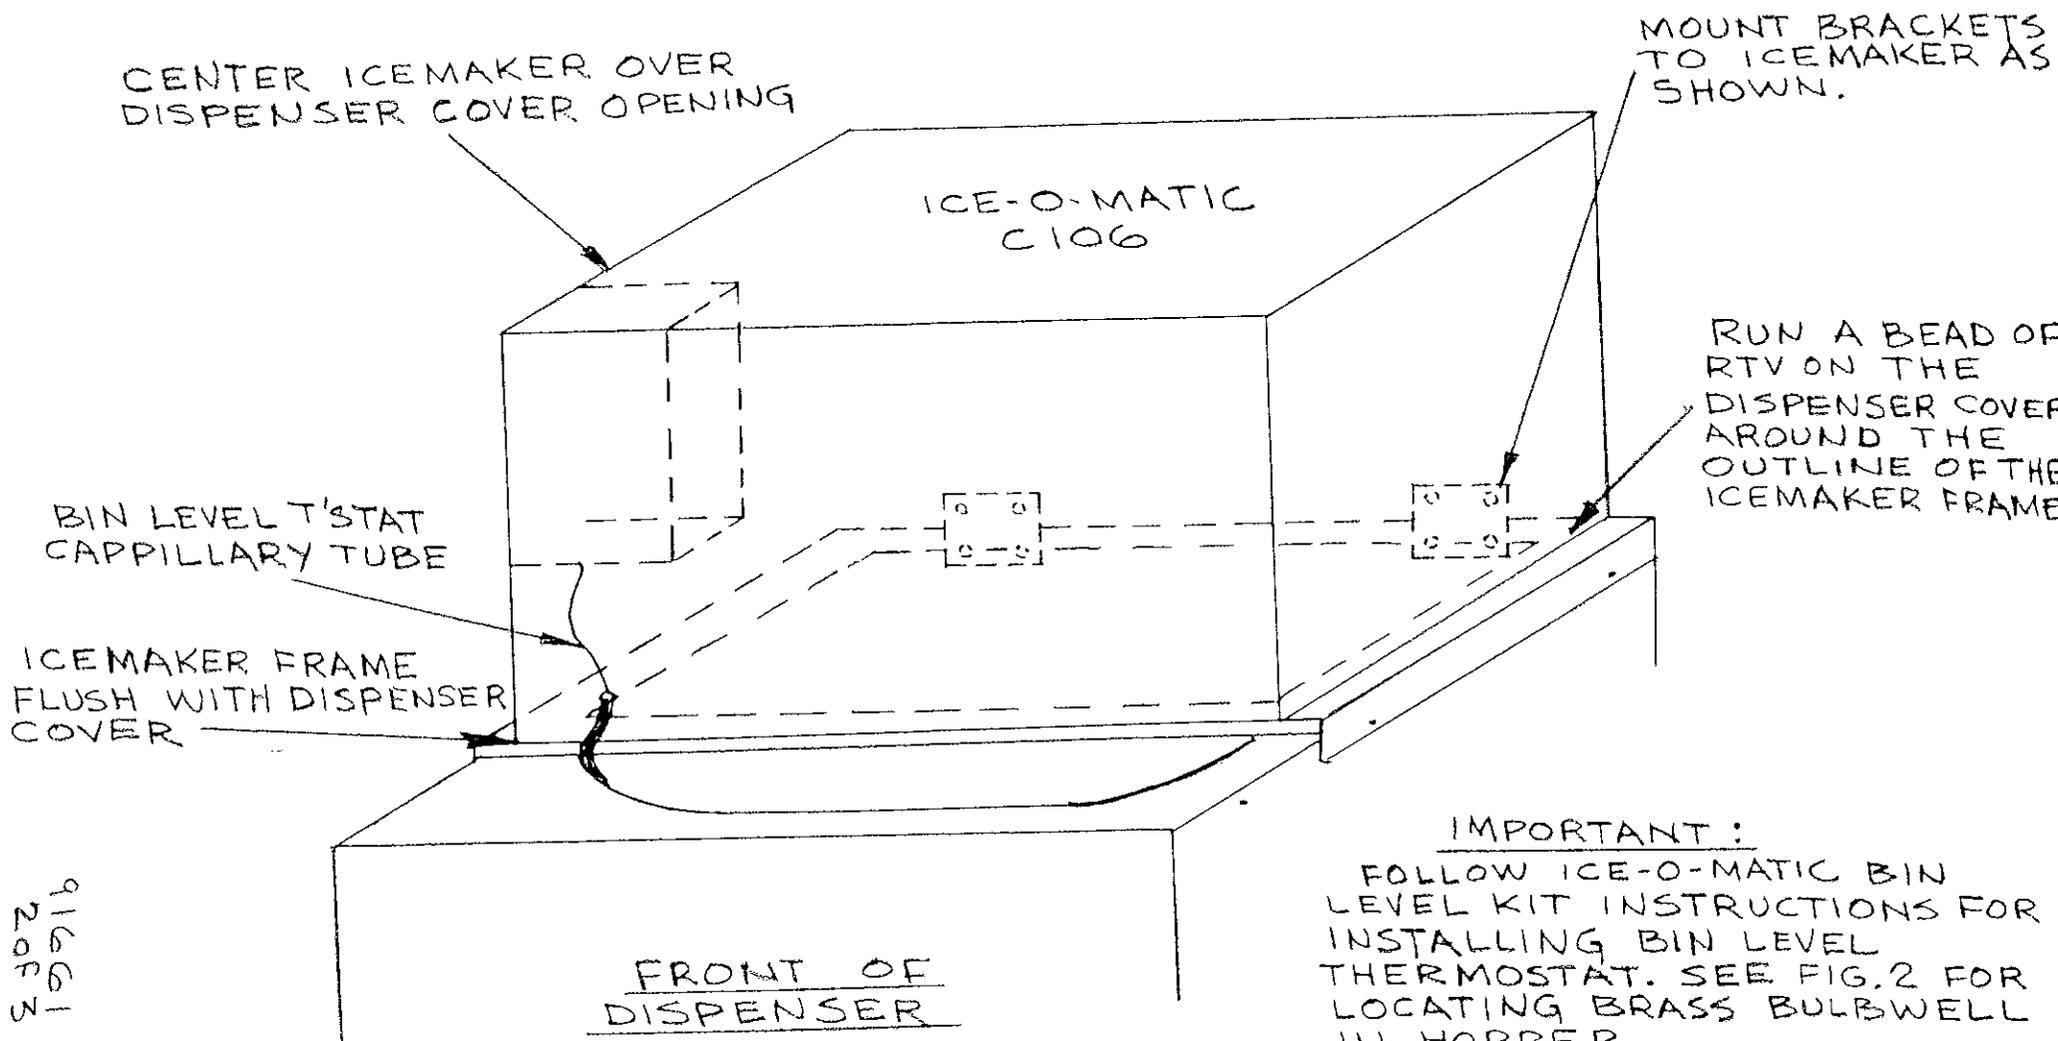

91661  
2063

FIG. 2  
 LOCATING ICEMAKER BIN LEVEL T'STAT  
 CAPILLARY TUBE (FRONT DISPENSER LID REMOVED)

