

KIT NUMBER 2257

Installation Instructions
Scotsman CMS 1002 Series Icemaker/REMCOR® TJ400 Dispenser

Use Figure 1 as a guide for the following installation procedure:

- 1) Locate the outline of the icemaker base on the dispenser cover. Run a bead of RTV along this outline (front and rear) and set the icemaker on the dispenser. Wipe away excess RTV.
- 2) Install the adhesive-backed gasket strips on the two (2) lid flanges.
- 3) Locate the lids on the dispenser cover and drill mounting holes into the cover.
- 4) Locate and drill holes into the dispenser rear cover and icemaker cabinet for mounting the rear icemaker brackets. Drilling must not interfere with icemaker components.
- 5) Follow the manufacturers instructions to complete the installation of the icemaker.

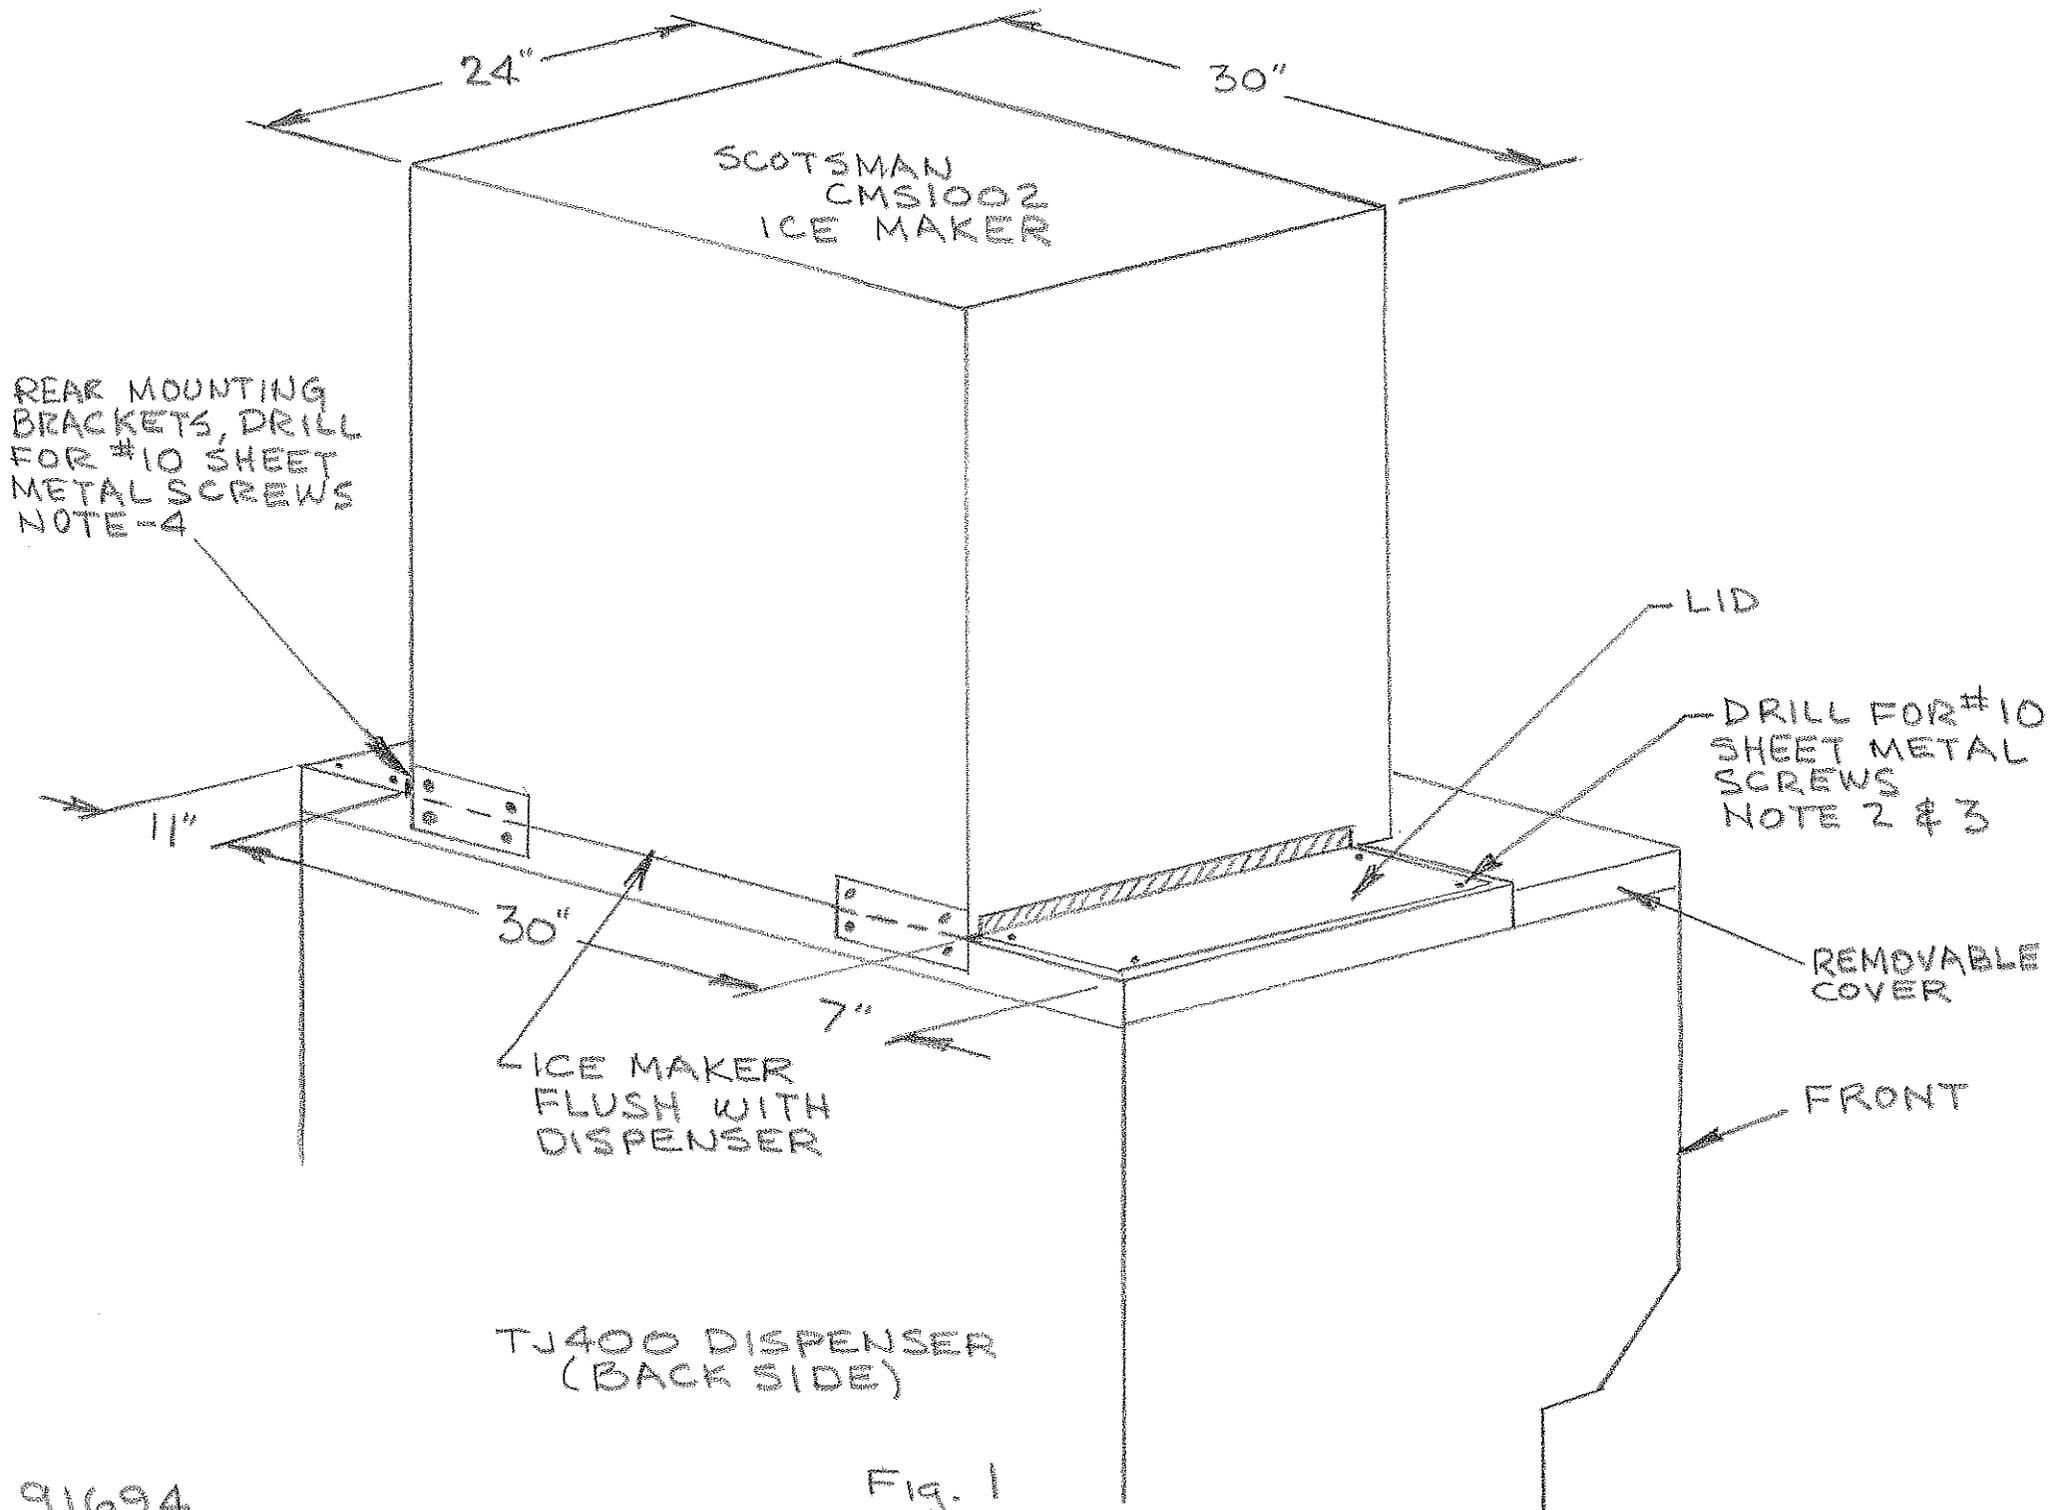


Fig. 1