

# REMCOR®

---

Kit No. 2270

## Installation Instructions


**Important:** Ice-O-Matic's bin level kit for REMCOR® TJ300 Dispenser is required for this kit.

Refer to Figure 1 and the following procedure for installing Ice-O-Matic Series C-20, C-40 and C-61 cubers on REMCOR® Model TJ300 Dispenser.

1. Thermostat Bulbwell/mounting bracket must be installed by REMCOR® factory. Figure 2.
2. Seal icemaker to top of dispenser as follows:
  - a. Run a bead of RTV on the dispenser cover around the outline of the icemaker frame (icemaker front panel removed) as shown in Figure 1.
  - b. Set icemaker onto cover.
  - c. Wipe excess RTV away immediately.
3. Install adhesive backed gasket strip on dispenser cover.
4. Follow Ice-O-Matic's instructions in their bin level kit for installing the bin level thermostat. Insert the thermostat capillary tube into the bulbwell. Figure 1.
5. Secure icemaker to dispenser with mounting brackets provided. Drilling must not interfere with icemaker components.
6. Follow Ice-O-Matic's instructions to complete the installation of the icemaker.



# TJ300/ICE-O-MATIC C-20-40-61

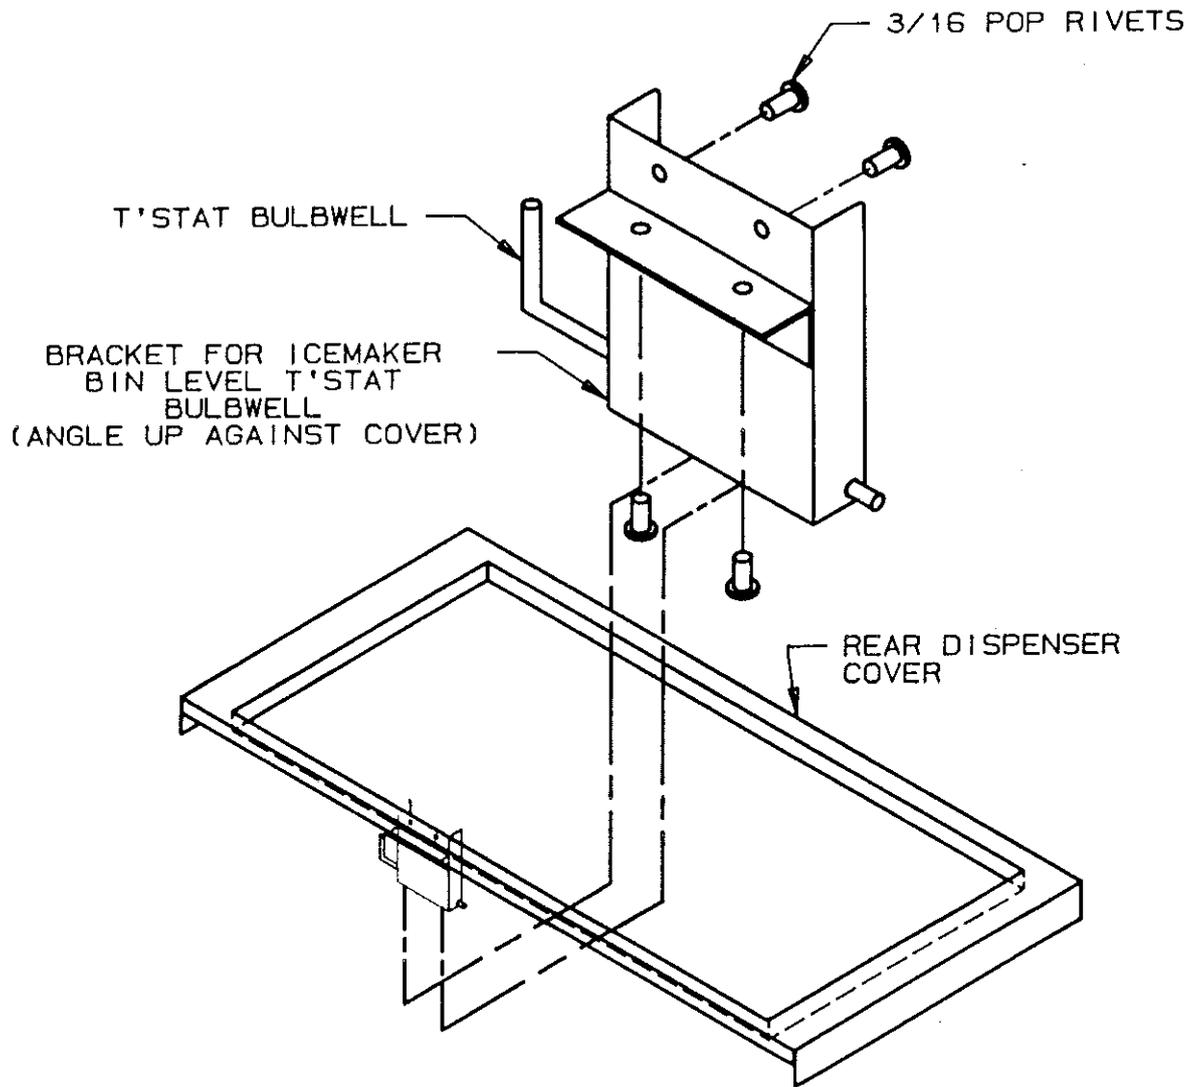

NOTE: THIS PROCEDURE BY  
REMCOR FACTORY.

FIG. 2