


**INSTRUCTIONS FOR INSTALLING
PLASTIC GUARDS KIT (P/N 335993-000)
on
COMPACT HORIZONTAL VENDER CABINET DOOR HINGES**

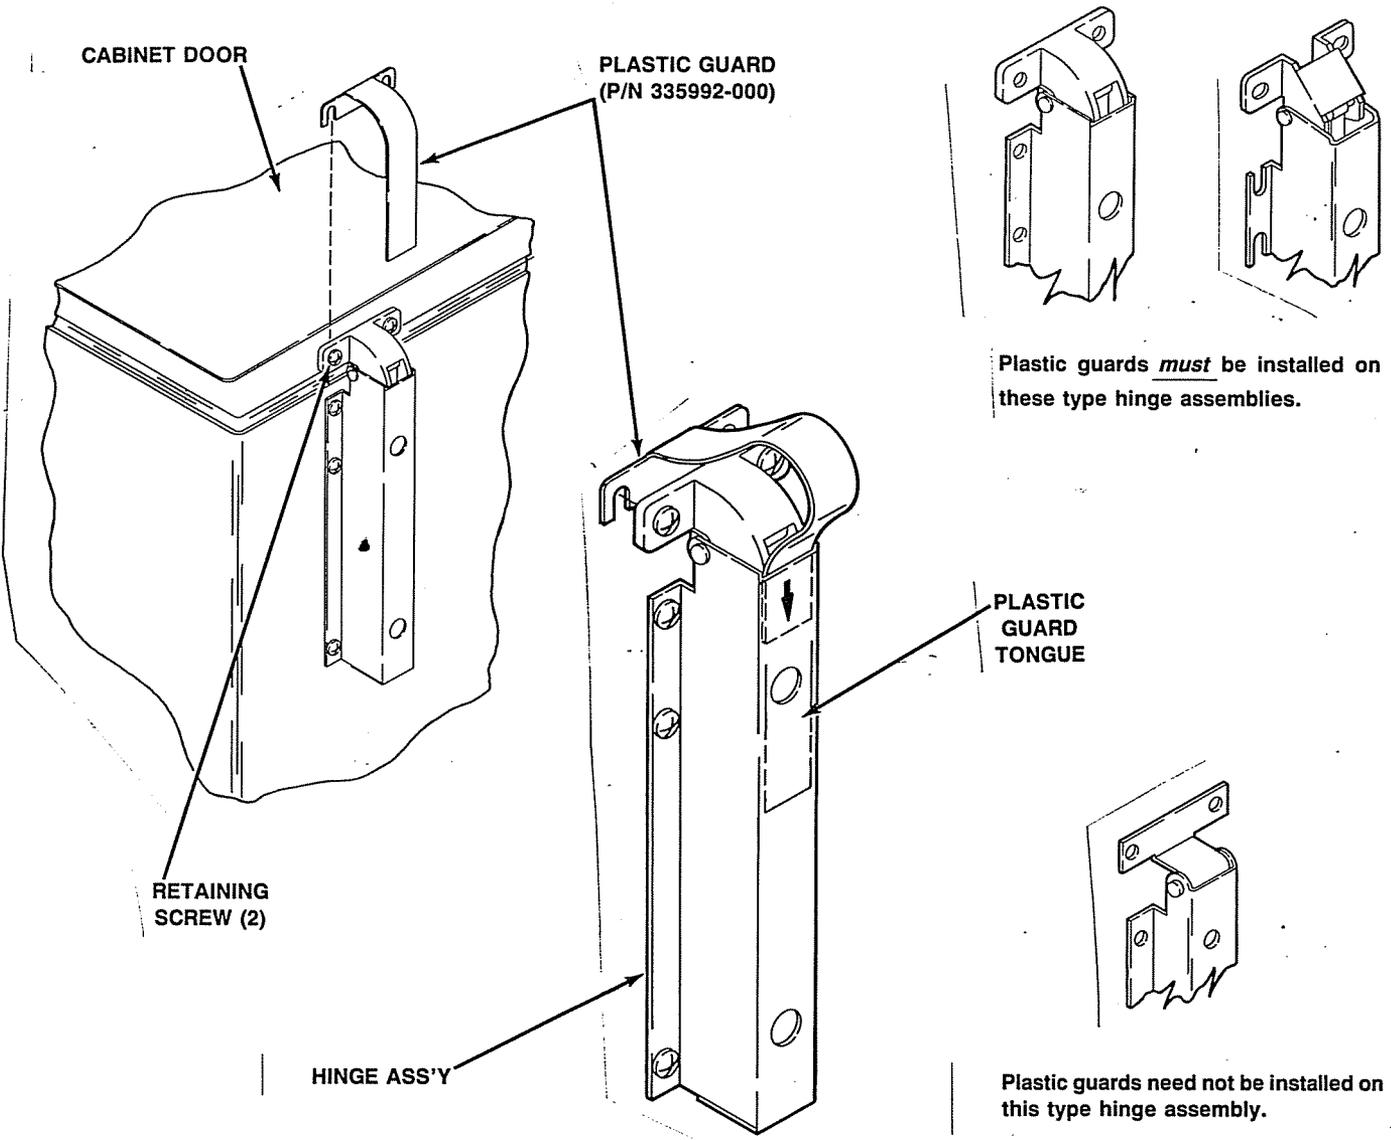

1. Raise cabinet door to open (vertical) position.
2. Loosen (do not remove) two screws securing hinge to cabinet door.
3. Lift cabinet door away from hinge, then install plastic guard on hinge as shown in illustration between hinge and door.
4. Tighten two screws securing hinge and guard to cabinet door.
5. Repeat steps 2 through 5 to install plastic guard on other cabinet door hinge.
6. Close cabinet door, then insert plastic guards tabs in hinges as shown in illustration. **MAKE SURE PLASTIC GUARD TONGUE ARE PUSHED DOWN INTO HINGES AS FAR AS THEY WILL GO.**